

Service Manual

DVD Player

Supplement

**DVD-A100U/CA, DVD-A350EB/EC, DVD-A350A,
DVD-A330EN/A130EN, DVD-A330MU/A130MU,
DVD-A105U, DVD-A150EB/EC, DVD-A310U/CA/A110U/CA,
DVD-L10D, DVD-L10EB/EC, DVD-L10EN/P10EN,
DVD-L10MU/P10MU, DVD-P10D, DVD-A350EU,
DVD-A450EN, DVD-A110PM**

Please file and use this supplement manual together with the service manual for Model No. DVD-A100U/CA, DVD-A350EB/EC, DVD-A350A, DVD-A330EN/A130EN, DVD-A330MU/A130MU, DVD-A105U, DVD-A150EB/EC, DVD-A310U/CA/A110U/CA, DVD-L10D, DVD-L10EB/EC, DVD-L10EN/P10EN, DVD-L10MU/P10MU, DVD-P10D, DVD-A350EU, DVD-A450EN, DVD-A110PM, ODSD961101C1, ODSD971201C2, ODSD971202C3, ODSD971203C3, ODSD971204C3, ODSD980202C1, ODSD980202C2, ODSD980301C1, ODSD980401C1, ODSD980402C2, ODSD980403C3, ODSD980502C3, ODSD980601C1, ODSD980603C2, ODSD980901C3, ODSD980903C3.

Interchangeability Code See the I/C column on the following Part Number list.

A	Parts	Set Production	B	Parts	Set Production	C	Parts	Set Production	D	Parts	Set Production	E	Addition
	Original	Early		Original	Early		Original	Early		Original	Early	F	Deletion
	New	Late		New	Late		New	Late		New	Late	G	Other

Subject 1: Addition of missing Parts Number

Parts Number

Ref No.	Original Parts No.	New Part No.	Part Name & Descriptions	I/C	Remarks
27 (1)	—	VYP6304	FRONT PANEL	G	DVD-A100U/CA

Subject 2: Change of MAIN C.B.A.

Parts Number

Ref No.	Original Parts No.	New Part No.	Part Name & Descriptions	I/C	Remarks
■	VEP96512B	VEP96512AE	MAIN C.B.A.	C	DVD-A110U/CA

Subject 3: Change of Parts Number

Parts Number

Ref No.	Original Parts No.	New Part No.	Part Name & Descriptions	I/C	Remarks
IC28205	T74VHC221AFT	TVHC221AFTEL	IC	A	DVD-L10EB/EC

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic®


© 1998 Matsushita Electric Industrial Co., Ltd.
All rights reserved. Unauthorized copying and distribution is a violation of law.

Subject 4: Improvement of Video Beat

Parts Number

Ref No.	Original Parts No.	New Part No.	Part Name & Descriptions	I/C	Remarks
C21069	—	RCE1CSA330CA	E.CAPACITOR CH 16V 33U	E	DVD-L10D, DVD-L10EB/EC DVD-L10EN/P10EN, DVD-L10MU/P10MU

● POWER SUPPLY SECTION (MAIN C.B.A. <1/11>) SCHEMATIC DIAGRAM

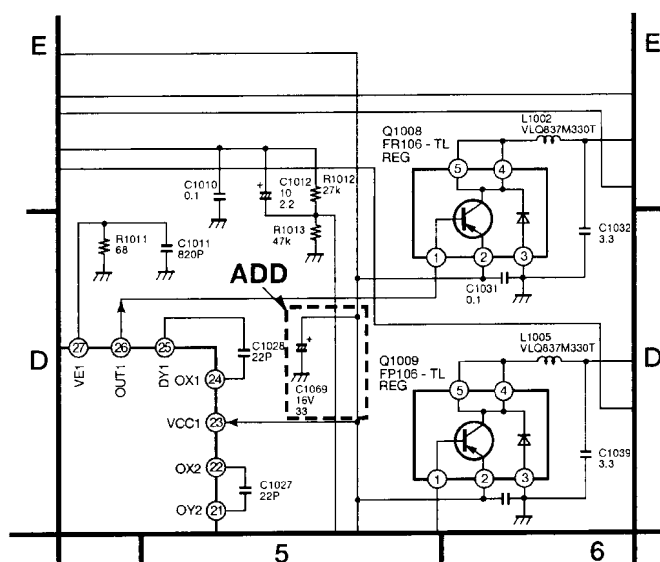

Subject 5: Correction of Optical Digital Audio Cable

Parts Number

Ref No.	Original Parts No.	New Part No.	Part Name & Descriptions	I/C	Remarks
110 (3)	VJA1081	—	OPTICAL DIGITAL AUDIO CABLE	F	DVD-P10D

Subject 6: Correction of Parts Number

Parts Number


Ref No.	Original Parts No.	New Part No.	Part Name & Descriptions	I/C	Remarks
61 (3)	VXK1363	VXK1402	TRAVERSE UNIT	G	DVD-A450EN
87 (4)	VED0378	VED0378Z	OPTICAL PICK-UP UNIT	G	DVD-A450EN

Subject 7: Correction of Parts Number (D2 Model table SERIES FEP and ADSC and Servo Section (MAIN C.B.A.) SCHEMATIC DIAGRAMS/D-18)

Parts Number

Ref No.	Mistake	Correction	Remarks
TC2021 (up)	TC2021 (up)	TC2022	
TC2021 (down)	TC2021 (down)	TC2012	

Subject 8: Change of Lubrication Information (DVD-L10, P10 SERIES)

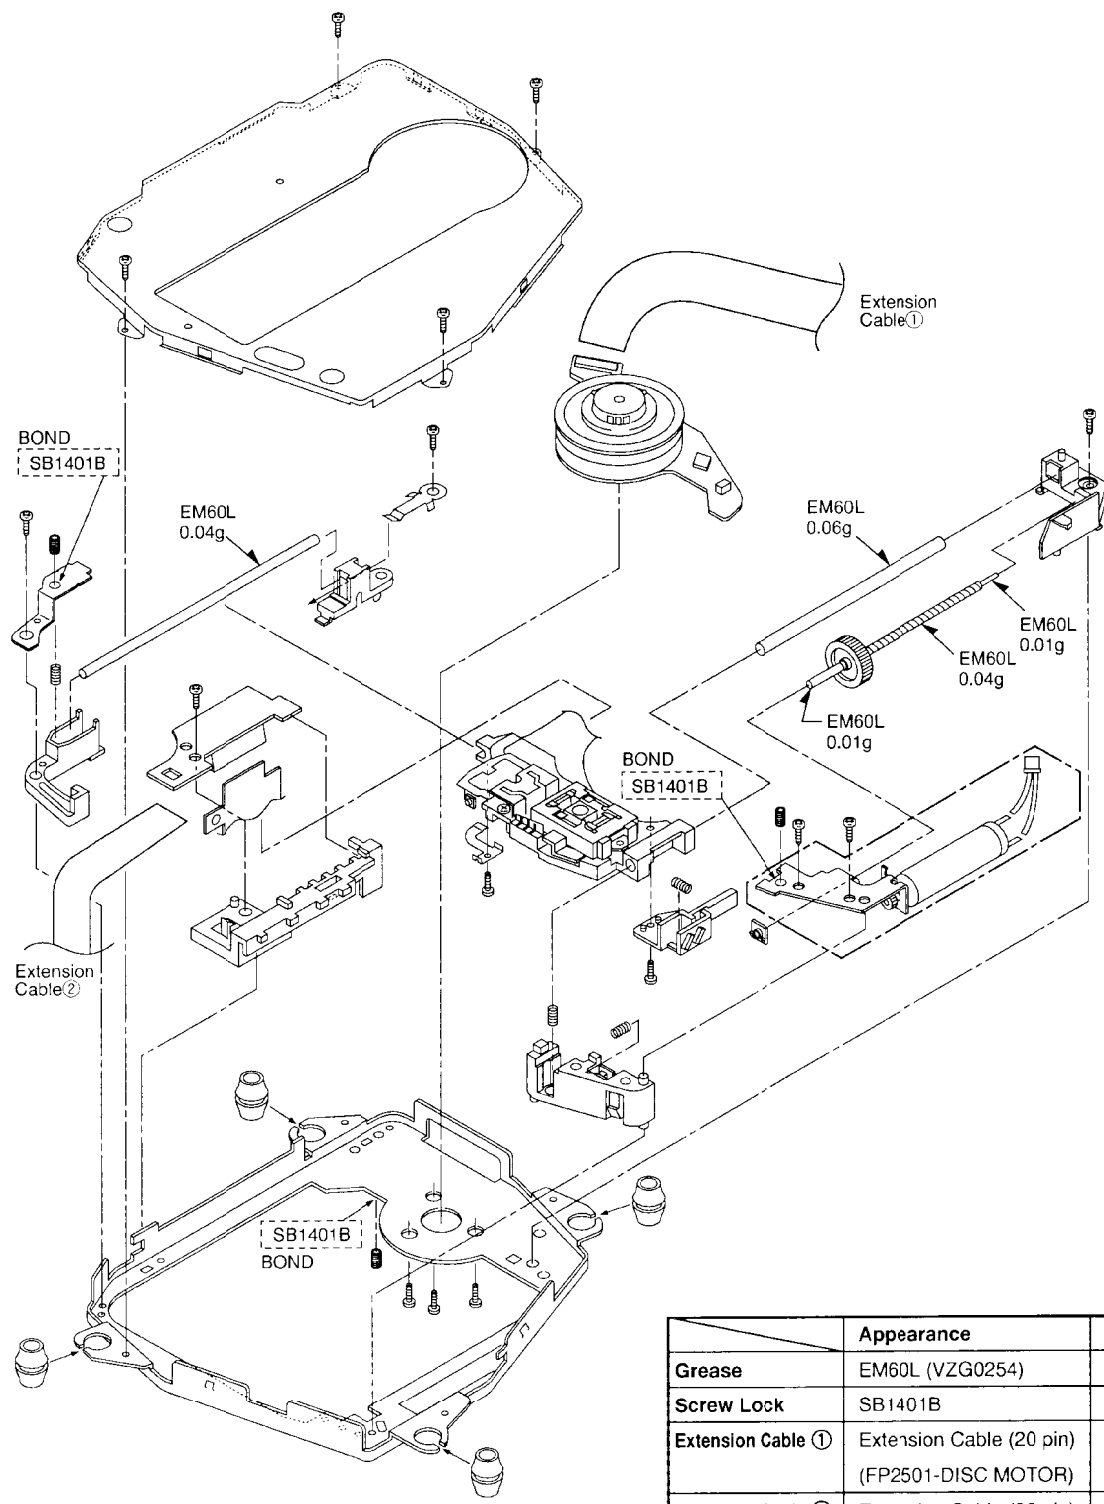

	Appearance	Part No
Grease	EM60L (VZG0254)	JGS0092
Screw Lock	SB1401B	RZZ0L01
Extension Cable ①	Extension Cable (20 pin) (FP2501-DISC MOTOR)	JGS0096
Extension Cable ②	Extension Cable (30 pin) (FP5201-INTERFACE C.B.A.)	JGS0097
Test Disc	DVD Test Disc	DVDT-S15 (DVDT-S01)

△WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

INTRODUCTION

This service manual contains technical information which will allow service personnels to understand and service this model.

Section 1 presents you with some general information of features and controls, enabling you to become familiar with each function.

Section 2 contributes to your mechanical and electrical adjustment as well disassembly and replacement procedures.

Section 3 contains schematic diagrams which give you detailed information such as waveforms, voltage data, function e.t.c...

Section 4 contains exploded views and parts list.

Please place orders using the parts list and not the drawing reference numbers.

If the circuit is changed or modified, this information will be followed by supplementary service manual to be filed with original service manual.

CONTENTS

Safety Precautions	1
Prevention of ESD to ES Devices	1
Precaution of Laser Diode	2
Handling Precautions for Traverse Deck	2
Self-Diagnosis Function for Service Number Display	3
Service Information	4

Section 1

GENERAL DESCRIPTION

1. Operating Instructions	1-1
---------------------------------	-----

Section 2

ADJUSTMENT PROCEDURES

How to Remove the Disc on the Tray in Trouble	2-1
Disassembly, Reassembly, Replacement and Adjustment procedures	2-2
1. Disassembling and Reassembling the Casing Parts	2-2
1-1. Removing the Top Cover	2-2
1-2. Removing the Front Panel	2-2
1-3. Reassembling the Casing Parts	2-3
2. Disassembling and Reassembling the Loading Base	2-4
2-1. Removal of the Loading Base	2-4
2-2. Disassembling the Clamp Support Plate and the Clamper	2-4
2-3. Removing the Loading Tray	2-4
2-4. Removing the Traverse Unit	2-5
2-5. Removing the Loading Section Parts	2-5
2-6. Assembling the Loading Section Parts	2-6
2-7. Assembling the Traverse Unit	2-6
2-8. Attaching the Loading Tray	2-6
2-9. Attaching the Clamp Support Plate	2-6
3. Replacing the Main Parts of the Traverse Unit	2-7
3-1. Replacing the Laser Pick-up	2-8
3-2. Replacing the Traverse Motor Unit	2-8
3-3. Replacing the Disc Motor	2-8
3-4. Disc Motor Assembly/Tentative Tilt Adjustment	2-8
3-5. Others	2-8
4. Printed Circuit Board Location and Wiring Connection Diagram	2-9
4-1. Printed Circuit Board Location	2-9
4-2. Wiring Connection Diagram	2-9
5. Disassembly and Check Method of Printed Circuit Board Assembly (C.B.A.)	2-10
6. Adjustment Procedures	2-11
6-1-1. Tilt Adjustment of Disc Motor	2-11
6-2. Electrical Adjustment Procedure	2-12
6-2-1. Video Output (Luminance Signal) Adjustment	2-12
6-2-2. Video Output (Chrominance Signal) Adjustment	2-12
6-2-3. FC Correction	2-13
7. Lubrication Information	2-14

Section 3

BLOCK DIAGRAM/SCHEMATIC DIAGRAM/CIRCUIT BOARD DIAGRAM

3-1. ABBREVIATIONS	3-1
BLOCK DIAGRAMS	
3-2. Overall	3-3
3-3. Servo	3-7
3-4. Video	3-11
3-5. Audio	3-14
SCHEMATIC DIAGRAMS	
3-6. FEP and ADSC and Servo Section (MAIN C.B.A. <1/5>)	3-17
3-7. ODC and CPU Section (MAIN C.B.A. <2/5>)	3-22
3-8. Clock SYNC Section (MAIN C.B.A. <3/5>)	3-27
3-9. Audio-DAC Section (MAIN C.B.A. <4/5>)	3-30
3-10. AVDEC and Video-DAC Section (MAIN C.B.A. <5/5>)	3-33
3-11. AV Jack	3-38
3-12. Operation, Volume, HP Jack and Coaxial	3-43
3-13. AC-3	3-47
3-14. Power Supply	3-51
3-15. Interconnection	3-54
CIRCUIT BOARD DIAGRAMS	
3-16. Main C.B.A. (VEP96512F)	3-57
3-17. Power Supply C.B.A. (VEP91231D)	3-62
3-18. AV Jack C.B.A. (VEP93304N)	3-64
3-19. AC-3 C.B.A. (VEP94304K)	3-64
3-20. Operation C.B.A. (VEP96521L), Volume C.B.A. (VEP94309A), HP Jack C.B.A. (VEP94310A) and Coaxial C.B.A. (VEP94305A)	3-67
3-21. Mechanism IF C.B.A. (VEP90367A), Traverse Motor U. (VXQ0588), Loading Motor C.B.A. (VEK8001) and TIP SW U. (VEK8061)	3-69

Section 4

EXPLODED VIEWS &

REPLACEMENT PARTS LIST

4-1. Packing & Accessories Section	4-1
4-2. Casing Parts & Mechanism Section	4-2
4-3. Loading Mechanism Section	4-3
4-4. Traverse Section	4-5
4-5. Electrical Replacement Parts List	4-6

SAFETY PRECAUTIONS

GENERAL GUIDELINES

1. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
2. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
3. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.

LEAKAGE CURRENT COLD CHECK

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be between 1M Ω and 5.2M Ω . When the exposed metal does not have a return path to the chassis, the reading must be ∞ .

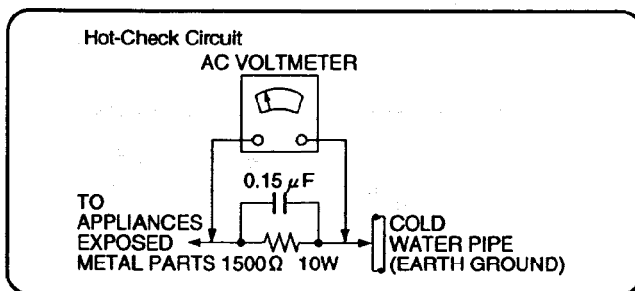


Figure 1

LEAKAGE CURRENT HOT CHECK (See Figure 1.)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a 1.5k Ω , 10 watts resistor, in parallel with a 0.15 μ F capacitors, between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 volts RMS. A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed 1/2 milliamp. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

PREVENTION OF ELECTRO STATIC DISCHARGE (ESD) TO ELECTROSTATICALLY SENSITIVE (ES) DEVICES

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by electro static discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static (ESD protected)" can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.
CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety.

These parts are marked by Δ in the schematic diagrams, Exploded Views and replacement parts list. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire, or other hazards. Do not modify the original design without permission of manufacturer.

PRECAUTION OF LASER DIODE

CAUTION:

This unit utilizes a class I laser. Invisible laser radiation is emitted from the optical pickup lens when the unit is turned on:

1. Do not look directly into the pickup lens.
2. Do not use optical instruments to look at the pickup lens.
3. Do not adjust the preset variable resistor on the optical pickup.
4. Do not disassemble the optical pickup unit.
5. If the optical pickup is replaced, use the manufactures specified replacement pickup only.
6. Use of control or adjustment or performance of procedures other than those specified herin may result in hazardous radiation exposure.


HANDLING PRECAUTIONS FOR TRAVERSE DECK

The laser diode in the optical pickup may break down due to potential difference caused by static electricity of clothes or human body.

So be careful of electrostatic break down during repair of the optical pickup.

Handling of optical pickup

1. Do not subject the optical pickup to static electricity as it is extremely sensitive to electrical shock.
2. To prevent the breakdown of the laser diode, an antistatic shorting pin is inserted into the flexible board (FPC Board).
When removing or connecting the short pin, finish the job in as short times as possible.
3. Be careful not to apply excessive stress to the flexible board (FPC Board)
4. Do not turn the variable resistor (Laser power adjustment). It has already been adjusted.

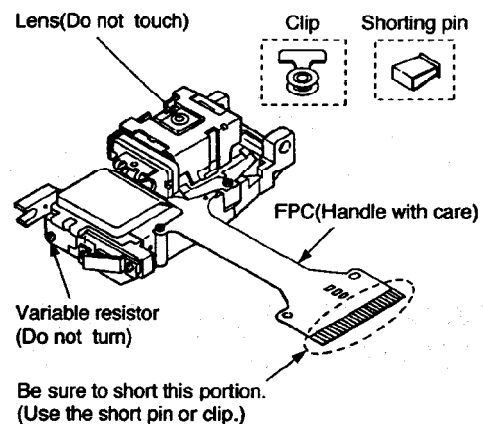


Grounding for electrostatic breakdown prevention

1. Human body grounding
Use the antistatic wrist strap to discharge the static electricity from your body.
2. Work table grounding
Put a conductive material (sheet) or steel sheet on the area where the optical pickup is placed and ground the sheet.

Caution:


The static electricity of your clothes will not be grounded through the wrist strap. So take care not to let your clothes touch the optical pickup.

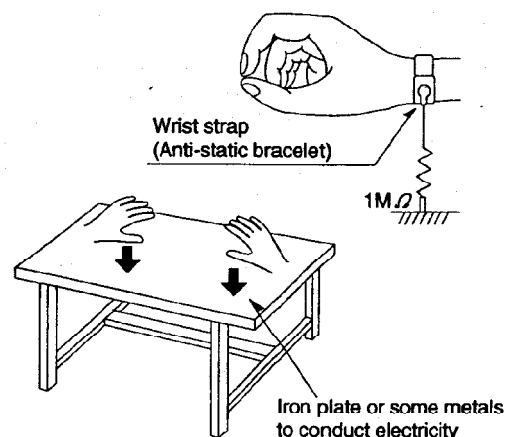

Self-Diagnosis Function for Service Number Display

This unit has a self-diagnosis function which detects a problem or malfunction within the unit and displays its corresponding service number on the display of the unit.

The Service Information Display Mode is used by the technician to help determine the source of a malfunction. To operate the Service Information Display Mode during servicing, press the [0] (remote control unit) button while pressing the OPEN/CLOSE and STILL/PAUSE buttons simultaneously. Please refer to the table shown below when a service number has appeared.

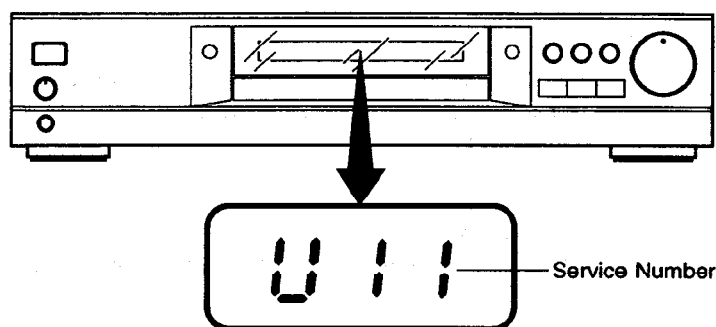


Mode	Service Number	Player State	Check Point
During Operation	U11	FOCUS TROUBLE	IC2001, IC2511, IC5201, Pick-up
	H01	TRAY LOADING TROUBLE	IC2001, IC2511, Loading motor
	H02	SPINDLE SERVO TROUBLE	Disc motor, IC2501, IC2001
	H03	TRAVERSE TROUBLE	Traverse motor, IC2511, IC2001
	H04	TRACKING SERVO TROUBLE	IC2001, IC2501, IC5201, Pick-up Disc
	H05	SEEK TROUBLE	Traverse motor, IC2511, IC2001
Service Information Display	F0**	DISC FORMAT ERROR	Disc
	F1**	DISC CODE ERROR	Disc
	F2**	DECODER LSI ERROR	IC3001, IC3201
	F3**	SDRAM ERROR	IC3051, IC6301, IC7051
	F4**	IIC BUS ERROR	IC2001, IC3201, IC4201, IC5201, IC6201, IC6312, IC7001
	F5**	DSC ERROR	IC2001
	F6**	ECC ERROR	IC7001
	F7**	MICRO PROCESSOR ERROR	IC6001, IC6201
	F8**	MICRO PROCESSOR ERROR	IC6001, IC6201

SERVICE INFORMATION

1. Lighting Confirmation Function of Display Tube

SETTING PROCEDURES

During pressing both 「STILL/PAUSE」 and 「OPEN/CLOSE」 buttons on the DVD Player, push 「9」 key of the Remote Controller and then all of the display lights, and the 「POWER」 button is pressed to release.

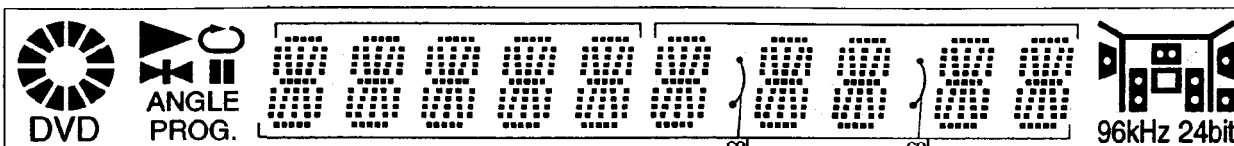

2. Initialization of the DVD Player

Make initialization of the DVD Player when replacing the Main p.c. board, Operation p.c. board and etc.

INITIALIZATION PROCEDURES

During pressing both 「STILL/PAUSE」 and 「SKIP/SEARCH ◀▶」 buttons simultaneously on the DVD Player, push 「POWER」 button on the DVD Player so that the unit is initialized (Factory shipping condition).

The letter of 「INITIALIZED」 is displayed on the screen.

[CAUTION]

When the initialization has been made, the contents of user initial setting is lost.

Therefore, before making initialization, previously memorize the contents of user Initial setting and set the initial setting again after initialization.

3. After Repair (Transport Method in Repair Service)

After repair, settle the traverse unit at elevation up position.

SETTLING PROCEDURES

1. Turn the power on.
2. Press the 「OPEN/CLOSE」 button to close the tray.
3. Turn the power off.
4. Disconnect the power plug from the power outlet.

[CAUTION]

Do not close the tray manually after disconnect the power plug from the power outlet in tray open condition.

In this case, the traverse is not settled at elevation up position (stand-by) so that you can't transport the unit.

4. In Case of Stopping Operation During Playback

When the unit stop during playback (no operation button operates, etc.), press the 「POWER」 button. After 5 seconds later the power will be turned off.

When the power is turned on again and the same state appears, the unit may be in trouble. Or, in case stopping operation when the specific disc is used, the cause of trouble may be in the disc itself.

5. Operation Lock Function in Salse Demonstration

This function is used to prevent the disc from loss in the salse demonstration.

When this function is set, it is not able to eject the disc and turn the power off.

SETTING PROCEDURES

During pressing the 「STOP」 button of the DVD Player, push the 「POWER」 button of the Remote Controller to make the Lock function operate.

During pressing the 「STOP」 button of the DVD Player, push the 「POWER」 button of the Remote Controller to Discorrect the Lock function operate.

6. Lens Cleaning

For cleaning, wipe the Pick-up softly with the new cotton cloth damped with ethyl alcohol.

Never wipe it strongly or the wrong influence will have on the glass coating of the Pick-up.

After cleaning, be sure to check no dirt or dust on the lens surface.


SECTION 1 GENERAL DESCRIPTION

1. Operating Instructions


7

Справочное руководство по органам управления

Основной аппарат

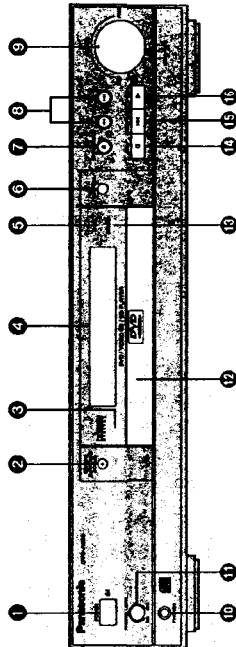

	Страница
1 Кнопка питания/готовности POWER, ON	15
2 Нажимайте для переключения аппарата из режима "выключено" в режим "готовности" или наоборот. В режиме готовности проигрыватель все еще потребляет небольшое количество электроэнергии.	15
3 Кнопка/индикатор виртуального звукового окружения VIRTUAL SURROUND SOUND	30
4 Сенсор сигнала DV	14
5 Окшко дисплея	9
6 Индикатор угла ANGLE	30
7 Кнопка прокрутки информации на дисплее	30
8 Нажмите для показа аудио информации на дисплее проигрывателя для диска, воспроизводимого в настоящее время.	15
9 Кнопка открывания/закрывания	15
10 Кнопка пропуска SKIP	16, 17
11 Челночный циферблат (SEARCH)	18, 19
12 Глаздо головных телефонов PHONES	14
13 Регулятор уровня громкости головных телефонов PHONES LEVEL	14
14 Лоток диска	15
15 Индикатор готовности STANDBY	15
16 Если проигрыватель подсоединен к сети питания переменного тока, этот индикатор высвечивается в режиме готовности и гаснет при включении проигрывателя.	17
17 Кнопка остановки STOP	18
18 Кнопка стоп-кадр/паузы STILL/PAUSE	18
19 Кнопка воспроизведения PLAY	15

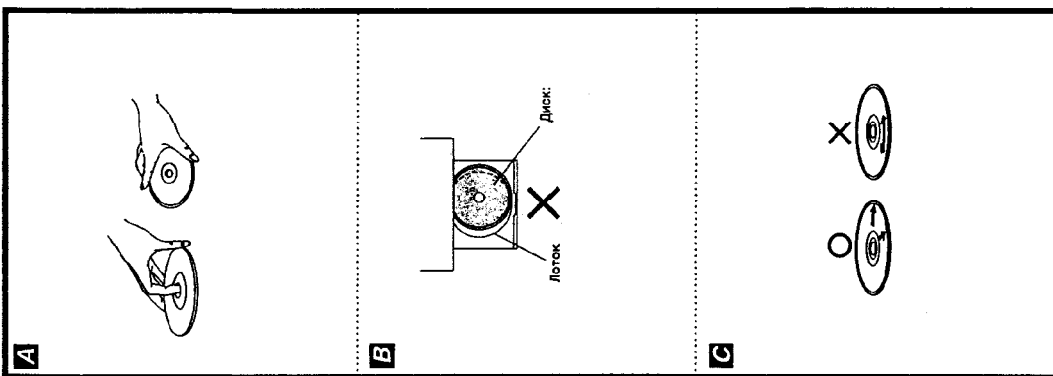

Обращение с диском и уход за ним

- Меры предосторожности при обращении
 - Держите диск за края, чтобы не испачкать его поверхность отпечатками пальцев. (A)
 - Отпечатки пальцев, грязь или царапины могут вызвать перескоки и искажения воспроизведения.
 - Не пишите ничего на стороне этикетки ширковой ручкой или другими пишущими инструментами.
 - Не используйте чистящие растворители для пластмасс, бензин, растворитель, жидкостно-антистатик или другие растворители.
 - Будьте осторожны, чтобы не уронить или не изогнуть диск.
 - Не устанавливайте на лоток диска более 1 диска.
 - Не пытайтесь закрыть лоток, когда диск установлен неправильно. (B)
 - Если диски не используются, следует хранить их в специальных футлярах.

Если поверхность загрязнилась

Осторожно протрите поверхность мягкой влажной (смоченной только в воде) тканью. При протирании диска всегда перемещайте ткань от центрального отверстия к внешнему краю. (Если Вы протираете диски круговыми движениями, возможно возникновение круговых царапин, которые могут стать причиной шума.)

Если диск внесен с холодного в теплое окружение, то на нем может сформироваться влага


Перед использованием диска сотрите эту влагу мягкой, сухой, неворсистой тканью.

Неправильное хранение дисков

- Вы можете повредить диски, если храните их в следующих местах:
 - В местах, подверженных воздействию прямых солнечных лучей
 - Во влажных или пыльных местах
 - В местах, расположенных вблизи источников тепла или отопительных приборов
- Диски, воспроизведение которых невозможно с помощью этого проигрывателя
 - DVD с локальным №, отличным от "5" или "ALL"
 - DVD-ROM
 - DVD-RDVD-RAM
 - CD-ROM
 - CDV
 - CD-G
 - Не пытайтесь воспроизводить Photo CD или CD-R.

Уход


- Перед уходом за аппаратом следует переключить питание с режима готовности и отсоединить сетевой шнур питания переменного тока.
- Протрите этот аппарат сухой мягкой тканью.
- Если поверхности сильно загрязнены, протрите их полностью смоченной в слабом мыльном растворе и полностью отжатой тканью, а затем протрите снова сухой тканью.
- Никогда не используйте спирт, бензин, растворитель, чистящую жидкость или другие химикаты. А также не используйте для удаления пыли сжатый воздух.

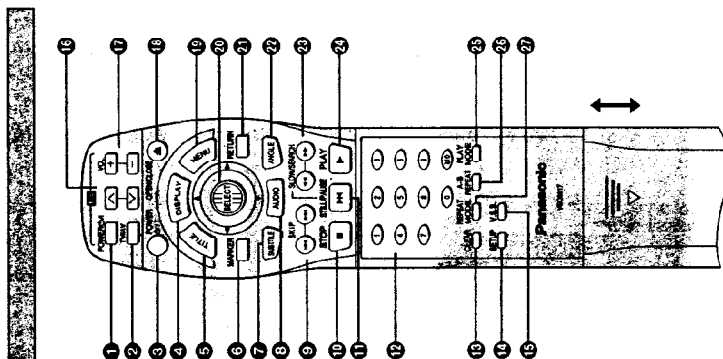

	Страница
1 Кнопка питания ТВ TV POWER ON	42
2 Кнопка ТВ/аудио-видео TV TV/AV	42
3 Кнопка питания POWER ON (для проигрывателя DVD/аудио-CD/аудио-CD)	15
4 Кнопка дисплея DISPLAY	20
5 Кнопка заголовка TITLE	16, 31
6 Кнопка маркера MARKER	27
7 Кнопка субтитров SUBTITLE	28
8 Кнопка аудио AUDIO	29
9 Кнопка пропуска SKIP	16, 17
10 Кнопка остановки STOP	17
11 Кнопка стоп-кадра/паузы STILL/PAUSE	18
12 Цифровые кнопки	16
* Для выбора 2-значного номера	
Пример: Для выбора дорожки 23	
Нажмите "210", "2", а затем "3".	
13 Кнопка страницы CLEAR	20, 24, 27, 33
14 Кнопка установки SETUP	32
15 Кнопка эффекта виртуального звукового окружения V.S.S.	30
16 Кнопка каналов TV CH	42
17 Кнопка громкости TV VOL	42
18 Кнопка открытия/закрытия OPEN/CLOSE	15
19 Кнопка меню MENU	16, 19, 31
20 Кнопка диалектического выбора Jump/SELECT	16
21 Кнопка возврата RETURN	16, 20
22 Кнопка угла просмотра ANGLE	30
23 Кнопка замедленного воспроизведения/поиска SLOW/SEARCH	18, 19
24 Кнопка режима воспроизведения PLAY	15
25 Кнопка режима воспроизведения PLAY MODE	23, 24
26 Кнопка повтора A-B REPEAT	25
27 Кнопка режима повтора REPEAT MODE	25

Дисплей на передней панели


1. Выращивается во время воспроизведения. Выращивается по часовой стрелке или против часовой стрелки во время ускоренной прокрутки вперед (назад). (См. стр. 18.)
2. Выращивается по часовой стрелке во время замедленного воспроизведения. (См. стр. 19.)
3. Выращивается в режиме остановки.
4. Выращивается в режиме воспроизведения. Мигает, когда функция **RESUME** установлена в положение **ON**. (См. стр. 17.)
5. Выращивается во время повторного воспроизведения. (См. стр. 25.)
6. Выращивается в режиме паузы. [аудио-CD] (См. стр. 18.)
7. Индицируется номер сессии. [DVD] Индицируется номер дорожки. [аудио-CD/аудио-CD]
8. Индицируется суммарное время воспроизведения, когда закрыт лоток диска. [аудио-CD/аудио-CD] Индицируется истекшее время воспроизведения с начала заголовка/дорожки во время воспроизведения.
9. Индицируется текущая информация об аудио канале, записанном на диске (например, 2 канала или 5.1 канала).
10. Выращивается, когда загружен DVD.
11. Выращивается в режиме стоп-кадра. [DVD/аудио-CD] (См. стр. 18.)
12. Выращивается во время программного воспроизведения. [аудио-CD/аудио-CD] (См. стр. 23 и 24.)
13. Выращивается, когда воспроизводится выборка 96 кГц линейной ИКМ-стерео (импульсно-кодовая модуляция).
14. Выращивается, когда воспроизводится аудио 24 битовой линейной ИКМ-стерео.
15. Выращивается, когда лоток диска открыт.
16. Выращивается, когда лоток диска закрыт (завинчен).
17. Выращивается во время воспроизведения DVD.
18. Выращивается во время воспроизведения диалогового DVD.*
19. Выращивается во время воспроизведения DVD с карточкой.
20. Выращивается во время воспроизведения диалогового DVD с карточкой.
21. Выращивается во время воспроизведения видео-аудио DVD с карточкой.
22. Выращивается во время воспроизведения видео-аудио DVD с карточкой.
23. Выращивается во время воспроизведения аудио-аудио DVD с карточкой.
24. Выращивается, когда воспроизведение невозможно.
25. Цифровые видеодиски, на которых воспроизведение запрещено с помощью установки "Rating". (См. стр. 34.)
26. *DVD с локальным номером, отличным от "5" или "ALL". (См. стр. 43.)
27. Выращивается, когда диск не загружен.
28. *Диалоговый DVD мигает программой на DVD, которая включает несколько углов, несколько окончаний сюжетов и т.д.

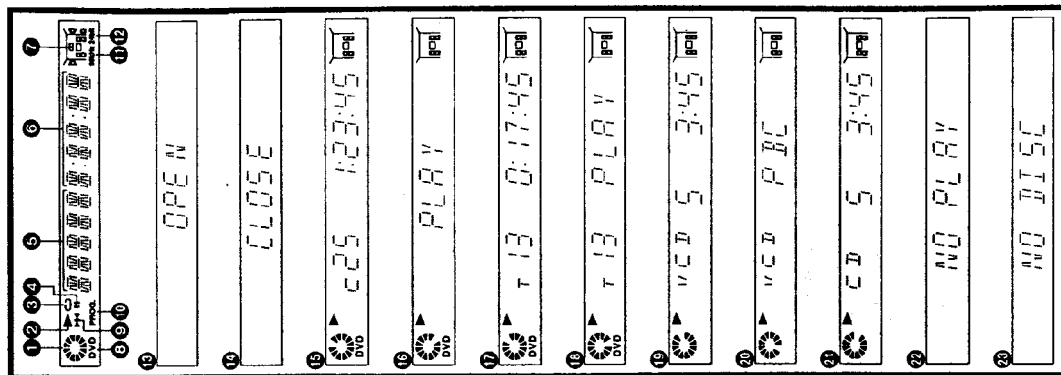

Основные подсоединения


- Перед выполнением подсоединений убедитесь, что переключатель питания на этом проигрывателе и на другой аппаратуре установлен в положение "выключено".
- Не блокируйте вентиляционные отверстия аппаратуры и расставьте её так, чтобы была возможна свободная циркуляция воздуха.
- Прочтите полностью инструкцию для аппаратуры, которую необходимо подсоединить.
- При подсоединении аудио и видео шнуров убедитесь, что Вы соблюдаете цветовую кодировку.
- Выберите подходящий тип экрана в начальных установках "TV Aspect" в соответствии с Вашим телевизором (4:3 или 16:9). (См. стр. 37.)

Подсоединение к телевизору и аудиосистеме

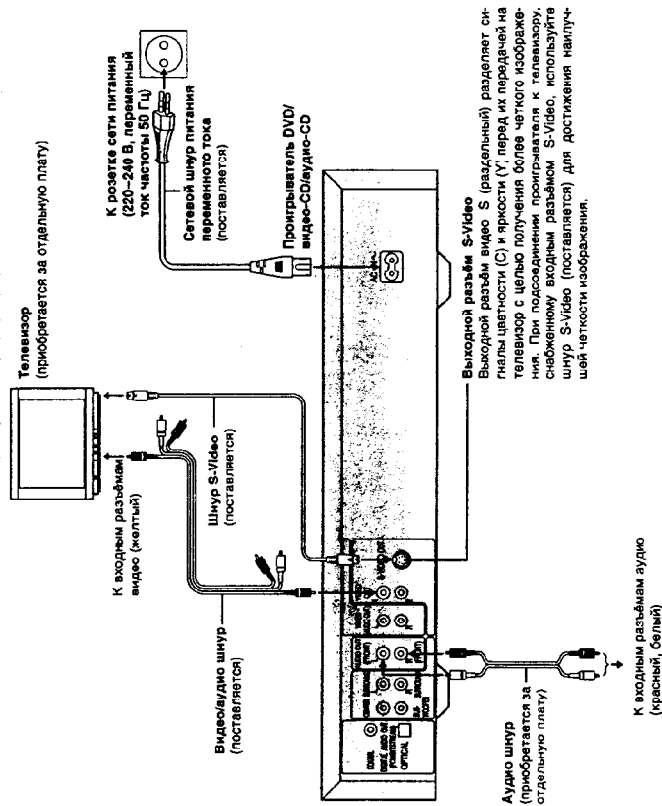


- Примечания:**
- Во время воспроизведения DVD громкость ТВ может достигать меньшего уровня, чем во время ТВ трансляции и т.д. В этом случае подрегулируйте громкость до желаемого уровня.
 - Если проигрыватель DVD подсоединен к ТВ через видеоскоп, магнитофон, достижение нормального изображения для некоторых DVD может оказаться невозможным. В этом случае не подсоединяйте проигрыватель через ВКМ.

Дополнительные видео подсоединения

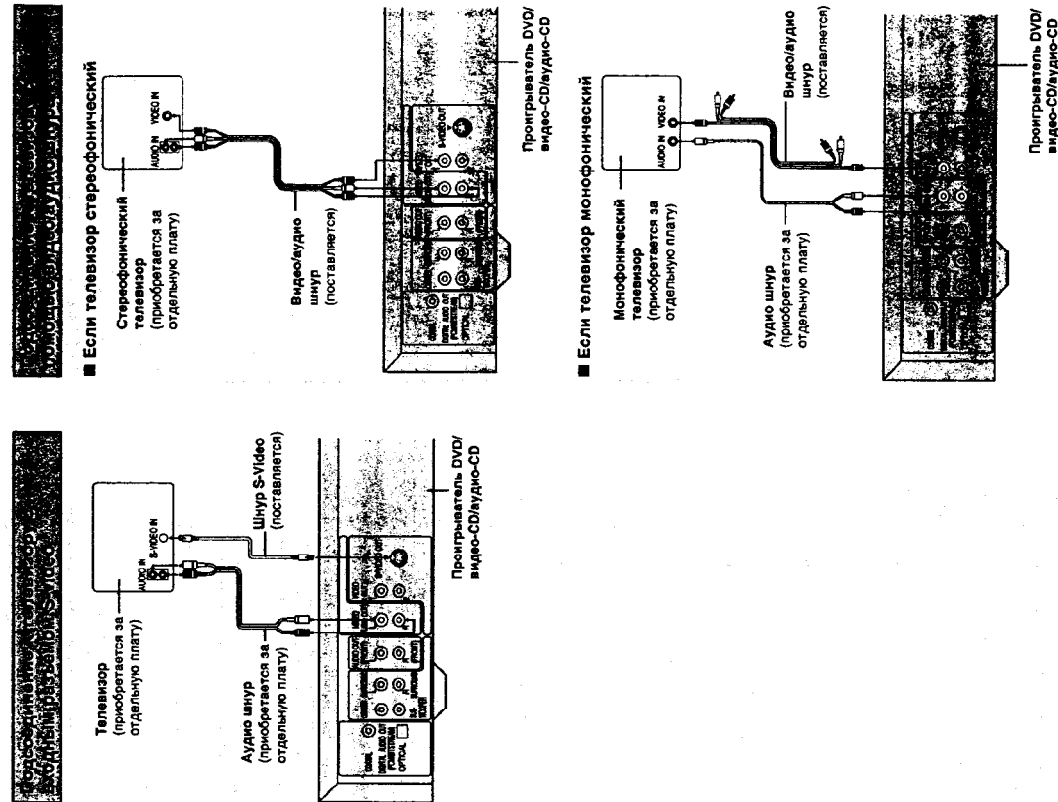

Дополнительные аудио подключения

Этот проигрыватель декодер Dolby Digital (AC-3) или MPEG 2. Он дает возможность воспроизведения DVD, записанных Dolby Digital, MPEG 1/2 аудио или линейной ИКМ-стерео, без необходимости внешнего декодера для обработки Dolby Digital, MPEG 1/2 аудио или линейной ИКМ-стерео. Когда проигрыватель подсоединен к усилителю с выходными разъемами 5.1 канала, Вы можете наслаждаться превосходным качеством в Вашем доме при воспроизведении дисков, записанных в системах Dolby Digital, MPEG 1/2 аудио или линейной ИКМ-стерео.

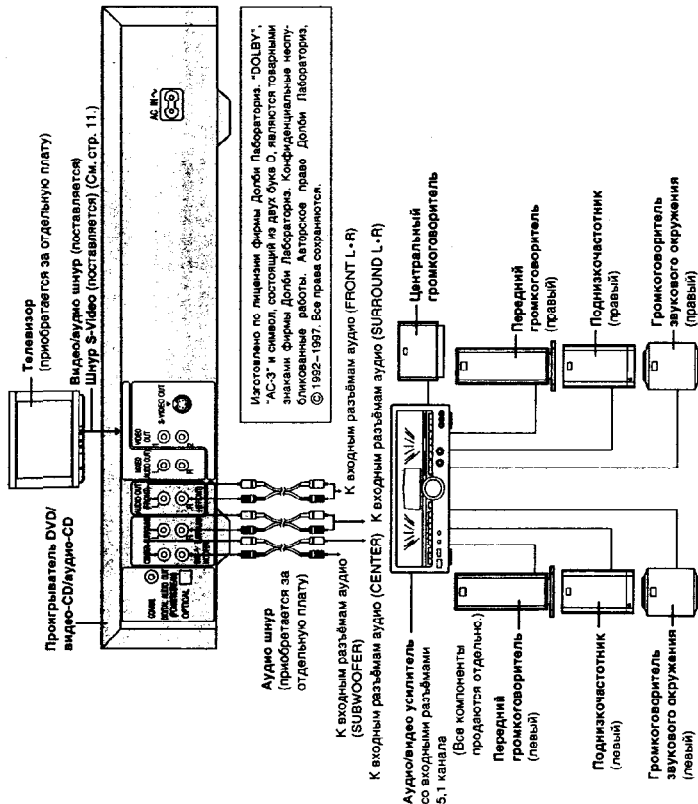

Примечания:

- После выполнения подсоединения установите пункт "Speaker setting" (Уровень и Loudness) в соответствии с Вашей акустической системой. (См. стр. 38.)
- Если тип подсоединенных громкоговорителей не удовлетворяет каналам, записанным на дисках MPEG 2 или линейной ИКМ-стерео, диск не будет воспроизводиться на всех каналах, а только на 2 каналах. (Например, даже если подсоединены передний громкоговоритель и центральный громкоговоритель, диск, записанный на 5 каналов, будет воспроизводиться только на 2 каналах.)
- Если вы используете линейную ИКМ-стерео, кГц, дискореализации, на котором содержится установка "Center Speaker", будет также воспроизводиться только на 2 каналах.

Если громкоговорители звукового окружения или центральный громкоговоритель не могут быть установлены на одинаковой высоте от (или удалены от) передних громкоговорителей с помощью "Speaker setting", затем для компенсации высоты установки временно закройте в пункте "Speaker setting" на стр. 39.

Установка эффекта VIRTUAL SURROUND SOUND (V.S.S.) в позицию "VSS OFF" (отмена) при использовании громкоговорителей, отличных от передних громкоговорителей (L/R). (См. стр. 30.)

Если он установлен в позицию "VSS 1" (естественный эффект) или "VSS 2" (усиленный эффект), звук будет издаваться только через передние громкоговорители (L/R).

Дополнительные аудио подключения

При воспроизведении DVD, записанных в формате Dolby Digital или MPEG аудио, поток битов Dolby Digital или поток битов MPEG аудио является выходным сигналом с цифрового аудио выходного разъема OPTICAL проигрывателя или цифрового аудио выходного разъема COAXIAL. Если проигрыватель подсоединен к декодеру Dolby Digital или декодеру MPEG аудио, Вы можете наслаждаться звуком театрального качества в Вашем доме. При воспроизведении Dolby Digital или декодера MPEG аудио требуется отдельный цифровой аудио кабель, который соединяет аудио кабель (оба приобретаются за отдельную плату).

Примечания при подсоединении оптического цифрового кабеля (приобретается за отдельную плату):

- Удалите с разъема пылающий кончик и плотно подсоедините кабель, так, чтобы совпали конфигурации обжимов кабеля и разъема (B).
- Соедините пылающий кончик и всегда подсоединяйте его повторно, когда разъем не используется для защиты его от пыли.

Относительно звукового выходного сигнала с оптического/коаксиального цифрового аудио выходного разъема проигрывателя


Диск	Формат выходной записи	Оптический/коаксиальный цифровой аудио выходной сигнал с разъема
DVD	Dolby Digital (AC-3)	Поток битов Dolby Digital (2-5.1 канала) или ИКМ (2 канала) (48 кГц/16 бит)*
	Линейная ИКМ-стерео (2 канала) (только выборка 48 кГц/16 бит)* или нет выходного сигнала**	
	MPEG 1/2	Поток битов MPEG аудио или ИКМ-стерео (2 канала) (16 бит)*
Видео-CD	MPEG 1	ИКМ-стерео (выборка 44.1 кГц)
аудио-CD	Линейная ИКМ-стерео	Линейная ИКМ-стерео (выборка 44.1 кГц)

*Тип аудио выходного сигнала с разъема может быть выбран с помощью меню выбора. (См. стр. 38.)

**Звук, имеющий выборку 96 кГц, преобразуется в выборку 48 кГц, когда он является выходным сигналом с оптического/коаксиального цифрового аудио выходного разъема.


К Вашему сведению:

- Dolby Digital (AC-3) является методом цифрового кодирования звука, разработанным корпорацией Dolby Laboratories Licensing Corporation.
- Оснащенный 5.1-канальное звуковое окружение, а также стерео (2-канальное) звучание, этот метод дает возможность эффективно записывать на диск большое количество звуковых данных.
- Линейная ИКМ-стерео является форматом звуковой записи, используемым в аудио-CD. В то время как аудио-CD записывается в формате 44.1 кГц/16 бит, DVD записывается в формате 48 кГц/16 бит до 96 кГц/24 бита.
- Если у Вас имеется декодер звукового окружения системы Dolby Pro Logic Surround, Вы будете получать все преимущества системы от тех же фильмов на DVD, которые полностью содержат звуковые дорожки 5.1-канальной системы Dolby Digital, в отличие от дисков, имеющих звук Dolby Surround.

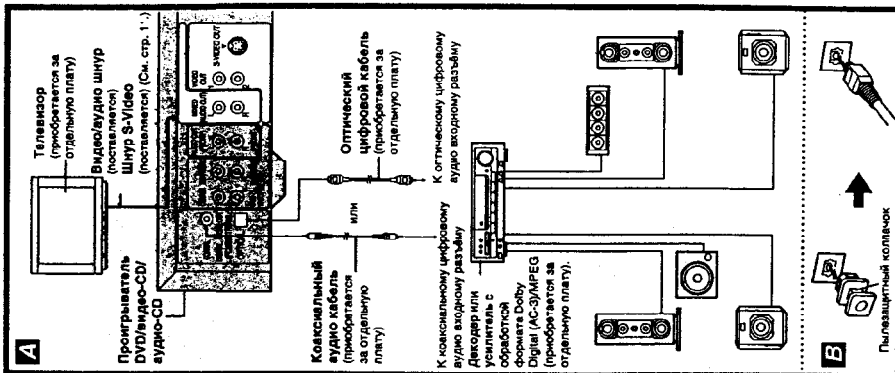

Основное воспроизведение


- 5 Наклоните джойстик в направлении <▲/> и нажмите кнопку SELECT, или нажмите цифровую(ые) кнопку(и) для выбора желаемого пункта.**
- Джойстик не действует для выбора пунктов для видео-CD.



Сейчас начинается воспроизведение выбранного пункта.

Когда меню продолжается на другом экране

После пункта 4 на стр. 15 нажмите кнопку SKIP >>>. (Кнопки SKIP могут не действовать в зависимости от диска.)



- Для возврата к предыдущему экрану меню. Нажмите кнопку <<< SKIP.

- Для эксплуатации обращайтесь также к обложке, прилагаемой к диску.

Остановка воспроизведения и возврат к экрану меню

- DVD

Нажмите кнопку TITLE, MENU или RETURN. (Требующая для нажатия кнопка различается в зависимости от используемого диска.)

- Видео-CD

Нажмите кнопку RETURN.

- Воспроизведение останавливается, и высвечивается экран меню.


После эксплуатации

Когда аппарат не используется, удалите диск и нажмите кнопку POWER для переключения питания в режим готовности.

Питание автоматически переключится в режим готовности по истечении около 30 минут в режиме ожидания. (Функция автоматического выключения питания)

Что такое управление воспроизведением?

Если на видео-CD или его обложке имеется надпись "autoplay control", это означает, что возможен выбор определенных сцен или информации для диалогового просмотра с ТВ монитора, используя экран меню.

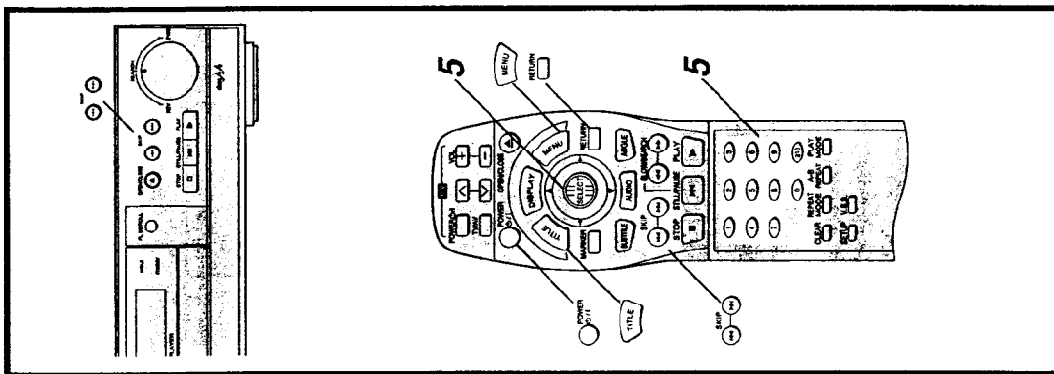

Основное воспроизведение

Примечания:

- Во время высвечивания меню продолжается вращение диска, даже если проигрыватель закончил воспроизведение определенного пункта. Когда больше нет других выборов для воспроизведения, следует нажать кнопку STOP для гашения индикации меню.

- Если диск установлен вверх дном (и это односторонний диск), на дисплее проигрывателя DVD индицируется "NO DISC".

- При воспроизведении DVD формата NTSC возможна прокрутка воспроизводимого изображения вверх или вниз на некоторых телевизорах; подрегулируйте эти помехи, используя регулятор V-HOLD на ТВ. На телевизорах, не снабженных регулятором V-HOLD, коррекция этого состояния невозможна. Воспроизводимое изображение может сокращаться по вертикали, и внизу и сверху экрана могут появляться черные полосы, или изображение может быть черно-белым. Это не означает, что устройство неисправно.

К Вашему сведению:

- Когда при управлении с помощью кнопки появляется индикация , это означает, что соответствующая операция запрещена на проигрывателе или на диске.

Остановка воспроизведения.

Нажмите кнопку STOP.

Для Вашего удобства:

- Когда воспроизведение останавливается, аппарат записывает точку, в которой была нажата кнопка STOP (функция RESUME). (Когда активизируется эта функция, на дисплее проигрывателя мигает индикация ">>".) Нажмите кнопку PLAY, и воспроизведение будет возобновлено с этой точки. При открывании лотка диска или повторном нажатии кнопки STOP, выполняется гашение функции RESUME.

- Функция RESUME работает только с дисками. Для коротких истекших время воспроизведение появляется на дисплее аппарата во время воспроизведения.

- Гашение этой функции невозможно, когда питание переключается в режим готовности, а затем возвращается в положение ON.

Перескок вперед

Нажмите кнопку SKIP >>> во время воспроизведения.

При каждом нажатии кнопки пропускается секция (DVD) или дорожка (Видео-CD/аудио-CD).

Перескок назад

Нажмите кнопку <<< SKIP во время воспроизведения.

При нажатии кнопки один раз в середине секции/дорожки воспроизведение возвращается на начало этой секции/дорожки. При повторном нажатии кнопки секция/дорожка пропускается каждый раз при нажатии кнопки.

К Вашему сведению:

- Если кнопка <<< SKIP >>> нажимается во время воспроизведения видео-CD с меню, иногда возможен выход экрана меню.

Ускоренная прокрутка вперед (ускоренная прокрутка назад)

С помощью пульта ДУ
Нажмите кнопку SLOW/SEARCH ◀◀ или ▶▶ во время воспроизведения.



• Скорость ускоренной прокрутки вперед (назад) является сначала относительно медленной. При повторном нажатии кнопки скорость становится быстрее. (При каждом нажатии для возврата к нормальному воспроизведению нажмите кнопку PLAY.)

На основном аппарате
Поверните челночный циферблат во время воспроизведения. Низкая



• Скорость возрастает максимум на 5 ступенек.
• При высвобождении челночного циферблата возобновляется нормальное воспроизведение.

Примечание:
• Звучание слышно во время ускоренной прокрутки вперед со скоростью 1. (См. стр. 41.)
К Вашему сведению:
• Кадр во время воспроизведения с меню видео-CD используется кнопка SLOW/SEARCH или челночный циферблат, когда возникнет повторный вызов экрана меню.

Стоп-кадр (пауза)

Нажмите кнопку STILL/PAUSE во время воспроизведения.



• DVD/видео-CD:
Проигрыватель перейдет в режим стоп-кадра.
• Аудио-CD:
Проигрыватель перейдет в режим паузы.

Для возврата к нормальному воспроизведению
Нажмите кнопку PLAY.


Покадровое продвижение (DVD/видео-CD)

Нажмите кнопку STILL/PAUSE в режиме стоп-кадра.

При каждом нажатии кнопки выполняется продвижение воспроизведения диска по одному кадру.
• При удерживании кнопки кадровой прокрутки вперед для последовательных кадров.

Для возврата к нормальному воспроизведению
Нажмите кнопку PLAY.

Примечание:
• Выбор проигрывания изображения с помощью режима "Frame" или "Field" является автоматическим. (См. стр. 41.)

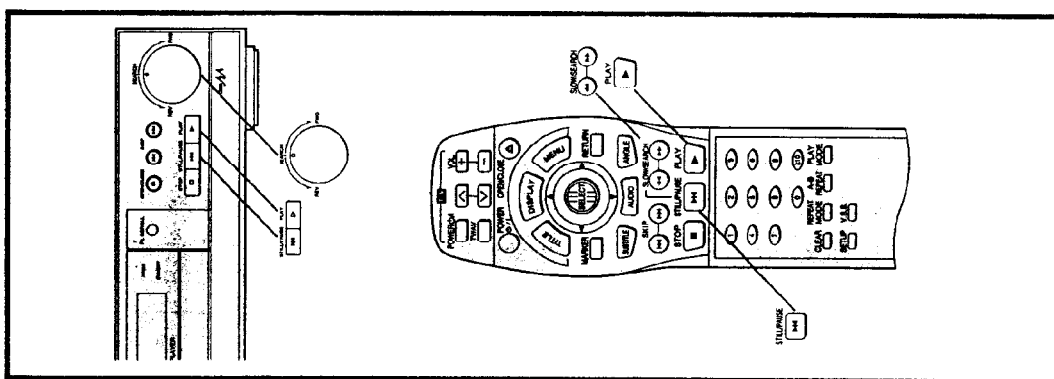

Замедленное воспроизведение (DVD/видео-CD)


С помощью пульта ДУ
Нажмите кнопку SLOW/SEARCH ◀◀ или ▶▶ в режиме стоп-кадра. (См. стр. 18.)



• Скорость замедленного воспроизведения является сначала относительно медленной. При повторном нажатии кнопки скорость становится быстрее. (При каждом нажатии кнопки скорость возрастает максимум на 5 ступенек.)

Для возврата к нормальному воспроизведению
Нажмите кнопку PLAY.

На основном аппарате
Поверните челночный циферблат во время воспроизведения. Низкая



• Скорость возрастает максимум на 5 ступенек.
• При высвобождении челночного циферблата возобновляется воспроизведение стоп-кадра.


К Вашему сведению:
• Для видео-CD замедленное воспроизведение в обратном направлении невозможно.

Воспроизведение видео-CD с использованием меню

Используйте меню (только видео-CD)

1. Нажмите кнопку STOP после появления экрана меню (после пункта 4 на стр. 15).
2. На дисплее аппарата появится индикация "PBC".
Нажмите цифровую(ые) кнопку(ы) для выбора желаемой дорожки.
(Назначается воспроизведение.)
• Скоростные номера дорожек обращаются к обложке и т.п. соответствующего диска.
• Нажмите кнопку "1" для начала воспроизведения с начала диска.

Для возврата в режим меню
Нажмите кнопку STOP для останова воспроизведения и нажмите кнопку MENU.
(На дисплее аппарата высветится индикация "PBC" и возобновится экран меню.)
Выполните пункта 5 на стр. 16.

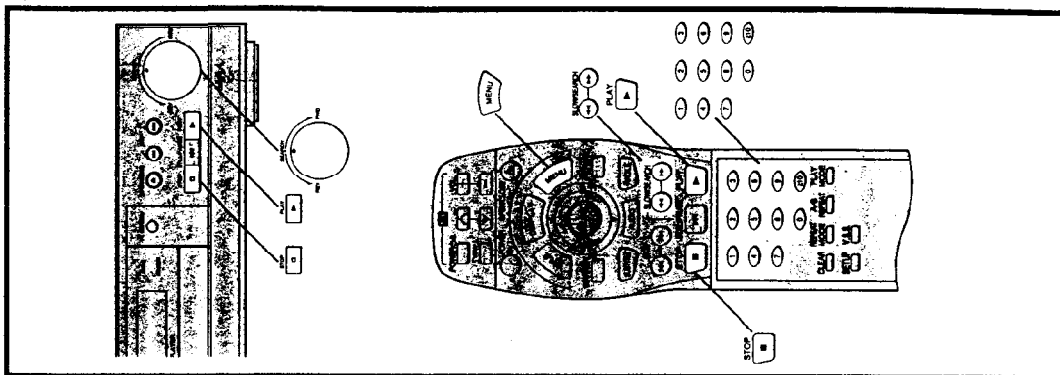


Начальные установки

Как только установка завершена, возможно управление проектором при тех же условиях (в особенности с DVD). Установки будут сохранены в памяти, даже после перепрограммирования в режим готовности до тех пор, пока они не будут изменены.



- 1 Нажмите кнопку **SETUP** в режиме ожидания.

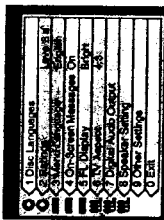

- 2 Наклоните джойстик в направлении **▲/▼** для выбора желаемого пункта и нажмите кнопку **SELECT**.

- 1 Disc Languages (Языки диска) (см. стр. 33)
- 2 Rating (Уровни оценки) (см. стр. 34)
- 3 Menu Language (Язык меню) (см. стр. 35)
- 4 On-Screen Message (Сообщения при отображении информации на экране) (см. стр. 36)
- 5 FL Display (Люминесцентный дисплей) (см. стр. 38)
- 6 TV Aspect (Вид ТВ) (см. стр. 37)
- 7 Digital Audio Output (Цифровой выходной аудиосигнал) (см. стр. 38)
- 8 Speaker Setting (Установка громкоговорителя) (см. стр. 39)
- 9 Other Settings (Другие установки) (см. стр. 41)

- 3 Наклоните джойстик в направлении **▲/▼** для выбора желаемой величины и нажмите кнопку **SELECT**.

• Для некоторых пунктов требуются дополнительные операции. (См. соответствующую страницу.)
Установка закончена, и высвечивается экран начальных установок.

Для отмены во время операции установок
Нажмите кнопку **RETURN** или выберите индикацию "0". (Высвечивается экран ожидания.)

Для стирания экрана начальных установок
Наклоните джойстик в направлении **▲/▼** для выбора индикации "0" и нажмите кнопку **SELECT**. (При нажатии кнопки **SETUP** или **RETURN** экран начальных установок также стирается.)


К Вашему сведению:
• Для выбора индикации или величины вместо джойстика возможно также использовать цифровые кнопки. В этом случае название кнопки **SELECT** не требуется.

Примечание:
• После установки на проигрывателе позиции "Lock All" в установке "2 Rating" невозможно изменить статус из начальных индикаций, включая установку "2 Rating".
• Программист оставлен DVD. В этом случае удалите диск и разблокируйте проигрыватель.

Начальные установки

Выбор языка диска
Понимание языка будет аудио дорожки, язык субтитров и язык, используемый в меню названия или меню DVD, который будет использоваться всегда для каждого воспроизводимого диска.

- 1 На экране начальных установок Выберите с помощью джойстика установку "1 Disc Languages" и нажмите кнопку **SELECT**.

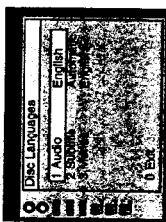

- 2 Выберите с помощью джойстика желаемый пункт (1-3) и нажмите кнопку **SELECT**.

Когда выбрана установка "1 Audio"
English: Выбран английский язык (заводская установка)
French/German/Italian/Spanish: Выбран каждый язык.
Original: Будет выбран оригинальный язык на каждом диске.
Other ****: Будет выбран другой язык. (Обращаться к кодам языка на стр. 47. Если введен неправильный код языка нажмите кнопку **CLEAR**.)

Когда выбрана установка "2 Subtitle"
Automatic: Будет выбран тот же язык, что и для установки "1 Audio". (заводская установка)
English: Выбранный для установки "1 Audio" язык, действительность используется во время воспроизведения, субтитры могут не появиться.
• Если во время воспроизведения используется другой язык, субтитры появятся на языке, выбранном для установки "1 Audio".

English/French/German/Italian/Spanish: Выбран каждый язык.
Other ****: Может быть выбран другой язык.
Когда выбрана установка "3 Menu"
English: Выбран английский язык (заводская установка)
French/German/Italian/Spanish: Выбран каждый язык.
Other ****: Могут быть выбраны другие языки.

- 3 Выберите с помощью джойстика желаемый язык на каждом экране и нажмите кнопку **SELECT**.

Высвечивается экран в пункте 1. Для возврата к экрану начальных установок выберите с помощью джойстика "0" и нажмите кнопку **SELECT**.


Примечание:
• Если выбранный язык не имеется в наличии на диске, будет выбран язык, определенный для каждого диска.



Начальные установки


Эта установка применяется для исключения возможности воспроизведения определенных дисков, неподходящих для детей. «На некоторых DVD записан специальный уровень оценки. Если уровень оценки на диске выше, чем предустановленный с помощью операции установки, воспроизведение диска будет запрещено.

- 1 На экране начальных установок Выберите с помощью джойстика нововку "2 Ratings" и нажмите кнопку SELECT.


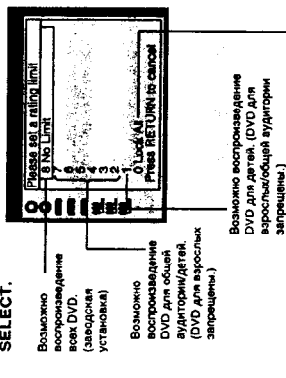


Запрещено воспроизведение всех DVD (например, для запрета воспроизведения DVD для детей, которые не записаны с помощью информации об уровне оценки)

- 2 Выберите с помощью джойстика желаемый уровень и нажмите кнопку SELECT.

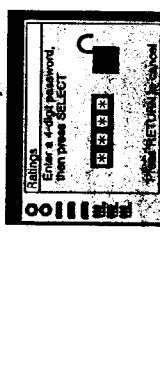

- 3 Когда выбран уровень 7 или ниже Введите 4-значный пароль и нажмите кнопку SELECT.

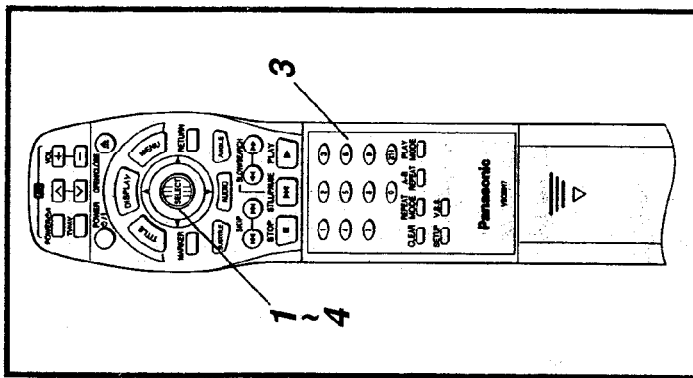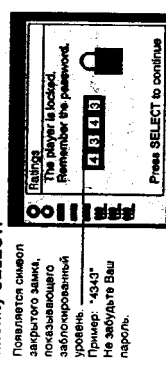

4 Нажмите кнопку SELECT.

Установка закончена, и высвечивается экран начальных установок.

«Оценка заблокирована. После нажатия правильного пароля, возможно воспроизведение любых дисков, оценка которых выше, чем установка»

Обращайтесь к таблице X на странице "Общие процедуры начальных установок" на стр. 32.

Начальные установки

Для изменения установок

1. Выберите с помощью джойстика и нажмите кнопку SELECT.

2. На экране начальных установок и нажмите кнопку SELECT.

3. Выберите с помощью джойстика желаемый пункт (1-4) и нажмите кнопку SELECT.

«Наклоните джойстик в направлении 1/7 для выбора индикации "0" и нажмите кнопку SELECT для выхода. (Установка закончена, и высвечивается экран начальных установок.)

4. Когда выбрана установка "1 Unlock Player"

Нажмите кнопку SELECT.

Когда выбран уровень "2 Change Password"

Введите новый 4-значный пароль и нажмите кнопку SELECT.

Нажмите кнопку SELECT снова.

Когда выбрана установка "3 Change Level"

Выберите уровень и нажмите кнопку SELECT.

Когда выбрана установка "4 Temporarily Unlock"

(Оценка временно разблокирована только для настоящего диска.) Нажмите кнопку SELECT.

Установка закончена, и высвечивается экран начальных установок.

Примечание:

«Для некоторых дисков может быть не записан специальный уровень оценки информации, хотя на обложке диска указано, что он «для взрослых».

Для таких дисков ограничение по возрасту не работает.

Вывод информации на экран

1 На экране начальных установок

Выберите с помощью джойстика нововку "3 Menu Language" и нажмите кнопку SELECT.


2 Выберите с помощью джойстика желаемый язык (1-5) и нажмите кнопку SELECT.

Установка закончена, и высвечивается экран начальных установок.

Обращайтесь к таблице X на странице "Общие процедуры начальных установок" на стр. 32.

Заворочная установка

Press RETURN to cancel

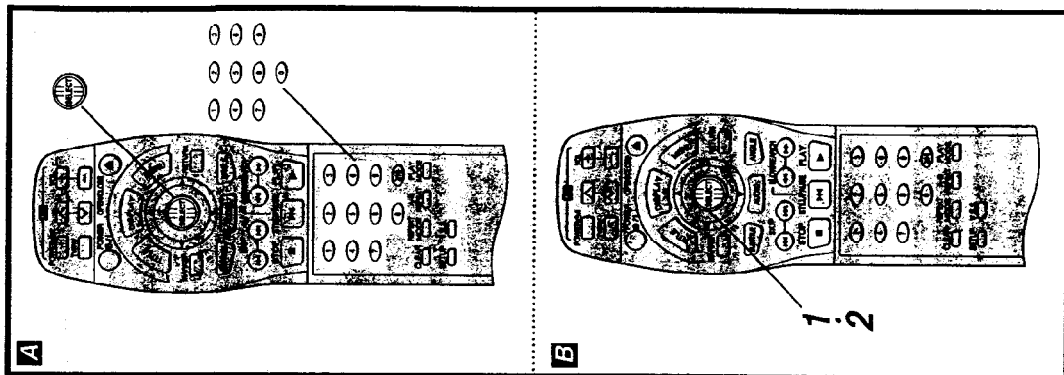


Начальные установки

Переключение отображения информации о состоянии воспроизведения

Вы можете выбрать будут или нет высвечиваться сообщения при отображении информации на экране, такие, как PLAY или STOP.

- 1 На экране начальных установок Выберите с помощью джойстика установку "4 On-Screen Messages" и нажмите кнопку SELECT.

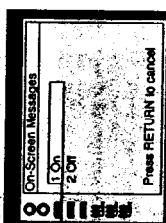


- 2 Выберите с помощью джойстика желаемый пункт (1 или 2) и нажмите кнопку SELECT.

Установка закончена, и высвечивается экран начальных установок.

Выбор яркости дисплея

- 1 На экране начальных установок Выберите с помощью джойстика установку "5 FL Display" и нажмите кнопку SELECT.

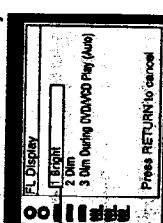

- 2 Выберите с помощью джойстика желаемый пункт (1-3) и нажмите кнопку SELECT.

Установка закончена, и высвечивается экран начальных установок.

К Вашему сведению:

• Даже если выбрана установка "3 Dim During DVD/CD Play (Auto)", яркость дисплея возобновляется, когда нажата кнопка для специального воспроизведения, такая, как SLOWSEARCH и STILL/PAUSE.


Обращайтесь также к параграфу "Общие процедуры начальных установок" на стр. 32.

Начальные установки

Выбор типа экрана телевизора

Выберите подходящий тип экрана в соответствии с Вашим телевизором: обычный размер экрана (4:3) или широкоэкранный (16:9).

- 1 На экране начальных установок Выберите с помощью джойстика установку "3 TV Aspect" и нажмите кнопку SELECT.

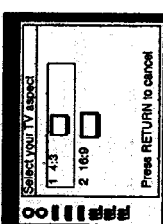

- 2 Выберите с помощью джойстика желаемый пункт (1 или 2) и нажмите кнопку SELECT.

4:3 ☐ Выберите, когда подсоединен обычный телевизор (заводская установка)

В этом типе установок воспроизводится видеоматериал, форматированный в стиле панорамы и сканирования (левый и правый край изображения).


Видеоматериал, не форматированный в стиле панорамы и сканирования, воспроизводится в стиле потянутого лица (черные полосы появляются сверху и снизу экрана).

16:9 ☐ Выберите, когда подсоединен широкоэкранный телевизор.

Воспроизводится в полном размере "FULL". (Установка широкоэкранный ТВ в режим "FULL" является также необходимой.)

На каждом экране показан пример, когда воспроизводятся видеоматериал для широкого экрана. (Эта установка не влияет на видеоматериал для обычного размера.)


Установка закончена, и высвечивается экран начальных установок.

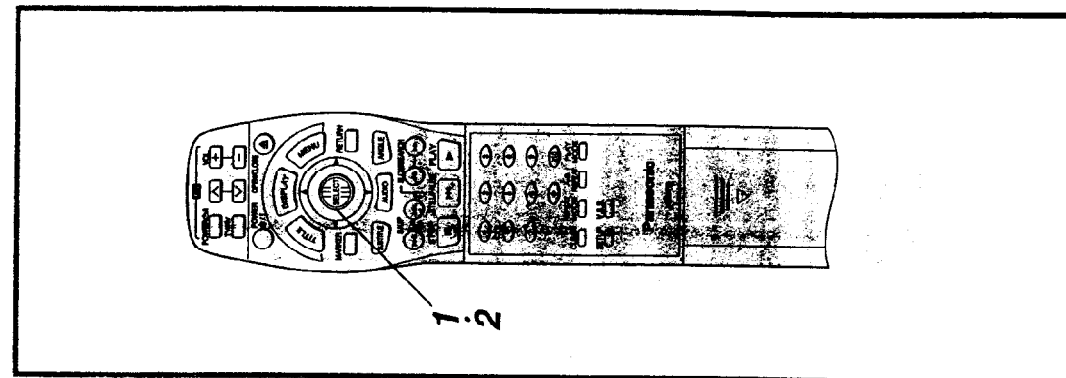

Начальные установки

Выбор выходного сигнала
Выберите цифровой выходной сигнал, который будет иметь выходной сигнал с оптимальной совместимостью цифрового аудио выходного сигнала проигрывателя.

1 На экране начальных установок
Выберите с помощью джойстика установку "7 Digital Audio Output" и нажмите кнопку SELECT.

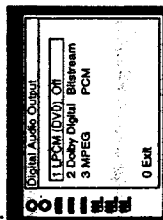

2 Выберите с помощью джойстика желаемый пункт (1-3) и нажмите кнопку SELECT.

Когда выбрана установка "1 LPCM (DVD)"
Когда выбран пункт (1-3) и нажатая кнопка SELECT.
Off: Выходной сигнал с цифрового аудио выходного сигнала проигрывателя будет иметь линейный выходной сигнал с оптимальной совместимостью цифрового аудио выходного сигнала проигрывателя.
On: Выходной сигнал с цифрового аудио выходного сигнала проигрывателя будет иметь линейный выходной сигнал с оптимальной совместимостью цифрового аудио выходного сигнала проигрывателя.

PCM: Во время воспроизведения DVD, записанного в формате линейного ИКМ-стерео 48 кГц/20 бит/24 канала или 48 кГц/16 бит/24 канала, выходной сигнал проигрывателя будет иметь линейный выходной сигнал с оптимальной совместимостью цифрового аудио выходного сигнала проигрывателя.

Когда выбрана установка "2 Dolby Digital"
Dolby Digital (AC-3) (2 канала-5.1 канала).
Выходной сигнал проигрывателя будет иметь линейный выходной сигнал с оптимальной совместимостью цифрового аудио выходного сигнала проигрывателя.

PCM: Выходной сигнал проигрывателя будет иметь линейный выходной сигнал с оптимальной совместимостью цифрового аудио выходного сигнала проигрывателя.

Когда выбрана установка "3 MPEG"
Выходной сигнал проигрывателя будет иметь линейный выходной сигнал с оптимальной совместимостью цифрового аудио выходного сигнала проигрывателя.


Bitstream: Выходной сигнал проигрывателя будет иметь линейный выходной сигнал с оптимальной совместимостью цифрового аудио выходного сигнала проигрывателя.

3 Выберите с помощью джойстика желаемую величину на каждом экране и нажмите кнопку SELECT.

Выполните экран в пункте 1. Выберите с помощью джойстика установку "0" и нажмите кнопку SELECT для возврата к экрану начальных установок.

К Вашему сведению:

Выполните установку, как показано в таблице 3, в зависимости от типа усилителя, который подсоединен к оптическому выходному сигналу цифрового аудио выходного сигнала проигрывателя.

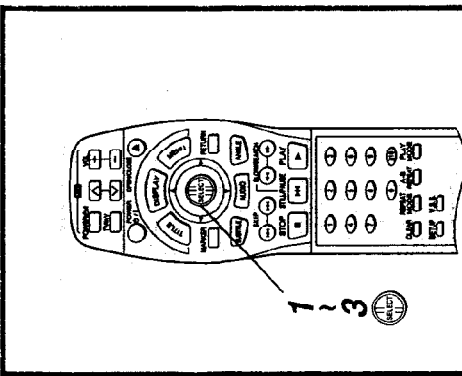


A

Тип усилителя, подсоединенного к выходному сигналу	Рекомендуемая установка
Усилитель не подсоединен	1 LPCM (DVD) 2 Dolby Digital 3 MPEG
Усилитель подсоединен	Off
Аудиовидео усилитель, декодирующий аудио и Dolby Digital	PCM*
Аудиовидео усилитель, декодирующий MPEG аудио и Dolby Digital	PCM*
Аудиовидео усилитель, декодирующий аудио и Dolby Digital	PCM*

*Выходной аудио сигнал с аудио выходных разъемов проигрывателя преобразуется в 48 кГц/16 бит в дополнение к аудиосигналу с цифрового аудио выходного сигнала. Для прослушивания звука высокого качества не 48 кГц/20 бит/24 бит или 96 кГц, подсоедините усилитель или декодер аудио к аудио выходному разъему, а не к цифровому аудио выходному разъему. (Выборите позицию "Off" для установки "1 LPCM (DVD)".)

Начальные установки

Установка громкоговорителей
1 На экране начальных установок
Выберите с помощью джойстика установку "8 Speaker Setting" и нажмите кнопку SELECT.

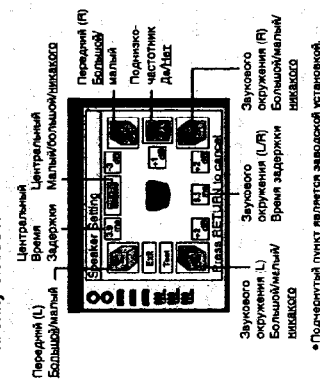


2 Выберите с помощью джойстика желаемый пункт и нажмите кнопку SELECT.


3 Выберите с помощью джойстика желаемую величину и нажмите кнопку SELECT.

Пиктограммы громкоговорителей:
Если громкоговоритель подсоединен, высвечивается пиктограмма громкоговорителя.
Если громкоговоритель не подсоединен, пиктограмма сигнала не высвечивается.
Если громкоговоритель подсоединен, пиктограмма сигнала высвечивается.
Если громкоговоритель не подсоединен, пиктограмма сигнала не высвечивается.
Если громкоговоритель подсоединен, пиктограмма сигнала высвечивается.
Если громкоговоритель не подсоединен, пиктограмма сигнала не высвечивается.

Если громкоговоритель звукового окружения или центральный громкоговоритель не могут быть установлены на одинаковом расстоянии от (или удалены от) передних громкоговорителей с позиции прослушивания, измените время задержки для получения лучшего эффекта звукового окружения.
Если D2 и D3 одинаковы или больше, чем D1, установка не требуется. (В противном случае измените установку в соответствии с таблицей 3.)
Баланс каналов:
Во время прослушивания тестового сигнала подрегулируйте громкость центрального громкоговорителя, громкоговорителя звукового окружения (L) и (R) и поднастройте пиктограмму, чтобы громкость была одинакова с громкостью передних громкоговорителей.
(Продолжение на следующей странице)

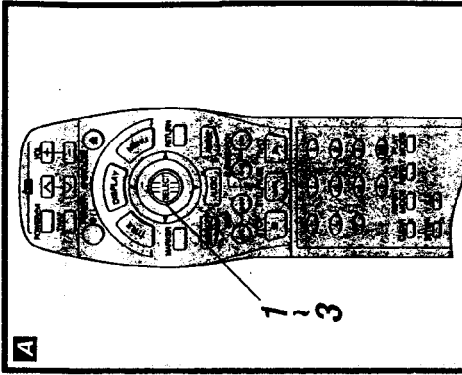

B

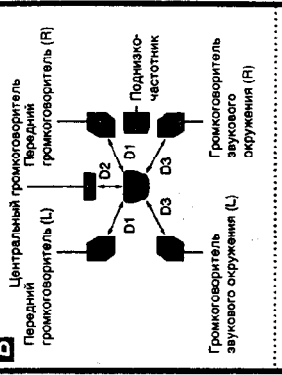

C

Громкоговоритель	Время задержки	Разница между D1 и D2/D3
Центральный	1.3 мсек	приблиз. 50 см
Громкоговоритель (D2)	2.6 мсек	приблиз. 100 см
Громкоговоритель (D3)	3.9 мсек	приблиз. 150 см
Громкоговоритель (D4)	5.3 мсек	приблиз. 200 см
Громкоговоритель (D5)	10.6 мсек	приблиз. 400 см
Громкоговоритель (D6)	15.9 мсек	приблиз. 600 см

Начальные установки

- 4 Выберите с помощью джойстика кнопку "Exit" и нажмите кнопку SELECT.


Примечание:

- Установка "Large/Small" не действует на DVD, записанных в формате MPEG 2 аудио.

К Вашему сведению:

- Для подачи на выход тестового сигнала
1. Выберите с помощью джойстика установку "Test" и нажмите кнопку SELECT. (С каждого громкоговорителя по часовой стрелке последовательно будут подаваться на выход тестовые сигналы.)
 2. Выберите с помощью джойстика порождающую громкость (от -60 до +6 дБ) в то время, когда тестовый сигнал подается на выход с громкоговорителя.
 3. Нажмите кнопку SELECT. (Тестовый сигнал останавливается.)


Обратите внимание: Если вы хотите изменить настройки, нажмите на стр.

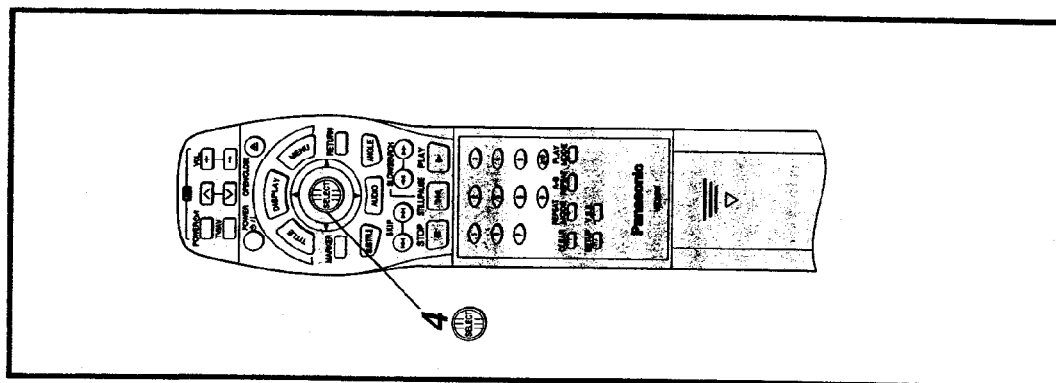

Начальные установки

Другие установки

- 1 На экране начальных установок Выберите с помощью джойстика установку "9 Other Settings" и нажмите кнопку SELECT.

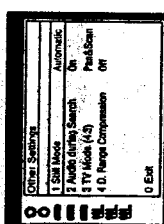

- 2 Выберите с помощью джойстика желаемый пункт (1-4) и нажмите кнопку SELECT.

Когда выбрана установка "1 Still Mode" Automatic: Во время режима стоп-кадра автоматически выбираются режимы "Frame still" и "Field still". (Заводская установка)

Field: Выберите эту установку, когда на изображении наблюдается дрожание даже при выключенном "Autolav".

Когда выбрана установка "2 Audio during Search" On: Заводская установка (Когда поиск нежелателен, выберите позицию "Off").

Off: Выберите эту установку, если аудио во время поиска не требуется.

Когда выбрана установка "3 TV Mode (4:3)" Pan & Scan: Видеоматериал для широкого экрана будет воспроизводиться по телевизору обычного размера в стиле панорама и сканирования. (Заводская установка)

Видеоматериал, не сформированный в стиле панорама и сканирования, будет воспроизводиться в стиле почтового ящика. (См. стр. 37.)

Letterbox: Выберите эту установку для воспроизведения по телевизору обычного размера видеоматериала для широкого экрана в стиле почтового ящика.


Когда выбрана установка "4 D. (Dynamic) Range Compensation" Off: Выбран нормальный аудио диапазон. (Заводская установка)

On: Выберите эту установку для получения удельно громкого прослушивания динамического звука даже на малом уровне громкости. Это полезно для прослушивания лекций. Эта функция работает только с DVD Dolby Digital (AC-3).

- 3 Выберите с помощью джойстика желаемую величину на каждом экране и нажмите кнопку SELECT.

Высвечивается экран в блоке 1. Выберите с помощью джойстика значение "0" и нажмите кнопку SELECT для возврата к экрану начальных установок.

Обратите внимание: Если вы хотите изменить настройки, нажмите на стр.

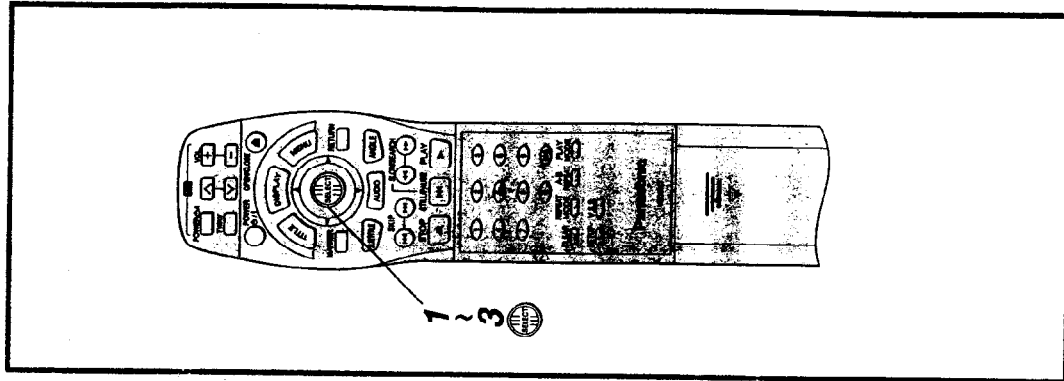

Руководство по выявлению и устранению неисправностей

Прежде чем обратиться к специалисту по техническому обслуживанию прибора, причину возникновения / Вас неисправности по приведенной ниже таблице. Выполненные Вами простые проверки или несущественные регулировки могут устранить неисправность, и восстановить нормальную работу. Если у Вас есть сомнения по поводу некоторых пунктов проверки, или указанные в таблице принимаемые меры не устранят неисправность, проконсультируйтесь с Вашим дилером.

Нет подключения к сети питания.	Плотно вставьте сетевой шнур питания переменного тока в розетку сети питания.
Питание автоматически переключается в режим готовности.	Питание автоматически переключается в режим готовности по истечении периода 30 минут в режиме ожидания (функция автоматического выключения питания). Включите питание снова.
• Вспроизведение не начинается, даже при нажатии кнопки PLAY. • Вспроизведение начинается, но сразу же останавливается.	• Сформировалась влага: подождите 1-2 часа до испарения влаги в проигрывателе. • На этом проигрывателе невозможно воспроизведение диска, отличного от DVD, видео-CD и аудио-CD. • Возможно загрязнение диска и необходимость его очистки. • Убедитесь, что диск установлен стороной этикетки вверх.
Нет изображения.	• Убедитесь, что аппаратная подсоединена правильно. • Убедитесь, что установка входа для ТВ является позиция "Video".
• Нет звука. • Искаженный звук.	• Убедитесь, что аппаратная подсоединена правильно. • Убедитесь, что установка входного разъема для ТВ и стереосистемы являются правильными. • Подрегулируйте громкость основного канала, используя экран GUI для информации о проигрывателе.
Во время ускоренной прокрутки вперед или назад имеются искажения изображения.	Иногда имеются искажения изображения: это является нормальным.
Невозможна ускоренная прокрутка вперед (или назад).	На некоторых дисках могут иметься участки, на которых запрещена ускоренная прокрутка вперед (или назад).
Нет изображения 4:3 (16:9).	Выберите правильную установку пункта "TV Aspect", соответствующую используемому телевизору.
Нет отображения информации на экране.	Для пункта "On-Screen Messages" выберите установка OFF: выберите ON.
Нет звукового сопровождения.	Выберите правильную установку в пункте "Speaker setting", которая подходит для Вашей стереосистемы.
Невозможно выполнения операций с пульта ДУ.	• Убедитесь, что батареи установлены с правильными полярностями (+ и -). • Батареи разрядились. Замените их новыми. • Направьте пульт ДУ на сенсор ДУ и управляет. • Удалите препятствия между пультом ДУ и сенсором ДУ.
Управление кнопками не действует (с аппарата или пульта ДУ).	Переключите питание в режим готовности, а затем возвратите в режим ON. Либо переключите питание в режим готовности, отсоедините сетевой шнур питания переменного тока, а затем снова подсоедините его. (Возможно, что проигрыватель не функционирует правильно вследствие молнии, статического электричества или некоторых других внешних факторов.)
Управление телевизором с помощью пульта ДУ невозможно.	Не все модели и марки телевизоров могут управляться с помощью поставляемого универсального пульта ДУ.
Экран GUI не высвечивается или высвечивается частично на экране телевизора.	Выберите подходящий тип экрана телевизора, обратившись за справкой к инструкции по эксплуатации телевизора.

При выборе заголовка не начинается воспроизведение.	Проверьте установку "Ratings".
Язык аудио звуковой дорожки / или субтитров отличается от выбранного в начальных установках.	Если язык аудио звуковой дорожки / или субтитров не существует на диске, просмотр/прослушивание в языке, выбранном в начальных установках, невозможно.
Меню высвечивается на французском языке (пример).	Для позиции "Menus" установите "Disc Language" установлен французский язык: выберите английский язык.
Нет субтитров.	• Субтитры появляются только для дисков, которые их содержат. • Субтитры погашены на ТВ мониторе. Выполните пункты на стр. 28 для высвечивания субтитров.
Выбор другого языка аудио звуковой дорожки (или субтитров) невозможен.	• Выбор другого языка невозможен для дисков, которые содержат не более одного языка. • В случае некоторых дисков выбор другого языка невозможен с помощью управления кнопками AUDIO или SUBTITLE. Попробуйте выбрать его с помощью меню DVD, если оно имеется в наличии.
Изменение угла невозможно.	Эта функция зависит от возможностей программного обеспечения. Даже если на диске имеется несколько углов съемки, эти углы могут быть высвечены только для определенных сцен (когда на проигрывателе высвечивается индикация ANGLE).
Был забыт пароль для запуска просмотра по возрасту.	Когда аппарат находится в режиме ожидания, держите нажатыми одновременно кнопки M4 SKIP и STILL/PAUSE, затем держите нажатой кнопку POWER более 3 секунд (до тех пор, пока с ТВ монитора не исчезнет индикация "Initialised"). Блок-скрин высвечивается, и все начальные установки вернутся к установкам по умолчанию.

Не выполняется воспроизведение с меню.	Эта функция работает только для видео-CD с управлением воспроизведением.
--	--

Функция индикаций самопроверки

Если во время операции была обнаружена ошибка или неисправность, в окошке дисплея появляется сервисный номер. Если появился сервисный номер, обратитесь к объяснениям, приведенным ниже.

Сервисный номер	Состояние проигрывателя	Принимаемые меры
U11	Диск зажат.	Протрите диск нежно.
N □	Возможно, произошла неисправность. Номер, следующий за буквой "N", различается в зависимости от состояния проигрывателя.	Переключите питание в режим готовности, а затем возвратите в режим ON. Либо переключите питание в режим готовности, отсоедините сетевой шнур питания переменного тока, а затем снова подсоедините его. Если гашение сервисного номера невозможно даже при принятии соответствующих мер, обратитесь к инженеру по техобслуживанию с целью ремонта проигрывателя.

SECTION 2 ADJUSTMENT PROCEDURES

How to Remove the Disc on the Tray in Trouble

When the Disc does not eject even after pushing the OPEN/CLOSE button, remove the Disc as follows.

1. Remove the 7 screws, and remove the Top Cover
While spreading the left and right sides slightly, remove the top cover while lifting the rear portion.

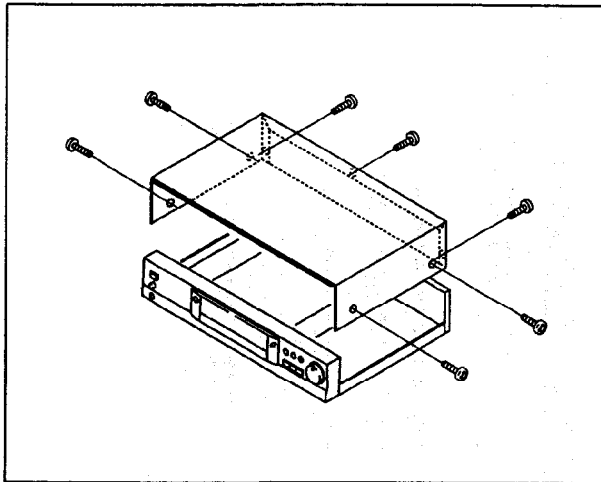


Fig. A Removal of the Top Cover

2. Remove the clamp support plate by removing the 4 screws.

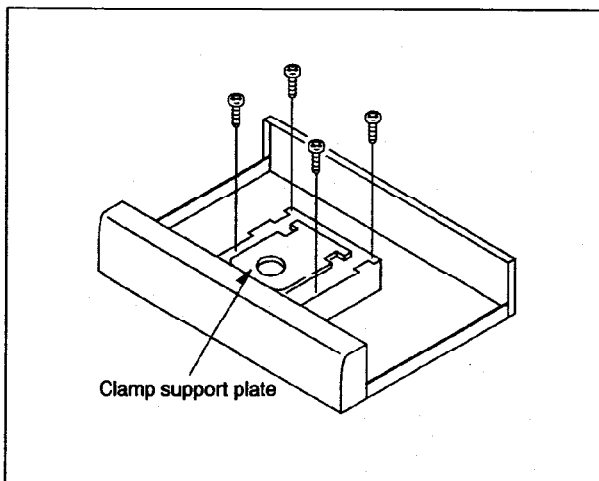


Fig. B Removal of the Clamp Support Plate

3. Remove the disc, taking care not to damage it.

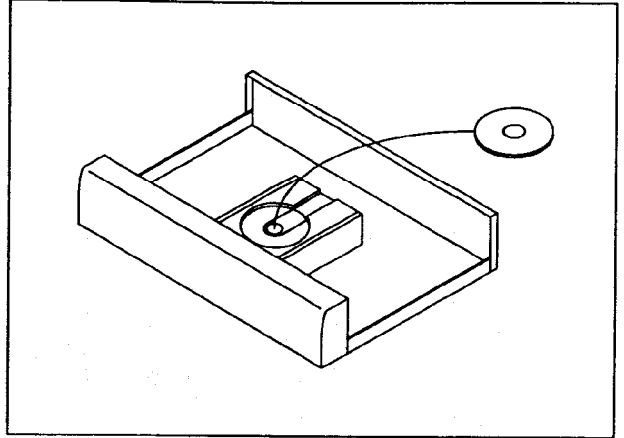


Fig. C Removal of the Disc

Disassembly, Reassembly, Replacement and Adjustment Procedures

1. Disassembling and Reassembling the Casing Parts

1-1. Removing the Top Cover

1. Remove the 7 screws, and remove the Top Cover
While spreading the left and right sides slightly, remove the top cover while lifting the rear portion.


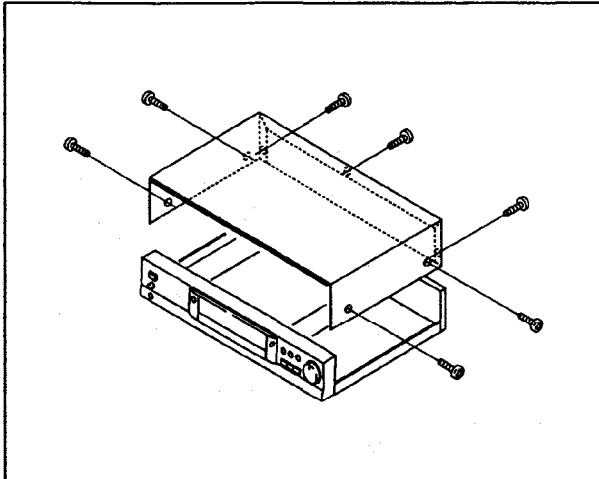


Fig. 1-1-1 Removal of the Top Cover

1-2. Removing the Front Panel

If the tray can be opened electrically.

1. Perform this operation after the top cover has already been removed.
2. Press the Open/Close button and open the tray.
If there is a disc in the tray, remove the disc, taking care not to damage it.
Then remove the tray panel attached to the front edge of the tray.

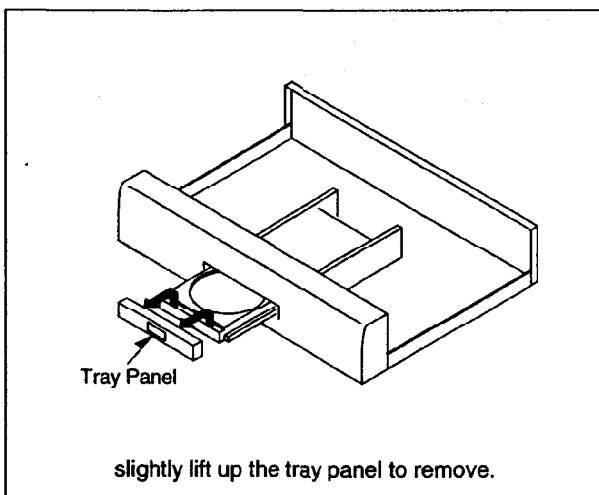

slightly lift up the tray panel to remove.

Fig. 1-2-1 Removal of the Tray Panel

3. Press the Open/Close button and close the tray, then unplug the power cord.
4. Remove the flexible cables which connect the printed circuit board on the front panel with the main unit.
Then remove the 2 screws on the bracket of the front panel.

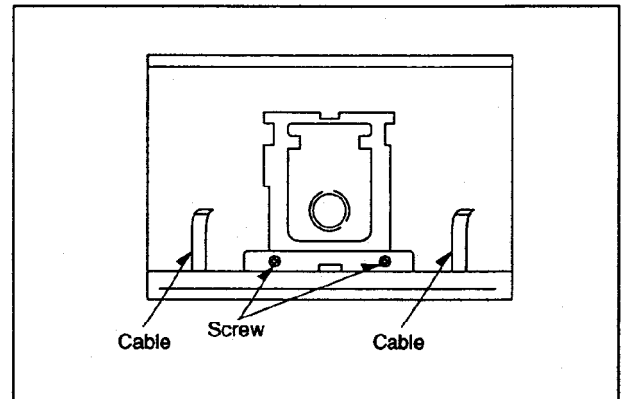


Fig. 1-2-2 Removal of the Front Panel

5. Unhook the 3 tabs on the bottom of the front panel, the 2 tabs on both the left and right and the 2 tabs on the traverse Unit, and remove the front panel.

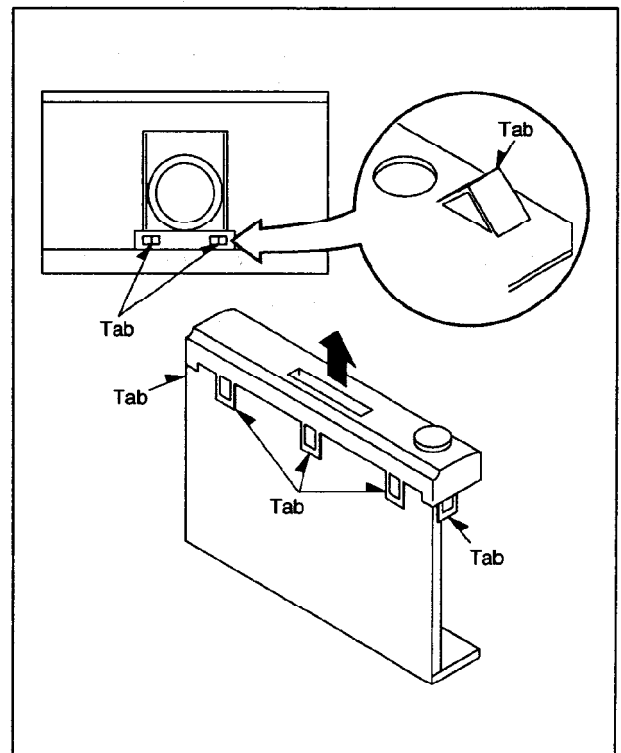


Fig. 1-2-3 Location of Tabs on the Front Panel

If the tray cannot be opened electrically (if the disc does not eject even after pushing the Open/Close button).

1. Perform this procedure after the top cover has already been removed as shown in Fig. A.
2. Remove the 4 screws on the Clamp Support Plate as shown in Fig. B.
3. If there is a disc in the tray, remove the disc, taking care not to damage it as shown in Fig. C.
Refer to "How to Remove the Disc on the Tray in Trouble" with respect to the above procedures.
4. You will see a portion of the rotary cam from the mechanism moving hole at the bottom of the unit. Use a pair of tweezers to move this section to the "Tray Open" position.

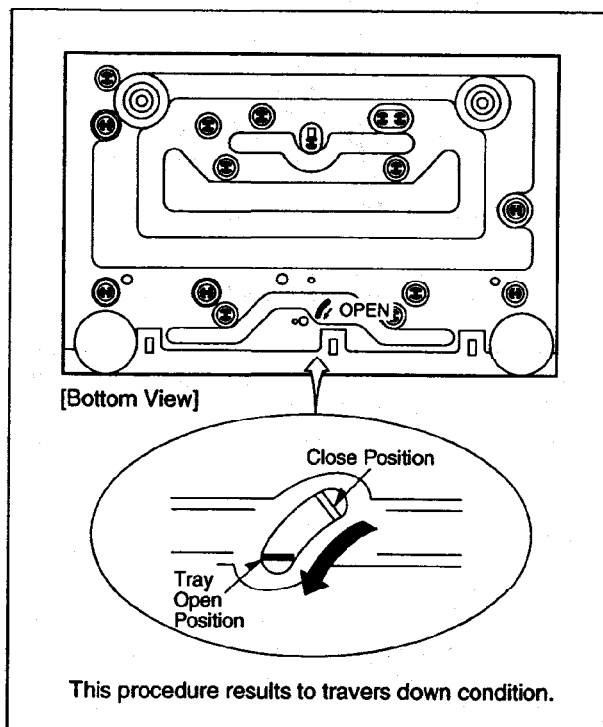


Fig. 1-2-4 Tray Open Position

5. The tray can be moved by hand to the open position.

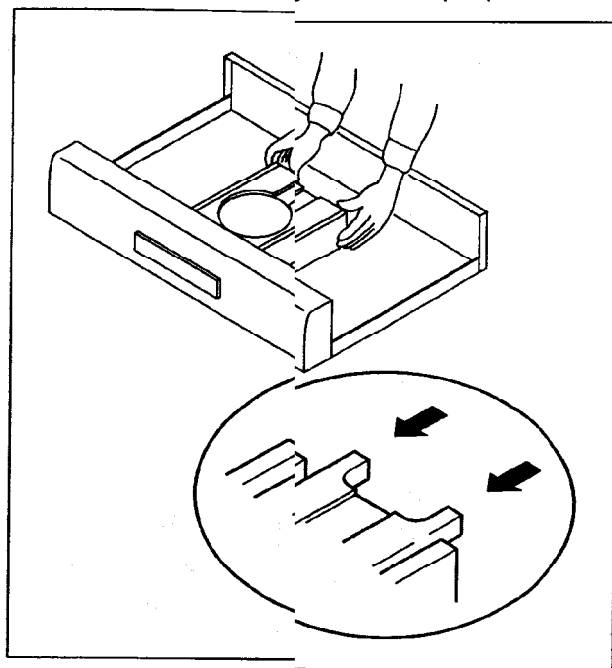


Fig. 1-2-5 Manual Movement of the Tray

6. Remove the tray panel attached to the front edge of the tray as shown in Fig. 1-2-1. Then, load the tray manually and remove the front panel as shown in Fig. 1-2-2 and Fig. 1-2-3.

1-3. Reassembling the Casing Parts

1. Assemble in the reverse order used in the disassembly.
Please obey the following:
After repair is completed, use the following procedure to settle the Traverse Unit.
1. Push the power button and turn off the power.
Verify that the stand-by lamp is on.
2. Unplug the power cord.
3. After the stand-by lamp has been on, the power cord is unplugged to settle the traverse Unit automatically.

2. Disassembling and Reassembling the Loading Base

Please take proper care to prevent static electricity damage when touching the loading base. We recommend that you remove the entire loading base Unit before replacing the laser pick-up.

2-1. Removal of the Loading Base

1. Follow the "Top Cover," "Tray Panel" and "Front Panel" removal instructions when removing the casing parts.

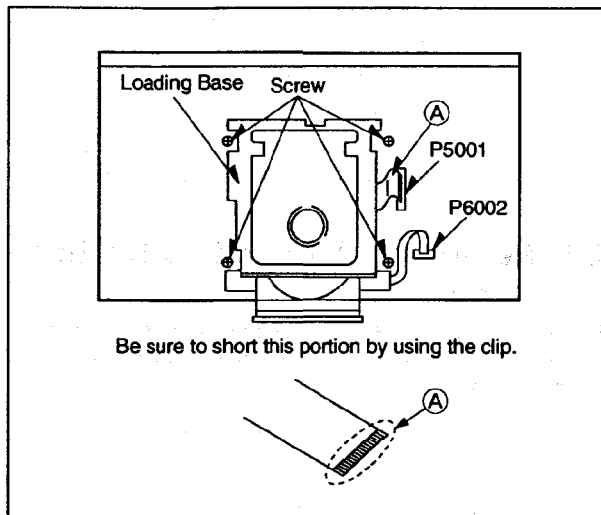


Fig. 2-1 Removal of the Loading Base

2. Remove the 2 Flexible Cables connecting the loading base and the main C.B.A. (Circuit Board Assembly) Static electricity destroys the laser diode. After removing the flexible cable (A), short the flexible cable (A) with a metal clip.
3. Remove the 4 screws attaching the Loading Base.

2-2. Disassembling the Clamp Support Plate and the Clamper

1. Remove the Clamp Support Plate from the Loading Base by removing the 4 screws.

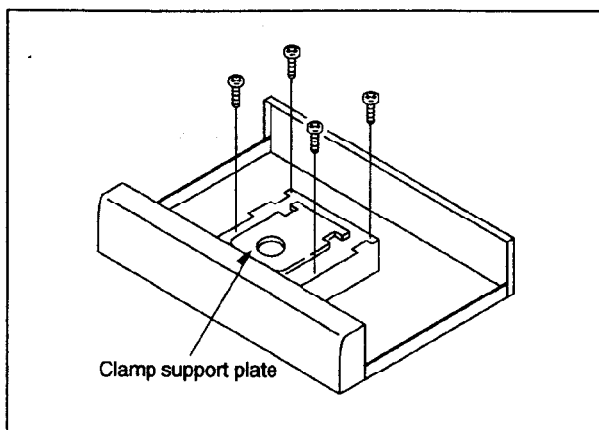


Fig. 2-2-1. Removal of the Clamp Support Plate

2. Remove the 4 screws.
3. Disassemble while unlocking the three tabs on the bottom of the clamper. Be careful not to damage these tabs.

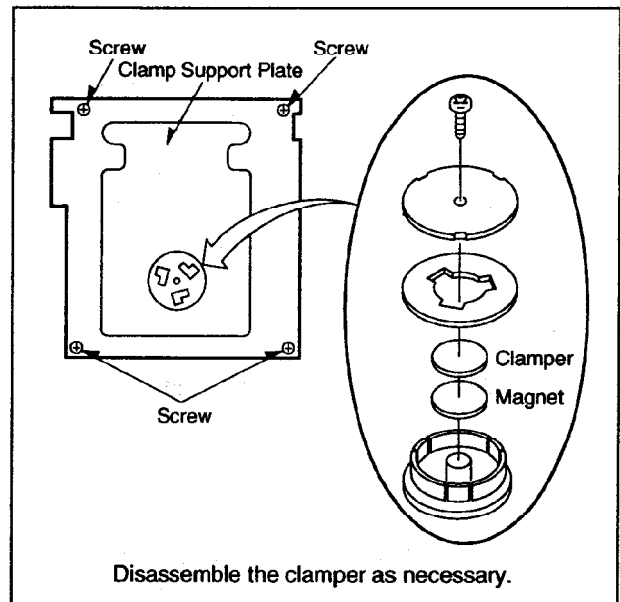


Fig. 2-2-2 Disassembly of the Clamper

2-3. Removing the Loading Tray

1. Move the portion of the Rotary Cam extending from the bottom of the loading base to the "Tray Open" position.

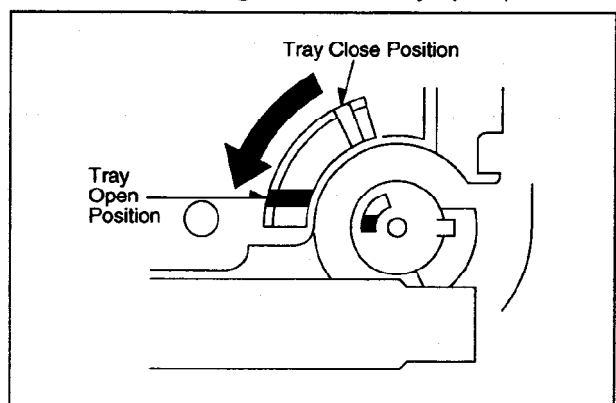


Fig. 2-3-1 Tray Open Position of the Rotary Cam

2. The tray can be manually moved to the open position.

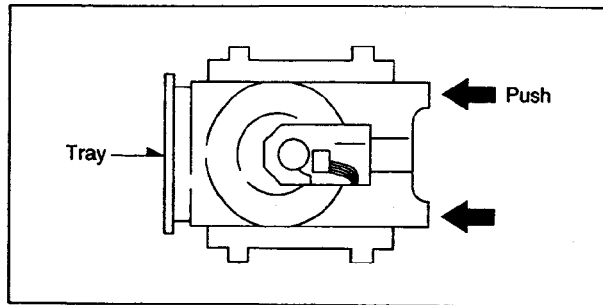


Fig. 2-3-2 Manual Movement of the Tray

3. The left and right catchers are locked so that the tray will not slip out. Therefore remove the tray while spreading these catchers outward.

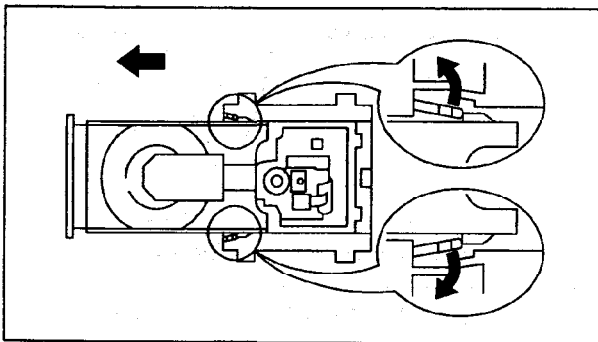


Fig. 2-3-3 Removal of the Tray

2-4. Removing the Traverse Unit

1. Remove the 2 screws setting the Rotary Support Plate Spring. Then remove the 2 screws fixing the Chassis Stoppers and the Springs (two each).

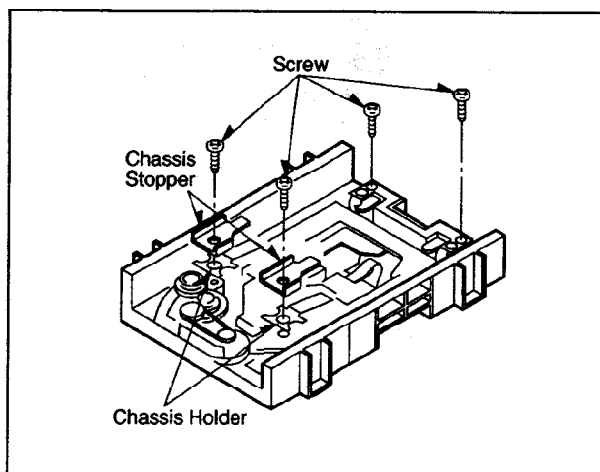


Fig. 2-4-1 Removal of the Traverse Unit

2. The Traverse Unit is connected to the Rotary Cam, slowly lift the back side (the side of Rotary Support Plate Springs) and remove.

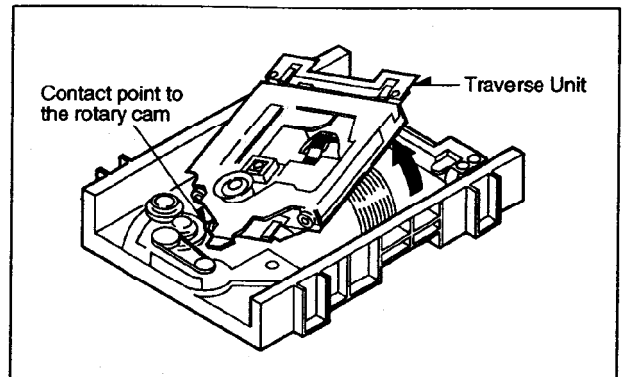


Fig. 2-4-2 Contact Point of the Traverse Unit and the Rotary Cam

2-5. Removing the Loading Section Parts

These parts can be removed even without taking out the Traverse Unit. Each gear and belt can be removed as shown in the figure below.

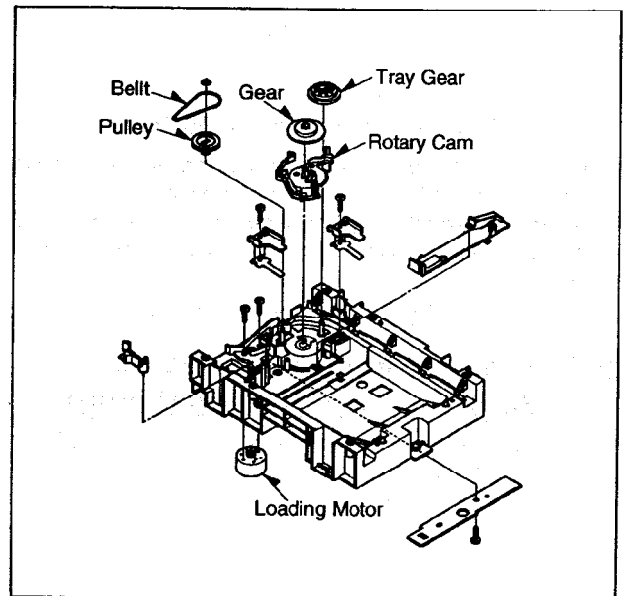


Fig. 2-5 Removal of the Loading Mechanism

2-6. Assembling the Loading Section Parts

Although the phases do not need to be aligned during assembly, please follow the order for assembly.

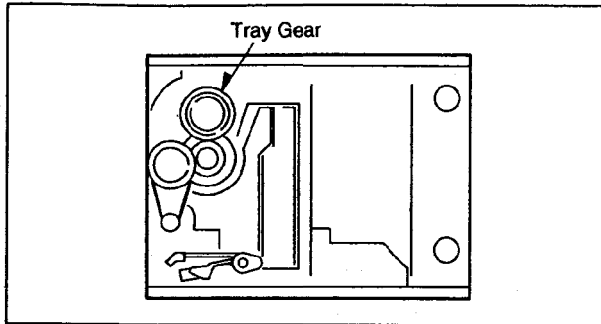


Fig. 2-6 Assembly of the Loading Mechanism

2-7. Assembling the Traverse Unit

1. Pull the Flexible Cable, which sticks out from the Traverse Unit, out from the inner side of the Loading Base.

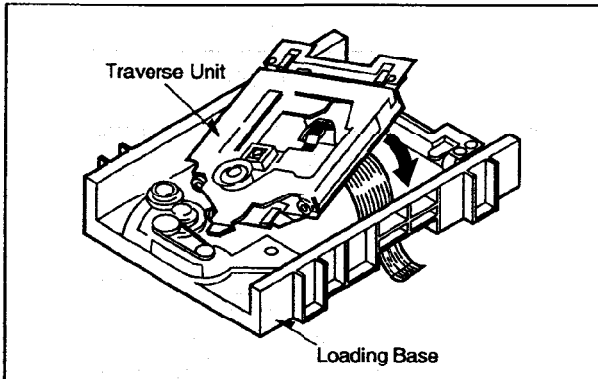


Fig. 2-7-1 Assembly of the Traverse Unit

2. Rotate the Tray Gear counterclockwise, then insert the end of the Traverse Unit into the groove in the Rotary Cam, and tighten the 4 screws.

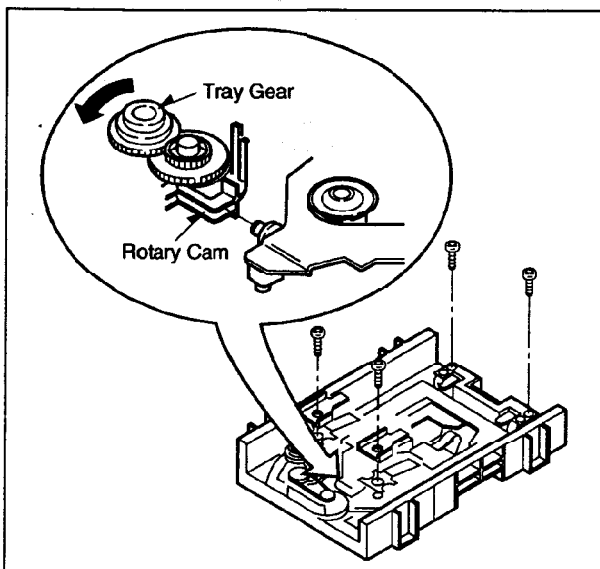


Fig. 2-7-2 Setting of the Traverse Unit and the Rotary Cam

2-8. Attaching the Loading Tray

1. Rotate the Tray Gear counterclockwise and verify that the Traverse Unit is at the lowest position.
2. Push the portion ① of Rotary Cam in the direction of arrow.
3. Confirm that the Pawl of Rotary Cam is locked.

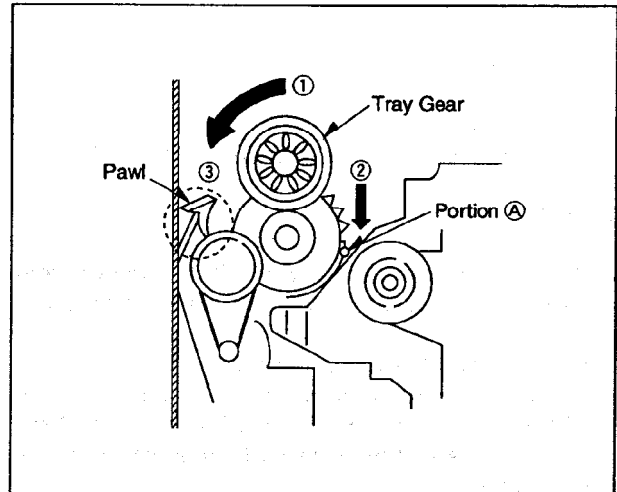


Fig. 2-8-1 Setting of the Tray

2. There is no phase alignment when inserting the tray. Insert the tray straight into the Loading Base.

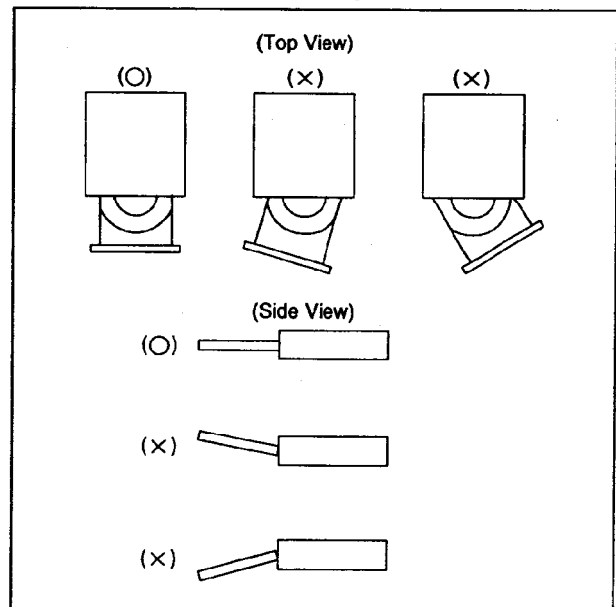


Fig. 2-8-2 Normal Setting of the Tray

2-9. Attaching the Clamp Support Plate

1. Attach the Clamp Support Plate and assemble the Loading Base.

3. Replacing the Main Parts of the Traverse Unit

This section describes the replacement of the main parts in the Traverse Unit, including the Laser Pick-Up, the Disc Motor, the Traverse Motor Unit.

Work should be performed after removing the Traverse Unit.

To Prevent Damage to the Laser Diode

Static electricity destroys the Laser Diode. Always take countermeasures to prevent static electricity damage when performing repairs around the Laser Pick-Up.

1. Do not touch the area around the Laser Pick-Up or the Actuator.
2. Do not check the Laser Diode with a tester or other device (the Laser Diode can be broken quite easily).

3. Short-Circuit the Laser Pick-Up

Solder the Land in the center of the flexible cable of the Laser Pick-Up. This will short-circuit the Laser Diode and help prevent damage from static electricity.

Caution:

Do not forget to remove the soldered Laser Diode short-circuit after finishing repair, and leave the circuit open.

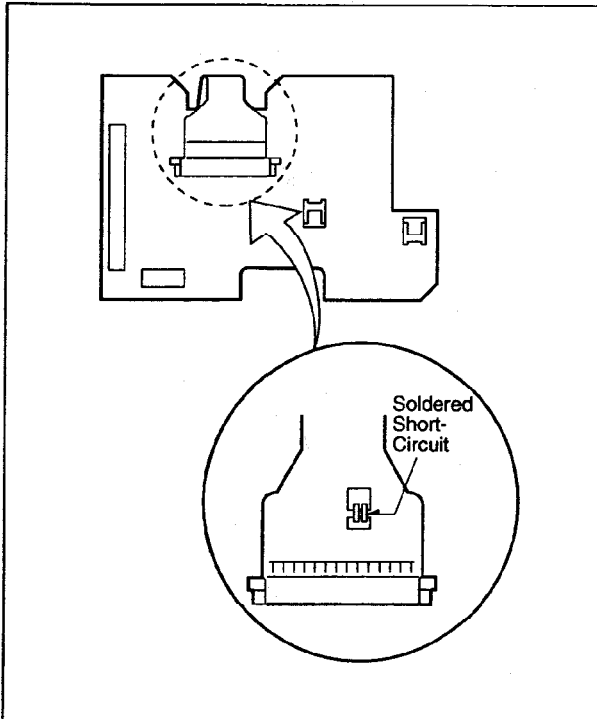


Fig. 3-A Short Circuit of the Laser Diode

Preparation Prior to Replacing the Parts

Always perform this work after taking action to prevent damage to the Laser Diode, regardless of whether or not the Laser Pick-Up is in working order.

1. Remove 2 connectors and 3 flexible cables on the Relay Board. FP0001-FP0003, FP0004 and FP0005.

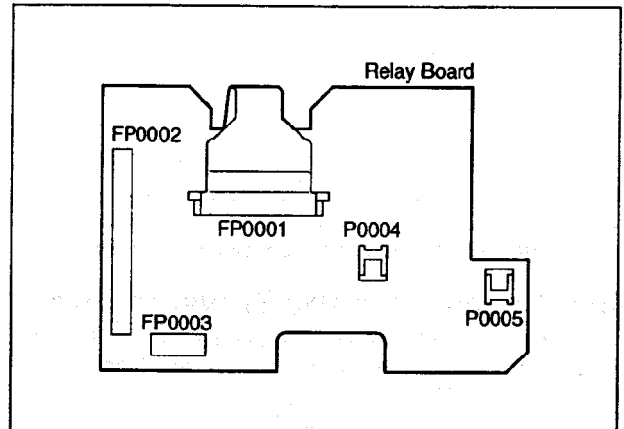


Fig. 3-B Relay Board

2. Remove the 3 screws, so that, traverse Unit can be separated into two sections.

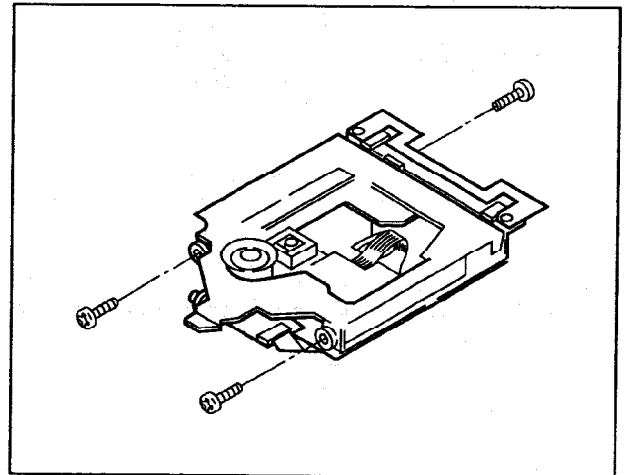


Fig. 3-C Disassembly of the Traverse Unit

3-1. Replacing the Laser Pick-Up

1. Remove the 2 screws.
2. Remove the Laser Pick-Up.

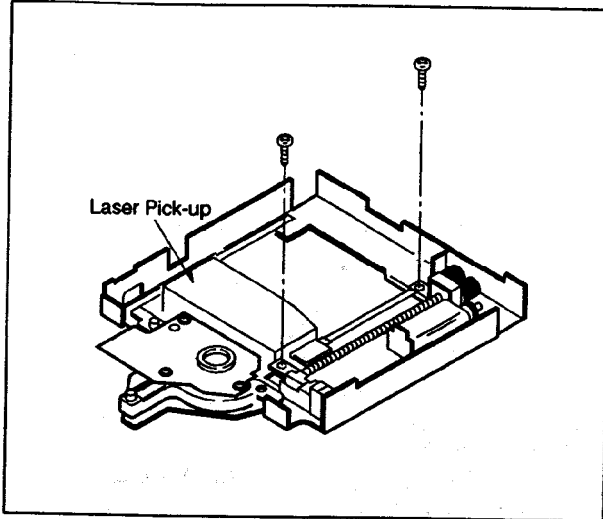


Fig. 3-1 Replacement of the Laser Pick-up

3-2. Replacing the Traverse Motor Unit

1. After the Laser Pick-Up has been removed, remove the 2 screws.
2. Remove the Traverse Motor Unit.

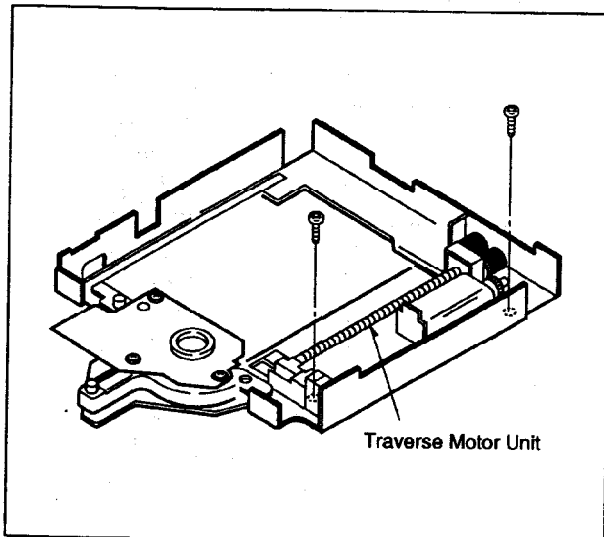


Fig. 3-2 Replacement of the Traverse Motor Unit

3-3. Replacing the Disc Motor

1. This disc motor can be removed after the Traverse Unit has been separated into two sections.
2. Remove the 2 screws A.
3. Remove the 2 screws B using an Hex. wrench.

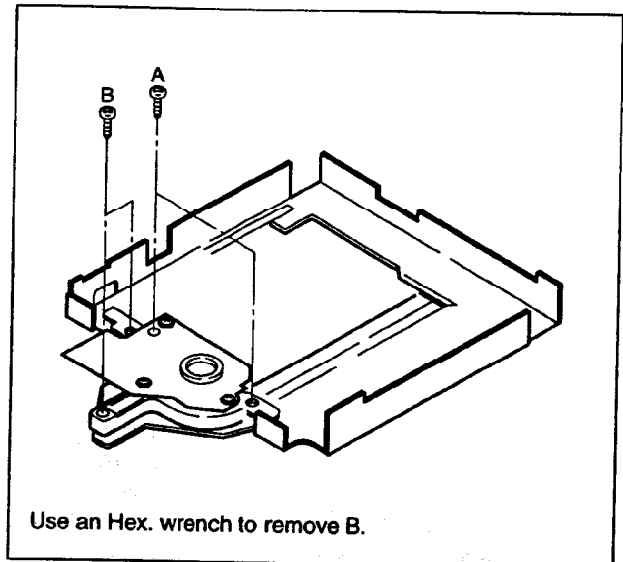


Fig. 3-3 Replacement of the Disc Motor

Note: It is not necessary to remove the Laser Pick-Up for replacement of the Disc Motor.

3-4. Disc Motor Assembly/Tentative Tilt Adjustment

1. For the Disc Motor assembling, install the 2 Screw B (adjustment screw) after firmly tightening the 2 Screws A. (Refer to the figure 3-3.)
2. Use the 2 Screws B to temporarily set the Disc Motor so that it rests parallel to the Base.

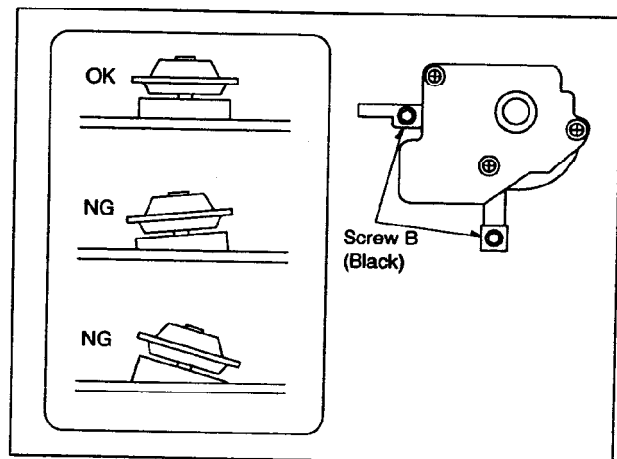


Fig. 3-4 Disc Motor Assembling

3. For final adjustment, proceed the Tilt Adjustment of Disc Motor (Page 2-12).

3-5. Others

1. Reassemble the Laser Pick-Up and the Traverse Motor Unit in precisely the reverse order as they were disassembled.
2. After reassemble the Laser Pick-up and the Traverse Motor Unit, perform the Tilt Adjustment of Disc Motor (Page 2-12).

4. Printed Circuit Board Location and Wiring Connection Diagram

4-1. Printed Circuit Board Location


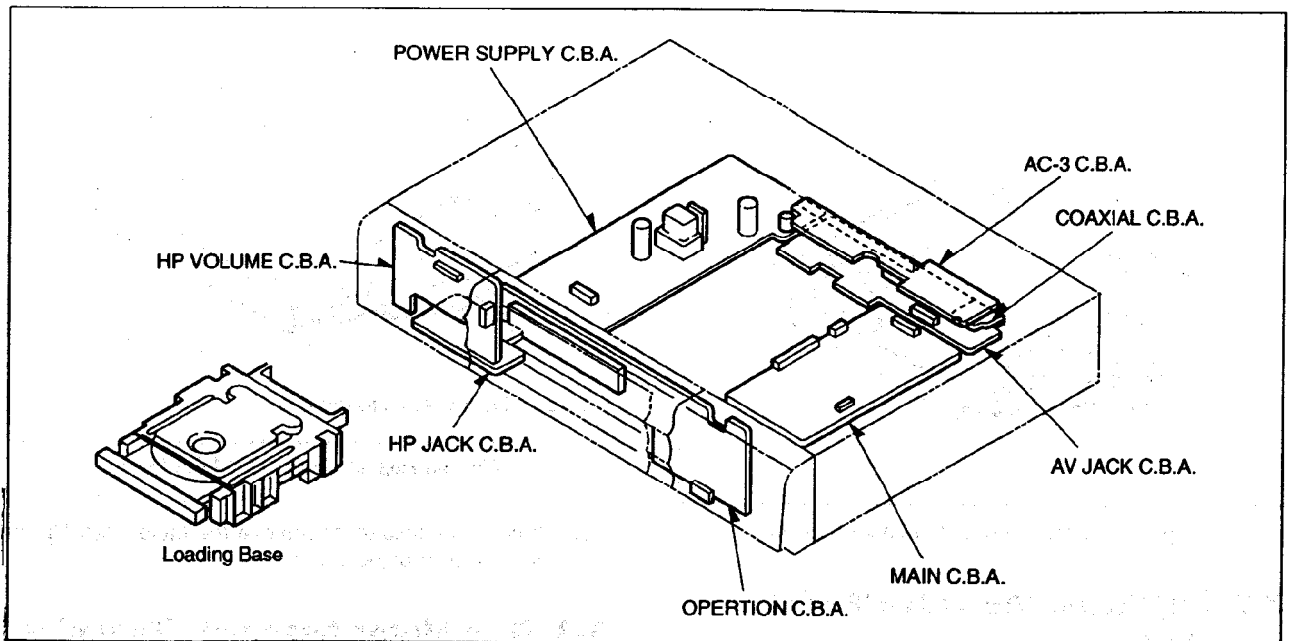


Fig. 4-1 Printed Circuit Board Location

4-2. Wiring Connection Diagram

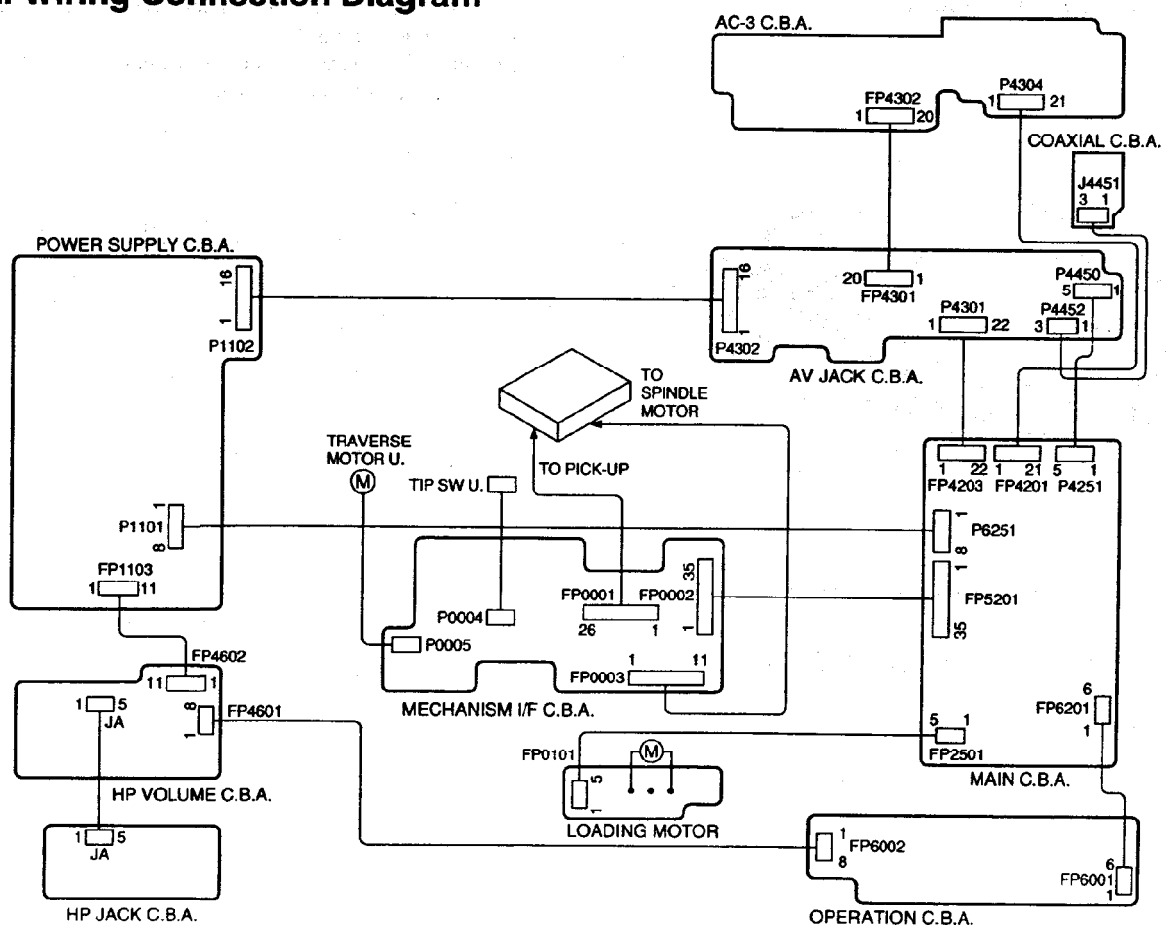

5. Disassembly and Check Method of Printed Circuit Board Assembly (C.B.A.)

5-1. Replacing the Main C.B.A.

1. Remove 4 screws and check the Main C.B.A.

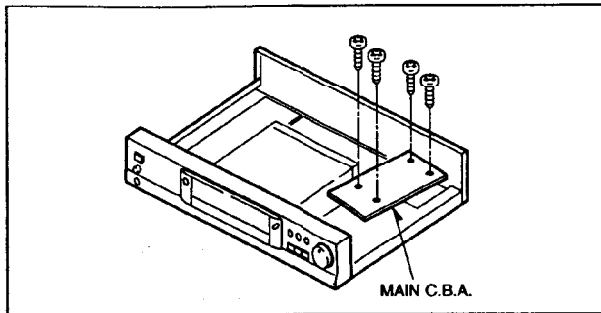


Fig. 5-1 Main C.B.A.

When the Main C.B.A. has been replaced, perform the Initialization.

5-2. Check Method of AV Jack C.B.A., AC-3 C.B.A., and COAXIAL C.B.A.

1. Remove 12 screws on the Rear Panel.

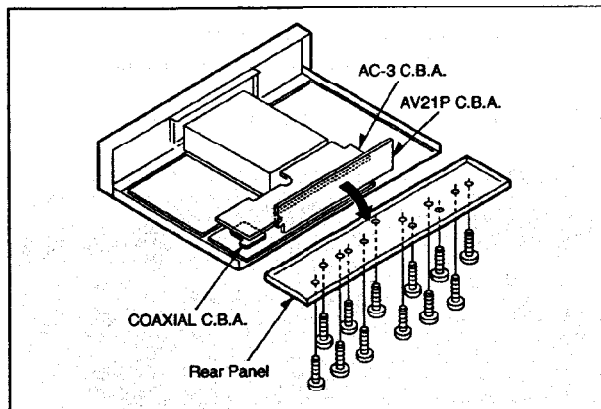


Fig. 5-2-1 Removal of the Rear Panel

2. Remove the AC-3 C.B.A. from the locking card spacer.
3. Remove 3 screws on the AV Jack C.B.A. Disconnect the Cable connected to the Power Supply C.B.A..

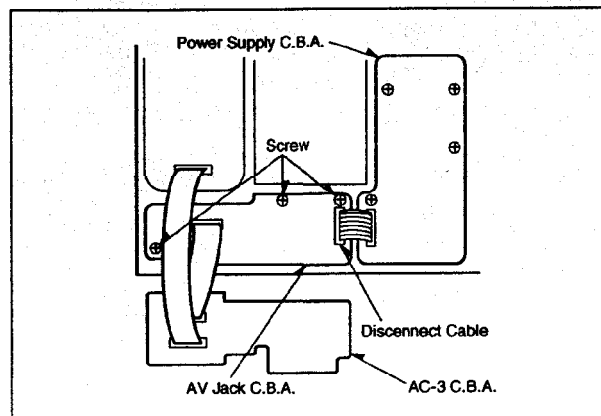


Fig. 5-2-2 AV Jack C.B.A.

5-3. Check Method of Power Supply C.B.A.

1. Remove 2 screws of the AC inlet on the Rear Panel.

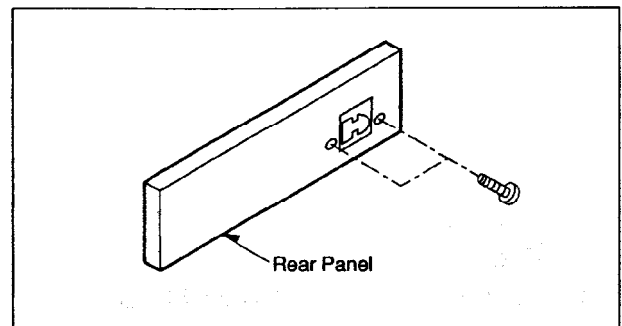


Fig. 5-3-1 AC INLET

2. Remove 4 screws on the Power Supply C.B.A. Disconnect the Cable connected to the AV Jack C.B.A.

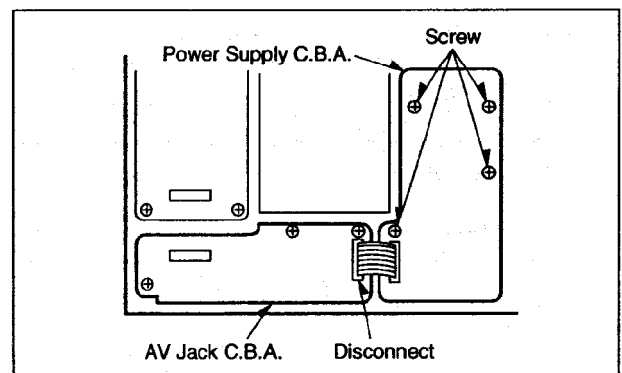


Fig. 5-3-2 Power Supply C.B.A.

5-4. Check Method of Operation C.B.A.

1. Refer to the disassembly procedure (Item 1-2.), and remove the Front Panel.
2. Check the Operation C.B.A. as the figure shown below.

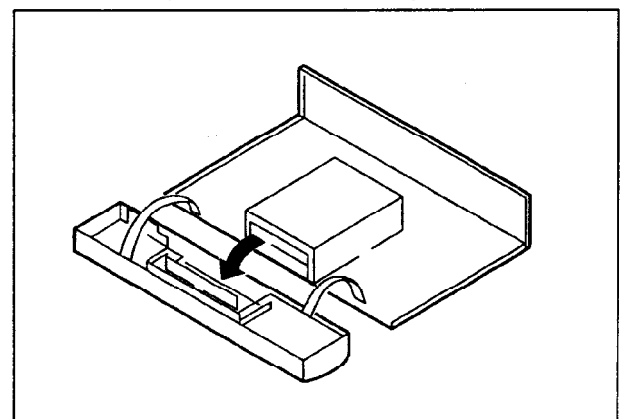


Fig. 5-4 Operation C.B.A.

When the Operation C.B.A. has been replaced, perform the Initialization.

6. Adjustment Procedures

Equipment Necessary for Adjustment

- Measuring Equipments
General measuring equipments including an oscilloscope.
- DVD Test Disc
Part No. DVDT-S01 (Single Layer)
- Video-CD/CD-DA Test Disc
Part No. PVCD_K06
- Multi-system TV Monitor
- Others
Conventional tools, Hex. wrench 2.0 mm, etc.

6-1. Mechanical Adjustment Procedures

6-1-1. Tilt Adjustment of Disc Motor

After replacing parts in the Traverse Unit, it is necessary to adjust the Tilt Adjustment of Disc motor from bottom side. Please follow the following procedures for adjusting:

Caution:

- Optical adjustment inside the laser pick-up is not possible.
- Prior to adjusting, take countermeasures to prevent damage from static electricity.

When the following parts have been replaced, disc motor adjustment will be required.

- The disc motor.
- The laser pick-up.
- The Traverse motor unit.
- The parts around the laser pick-up (rail, etc.).

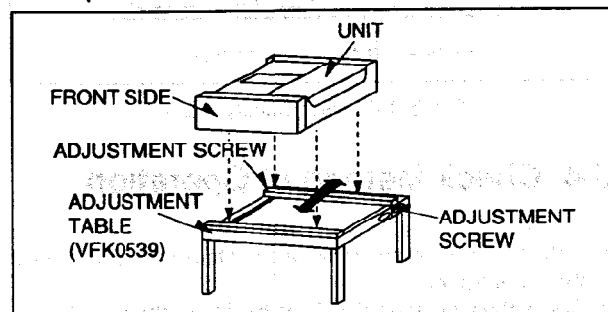


Fig. 6-1-1 Adjustment Table

Use a hex. wrench (2.0 mm) to adjust from the hole of the bottom plate.

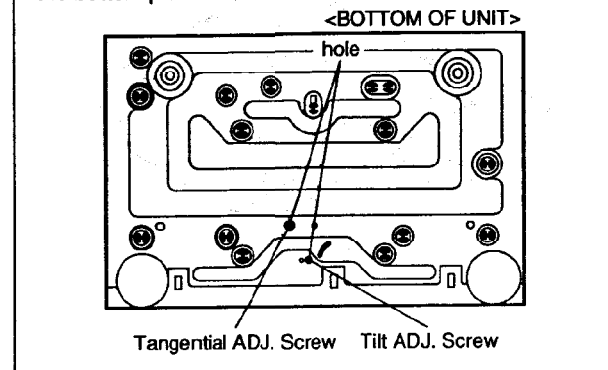


Fig. 6-1-2 Adjustment Hole of the Bottom Plate

Measurement Point	Adjustment Point	Mode	Test Disc
TL5206 GND: Chassis	Tilt adjustment screw	Play title 8, Pause	DVDT-S01
Measuring Equipment		Adjustment Value	
Oscilloscope DC 500mV/div., 20 msec./div.		Adjust until the bottom section of the waveform becomes flat and the DC components are minimum.	

Table 6-1 Tilt Adjustment

- Play back the DVD test disc and then place the unit in play mode with title 8, then push the Pause button.
 - At first, Adjust Tangential Adjustment Screw then adjust Tilt Adjustment Screw with the Hex Wrench (2.0 mm) from bottom side.
Repeat 2 to 3 times alternately until the waveform at TL5206 indicated below is obtained.
Final adjustment should be Tilt Adjustment.
- The valley sections of the waveform should be as flat as possible.
 - The total DC level should be obtained minimized as much as possible.
 - The waveform whisker sections will not disappear.

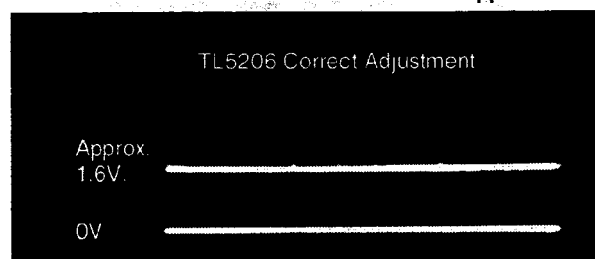


Fig. 6-1-3 Correct Tilt Adjustment Waveform

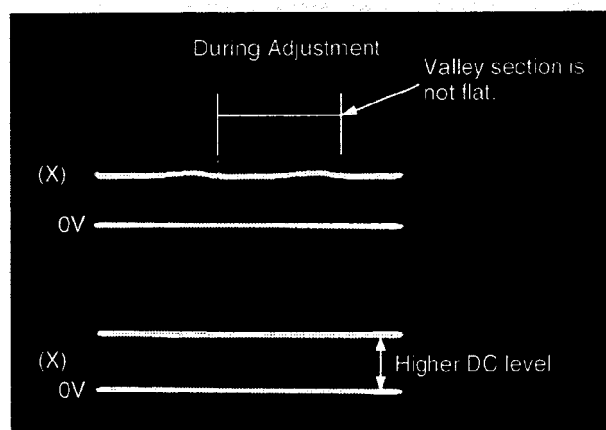


Fig. 6-1-4 Tilt Adjustment Waveform During Adjusting

After Adjusting Check the following

- After adjusting by the DVD test disc, play a video CD or CD-DA and check that there is no abnormal operation.

The following adjustment is electrical adjustments. These adjustments are to be performed after replacing the printed circuit boards.

6-2-1. Video Output (Luminance Signal) Adjustment

Measurement Point	Adjustment Point	Mode	Disc
Video Output Pin Terminal GND: Chassis	VR3232	Playback Title 12 (Colour Bar)	DVDT-S01
Measuring Device		Adjustment Value	
Oscilloscope 500 mV/div, 10 μ s/div		1000 $\pm$ 20 mV p-p	

For compatibility of video signal output.

1. Connect the monitor TV to the video output terminal and terminate at 75 Ohms.
2. Play back the color bar part Title 12 of the DVD Test Disc title.
3. Adjust the VR3232 so that the luminance signal output is as shown below.
4. Confirm the signal on the AV Jack board side.

Adjustment Value = 1000 ± 20 mV p-p

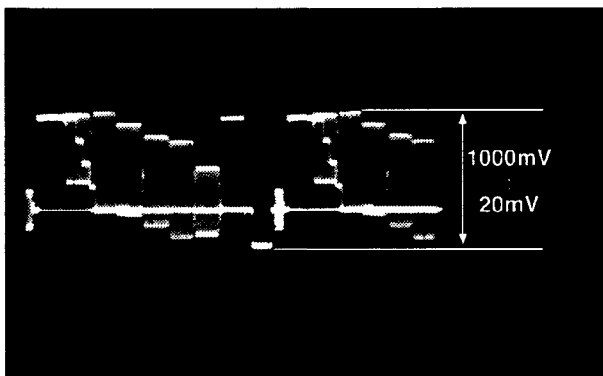


Fig. 6-2 Luminance Signal Output

6-2-2. Video Output (Chrominance Signal) Adjustment

Measurement Point	Adjustment Point	Mode	Disc
Video Output Pin Terminal GND: Chassis	VR3233	Playback Title 12 (Colour Bar)	DVDT-S01
Measuring Device		Adjustment Value	
Oscilloscope 500 mV/div, 10 μ s/div		657 $\pm$ 13 mV p-p	

For compatibility of video signal output.

1. Connect the monitor TV to the video output terminal and terminate at 75 Ohms.
2. Play back the color bar part Title 12 of the DVD Test Disc title.
3. Adjust the VR3233 so that the chrominance (CYAN) signal output is as shown below.
4. Confirm the signal on the AV Jack board side.

Adjustment Value = 657 ± 13 mV p-p


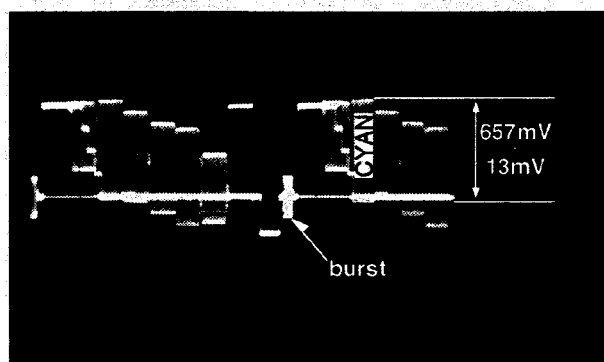


Fig. 6-3 Chrominance Signal Output

Test Points & Controls Location

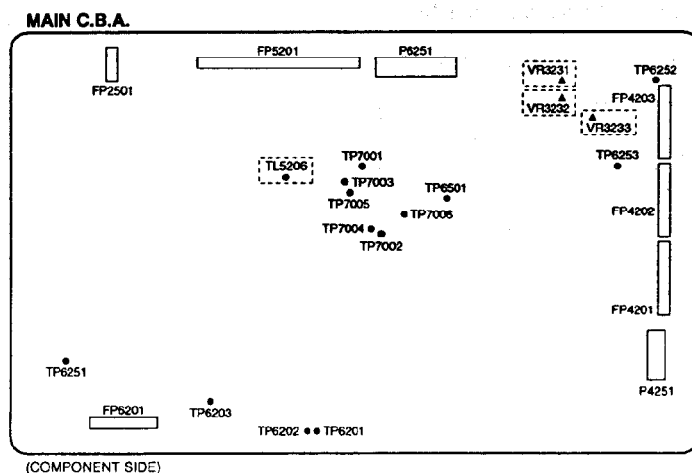

6-2-3. Fc Correction

NOTE: This adjustment should be performed only when the FEP IC (IC25201) has been replaced.

Measurement Point	Adjustment Point	Mode	Test Disc (Input Signal)
TC5236 TC5235 TC2006	—	—	—
Measuring Equipment		Adjustment Value	
DC POWER SUPPLY Oscilloscope 200 mV/div, 50 ns/div, AC coupling		REFER TO FIG. 6-2-4B	

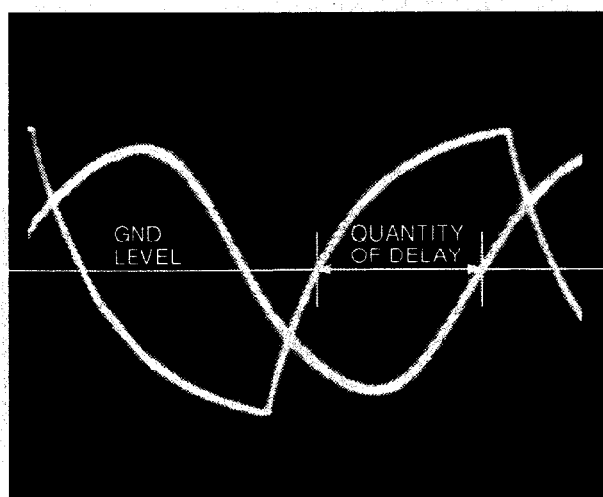



Fig. 6-2-4A

1. During pressing both [STILL/PAUSE] and [OPEN/CLOSE] buttons of the DVD Player, push [CLEAR] button of the Remote Controller.
2. Connect the oscilloscope to TC5236 for CH-1 and TC5235 for CH-2 (Trigger).
3. According to a quantity of delay, supply TC2006 with DC Voltage by the DC Power Supply as shown in Fig. 6-2-4B.
4. The letter of [FEP_ * *] is displayed on the FL display.
5. Confirm whether shown in Fig. 6-2-4B agrees with letter of [FEP_ * *].
6. Push [STOP] button of the DVD Players. (Write in E2PROM)


Quantity of delay	TC2006 SUPPLY Voltage	FL Display
~ 325 ns	1.2 V	FEP_10
325 ~ 355 ns	1.7 V	FEP_11
355 ~ 385 ns	2.1 V	FEP_12
385 ~ 415 ns	2.6 V	FEP_13
415 ~ ns	3.1 V	FEP_14

Fig. 6-2-4B

7. Lubrication Information

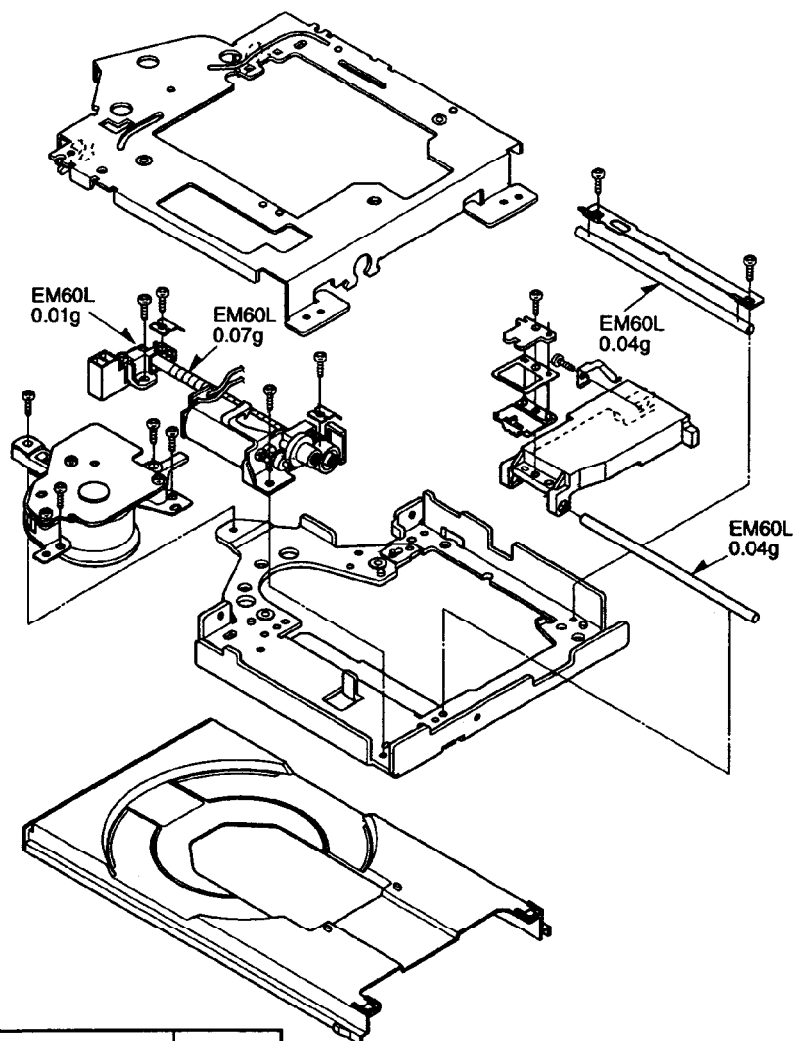

	Appearance	Part No
Grease	Molycoat EM30LG (20g) 	JGS0091
Grease	Molycoat EM60L (20g) 	JGS0092
Test Disc	DVD Test Disc 	DVDT-S01

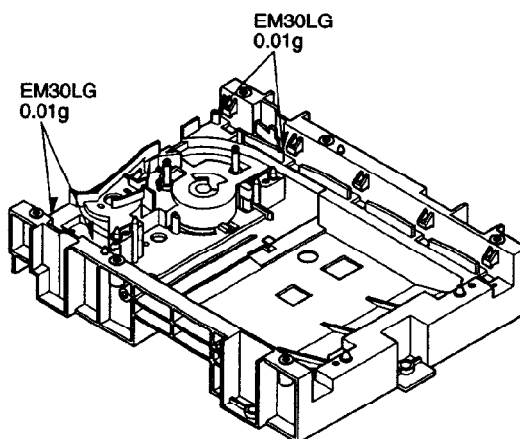



SECTION 3 BLOCK DIAGRAM/SCHEMATIC DIAGRAM/ CIRCUIT BOARD DIAGRAM


3-1. ABBREVIATIONS


INITIAL/LOGO	ABBREVIATIONS	INITIAL/LOGO	ABBREVIATIONS
A	A0-UP ACLK AD0-UP ADATA ALE AMUTE AREQ ARF ASI ASO ASYN		DSC DSLIF DVD
	ADDRESS AUDIO CLOCK ADDRESS BUS AUDIO PES PACKET DATA ADDRESS LATCH ENABLE AUDIO MUTE AUDIO PES PACKET REQUEST AUDIO RF SERVO AMP INVERTED INPUT SERVO AMP OUTPUT AUDIO WORD DISTINCTION SYNC		DIGITAL SERVO CONTROLLER DATA SLICE LOOP FILTER DIGITAL VIDEO DISC
B	BCK BCKIN BDO BLKCK BOTTOM BYP BYTCK		EC ECR
	BIT CLOCK (PCM) BIT CLOCK INPUT BLACK DROP OUT SUB CODE BLOCK CLOCK CAP. FOR BOTTOM HOLD BYPATH BYTE CLOCK		ENCSEL ETMCLK ETSCLK
C	CAV CBDO CD CDSCK CDSRDATA CDRF CDV CHNDATA CKSL CLV COFTR CPA CPCS CPDT CPUADR CPUADT CPUIRQ CPRD CPWR CS CSYNIN CSYNOUT		FBAL FCLK FE FFI FEO FG FSC FSCK
	CONSTANT AUGULAS VELOCITY CAP. BLACK DROP OUT COMPACT DISC CD SERIAL DATA CLOCK CD SERIAL DATA CD RF (EFM) SIGNAL COMPACT DISC-VIDEO CHANNEL DATA SYSTEM CLOCK SELECT CONSTANT LINEAR VELOCITY CAP. OFF TRACK CPU ADDRESS CPU CHIP SELECT CPU DATA CPU ADDRESS LATCH CPU ADDRESS DATA BUS CPU INTERRUPT REQUEST CPU READ ENABLE CPU WRITE ENABLE CHIP SELECT COMPOSITE SYNC IN COMPOSITE SYNC OUT		FOCUS BALANCE FRAME CLOCK FOCUS ERROR FOCUS ERROR AMP INVERTED INPUT FOCUS ERROR AMP OUTPUT FREQUENCY GENERATOR FREQUENCY SUB CARRIER FS (384 OVER SAMPLING) CLOCK
D	DACCK DEEMP DEMPH DIG0-UP DIN DMSRCK DMUTE DO DOUT0-UP DRF DRPOUT DREQ DRESP		GND
	D/A CONVERTER CLOCK DEEMPHASIS BIT ON/OFF DEEMPHASIS SWITCHING FL DIGIT OUTPUT DATA INPUT DM SERIAL DATA READ CLOCK DIGITAL MUTE CONTROL DROP OUT DATA OUTPUT DATA SLICE RF (BIAS) DROP OUT SIGNAL DATA REQUEST DATA RESPONSE		COMMON GROUNDING (EARTH)
		E	HA0-UP HD0-UP HINT HRXW
			HOST ADDRESS HOST DATA HOST INTERRUPT HOST READ/WRITE
		F	IECOUT IPFLAG IREF ISEL
			IEC958 FORMAT DATA OUTPUT INTERPOLATION FLAG I (CURRENT) REFERENCE INTERFACE MODE SELECT
		G	LDON LPC LRCK
			LASER DIODE CONTROL LASER POWER CONTROL L CH/R CH DISTINCTION CLOCK
		H	MA0-UP MCK MCKI MCLK MDATA MDQ0-UP MDQM MLD MPEG
			MEMORY ADDRESS MEMORY CLOCK MEMORY CLOCK INPUT MEMORY SERIAL COMMAND CLOCK MEMORY SERIAL COMMAND DATA MEMORY DATA INPUT/OUTPUT MEMORY DATA I/O MASK MEMORY SERIAL COMMAND LOAD MOTION PICTURE IMAGE CODING EXPERT GROUP
		I	ODC OFTR OSCI OSCO OSD
			OPTICAL DISC CONTROLLER OFF TRACKING OSCILLATOR INPUT OSCILLATOR OUTPUT ON SCREEN DISPLAY
		L	P1-UP PCD PCK
			PORT CD TRACKING PHASE DIFFERENCE PLL CLOCK

3-2. OVERALL BLOCK DIAGRAM

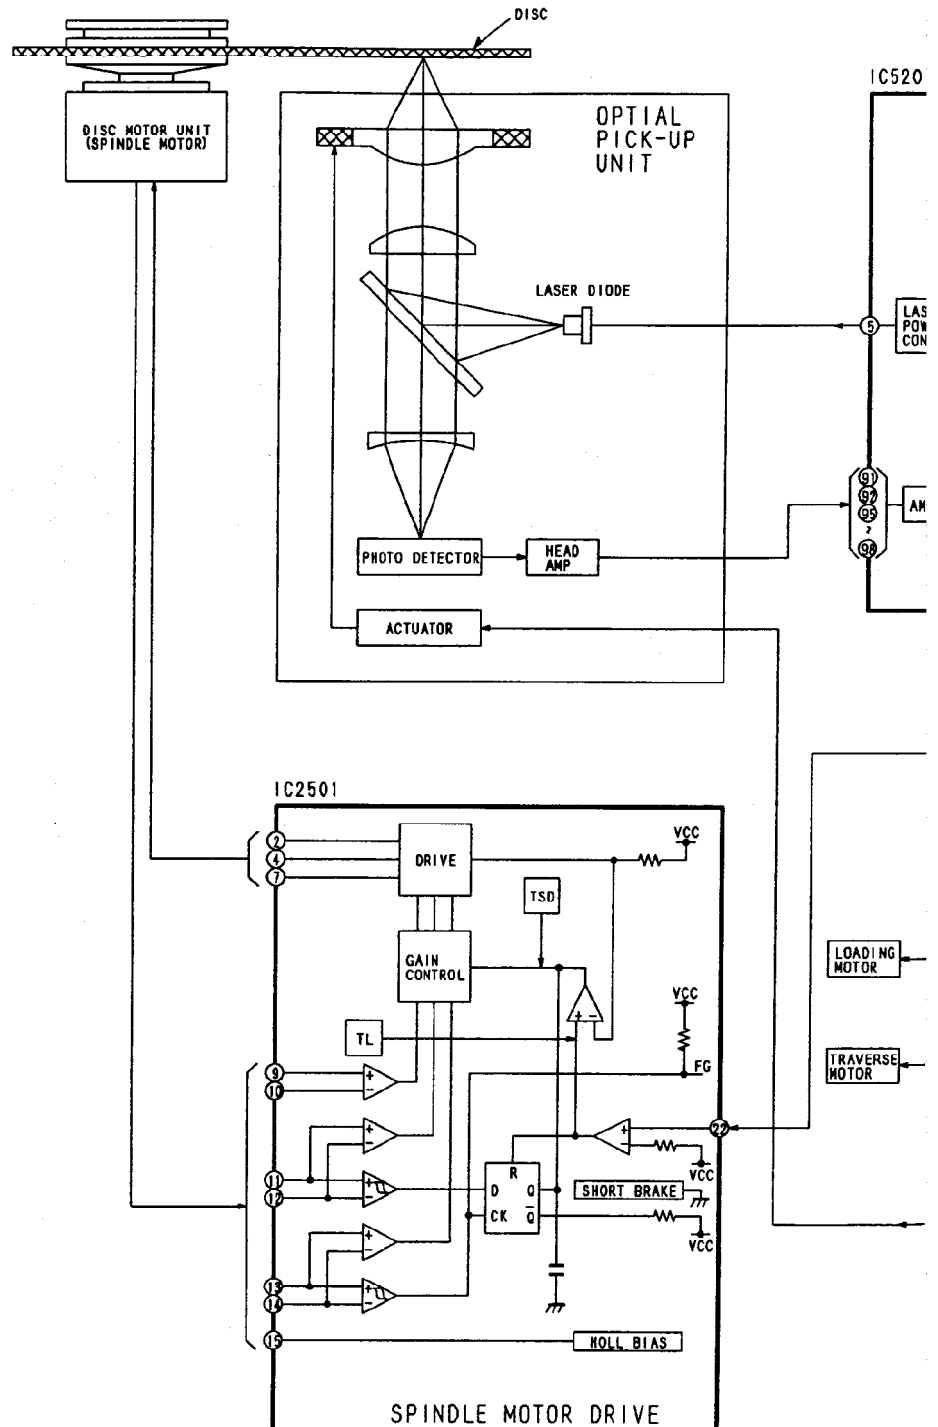

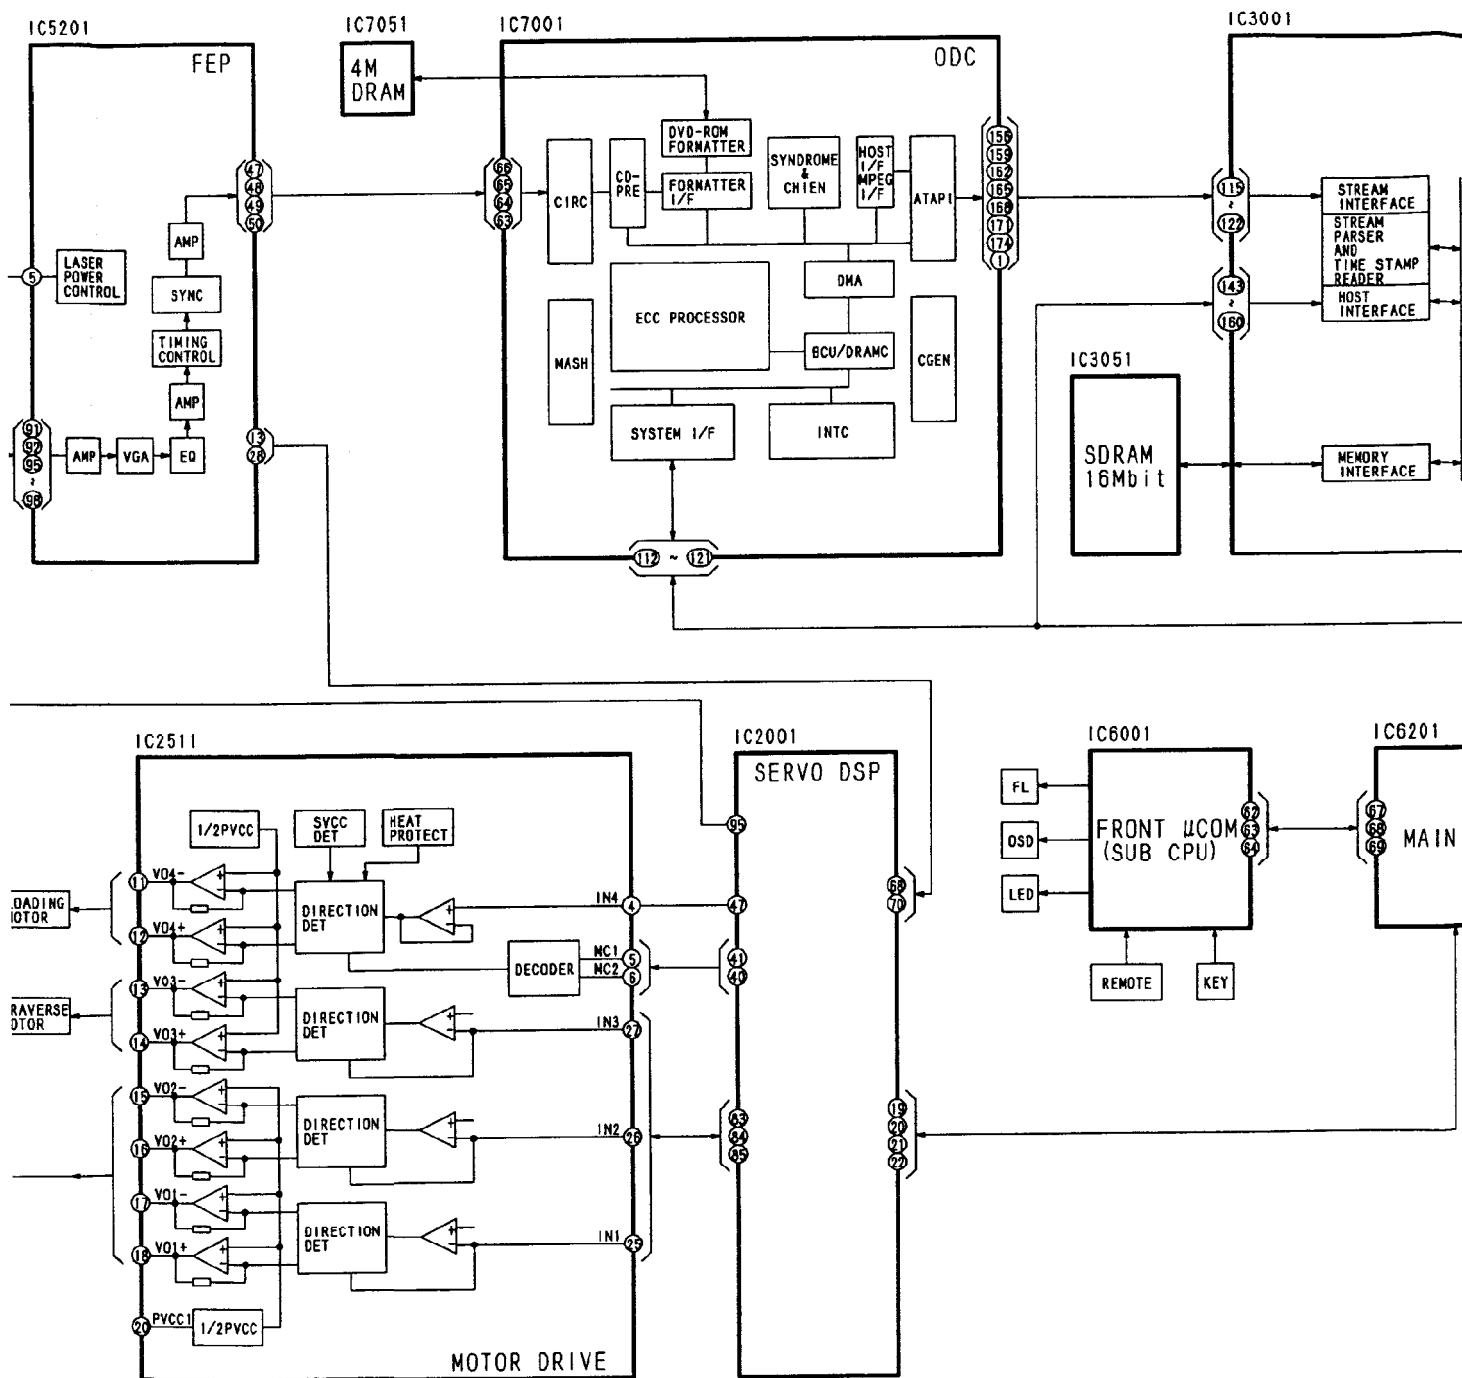


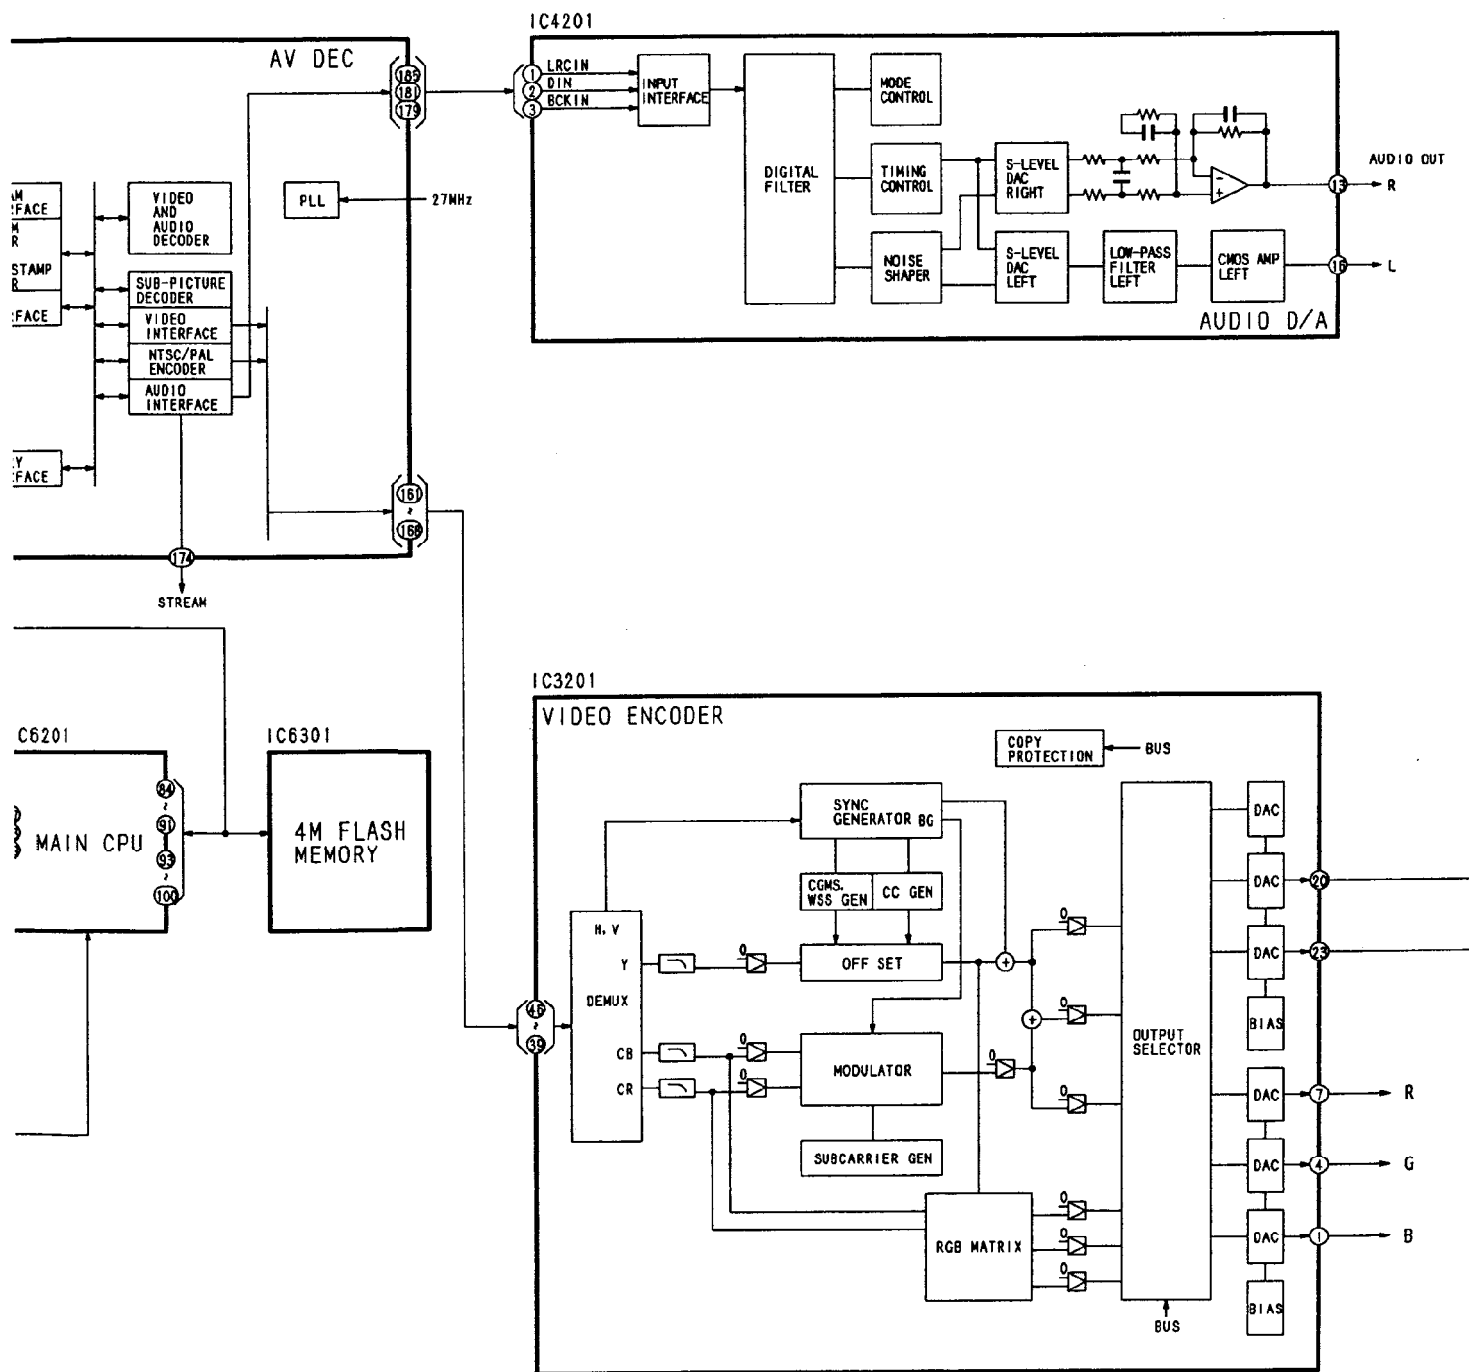


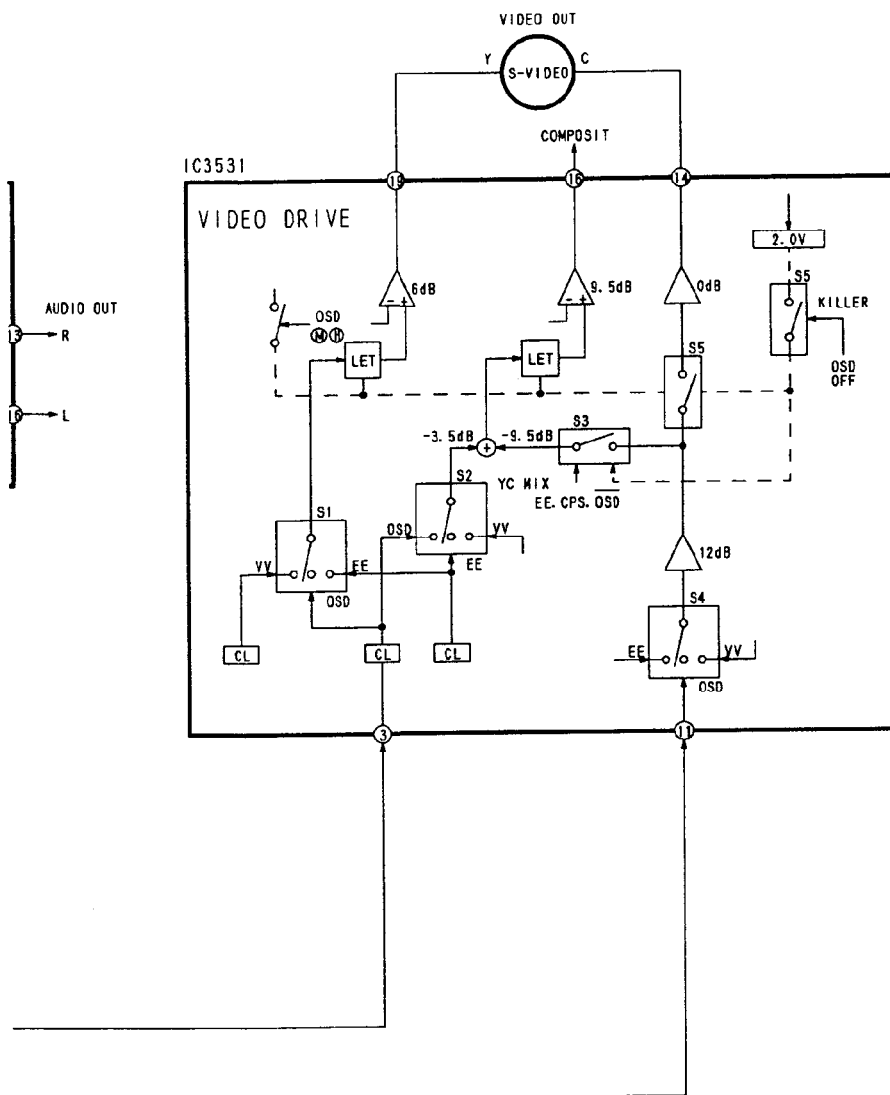


→ R
→ G
→ B

3-3. SERVO BLOCK DIAGRAM

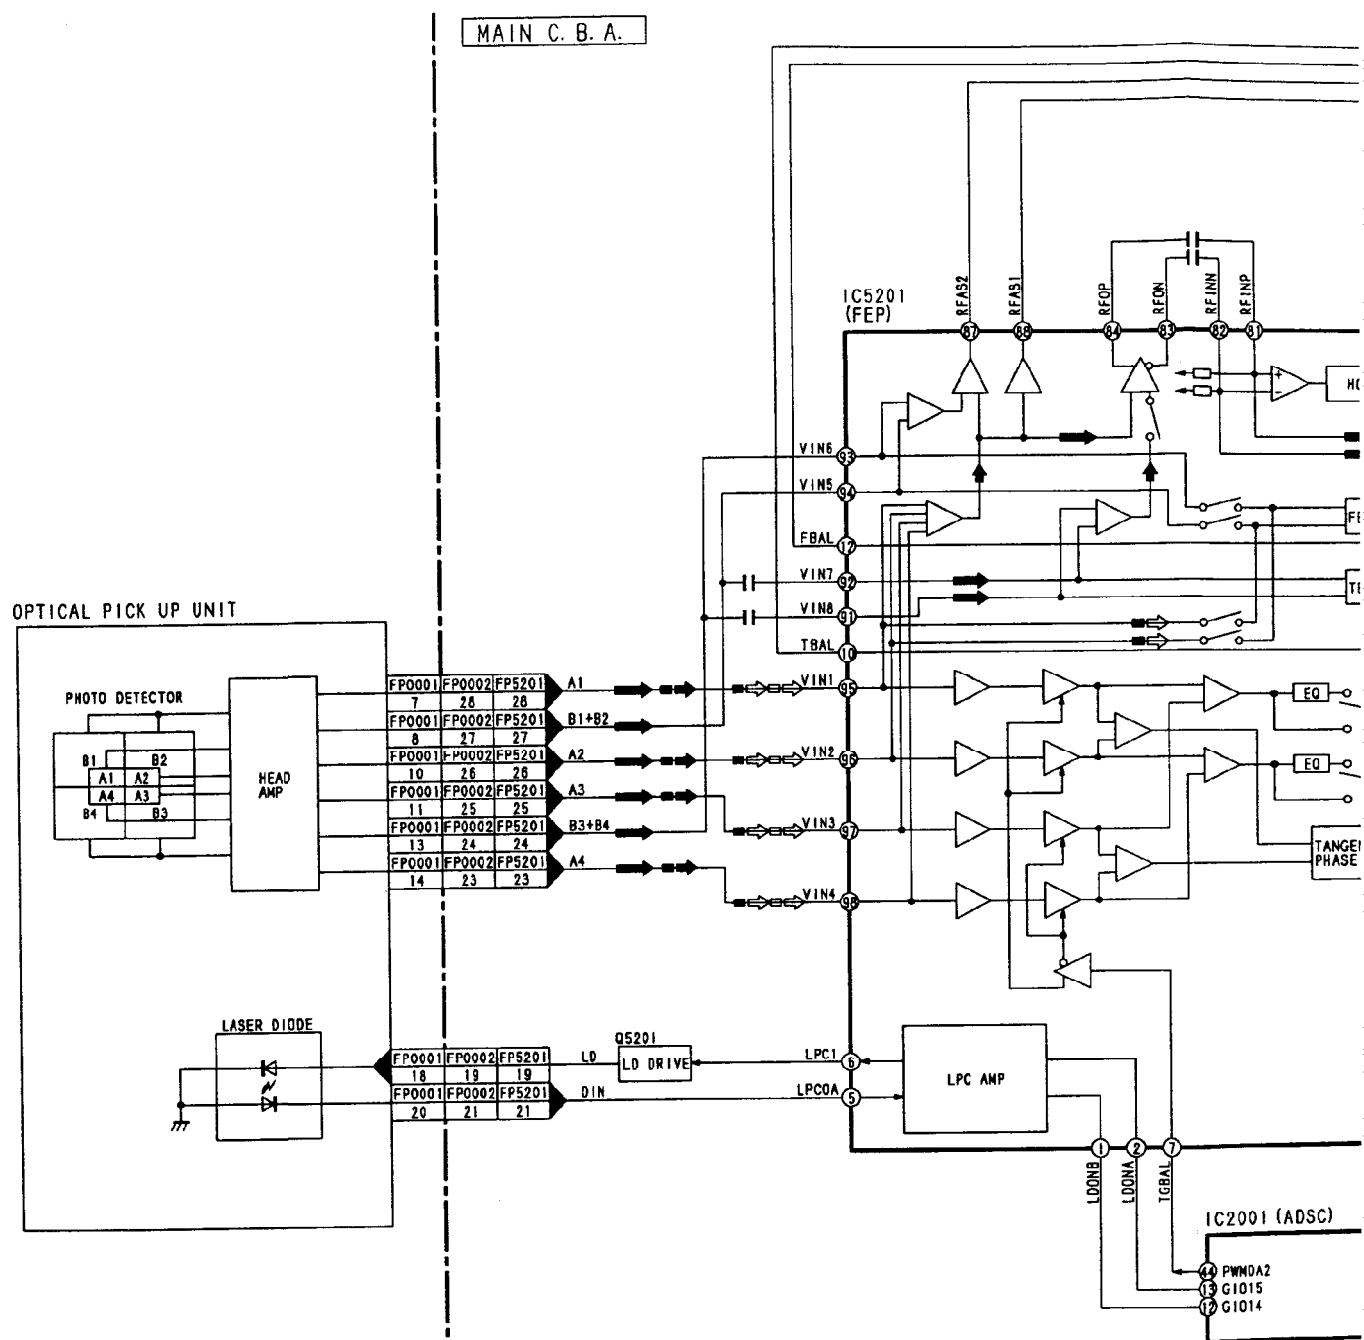


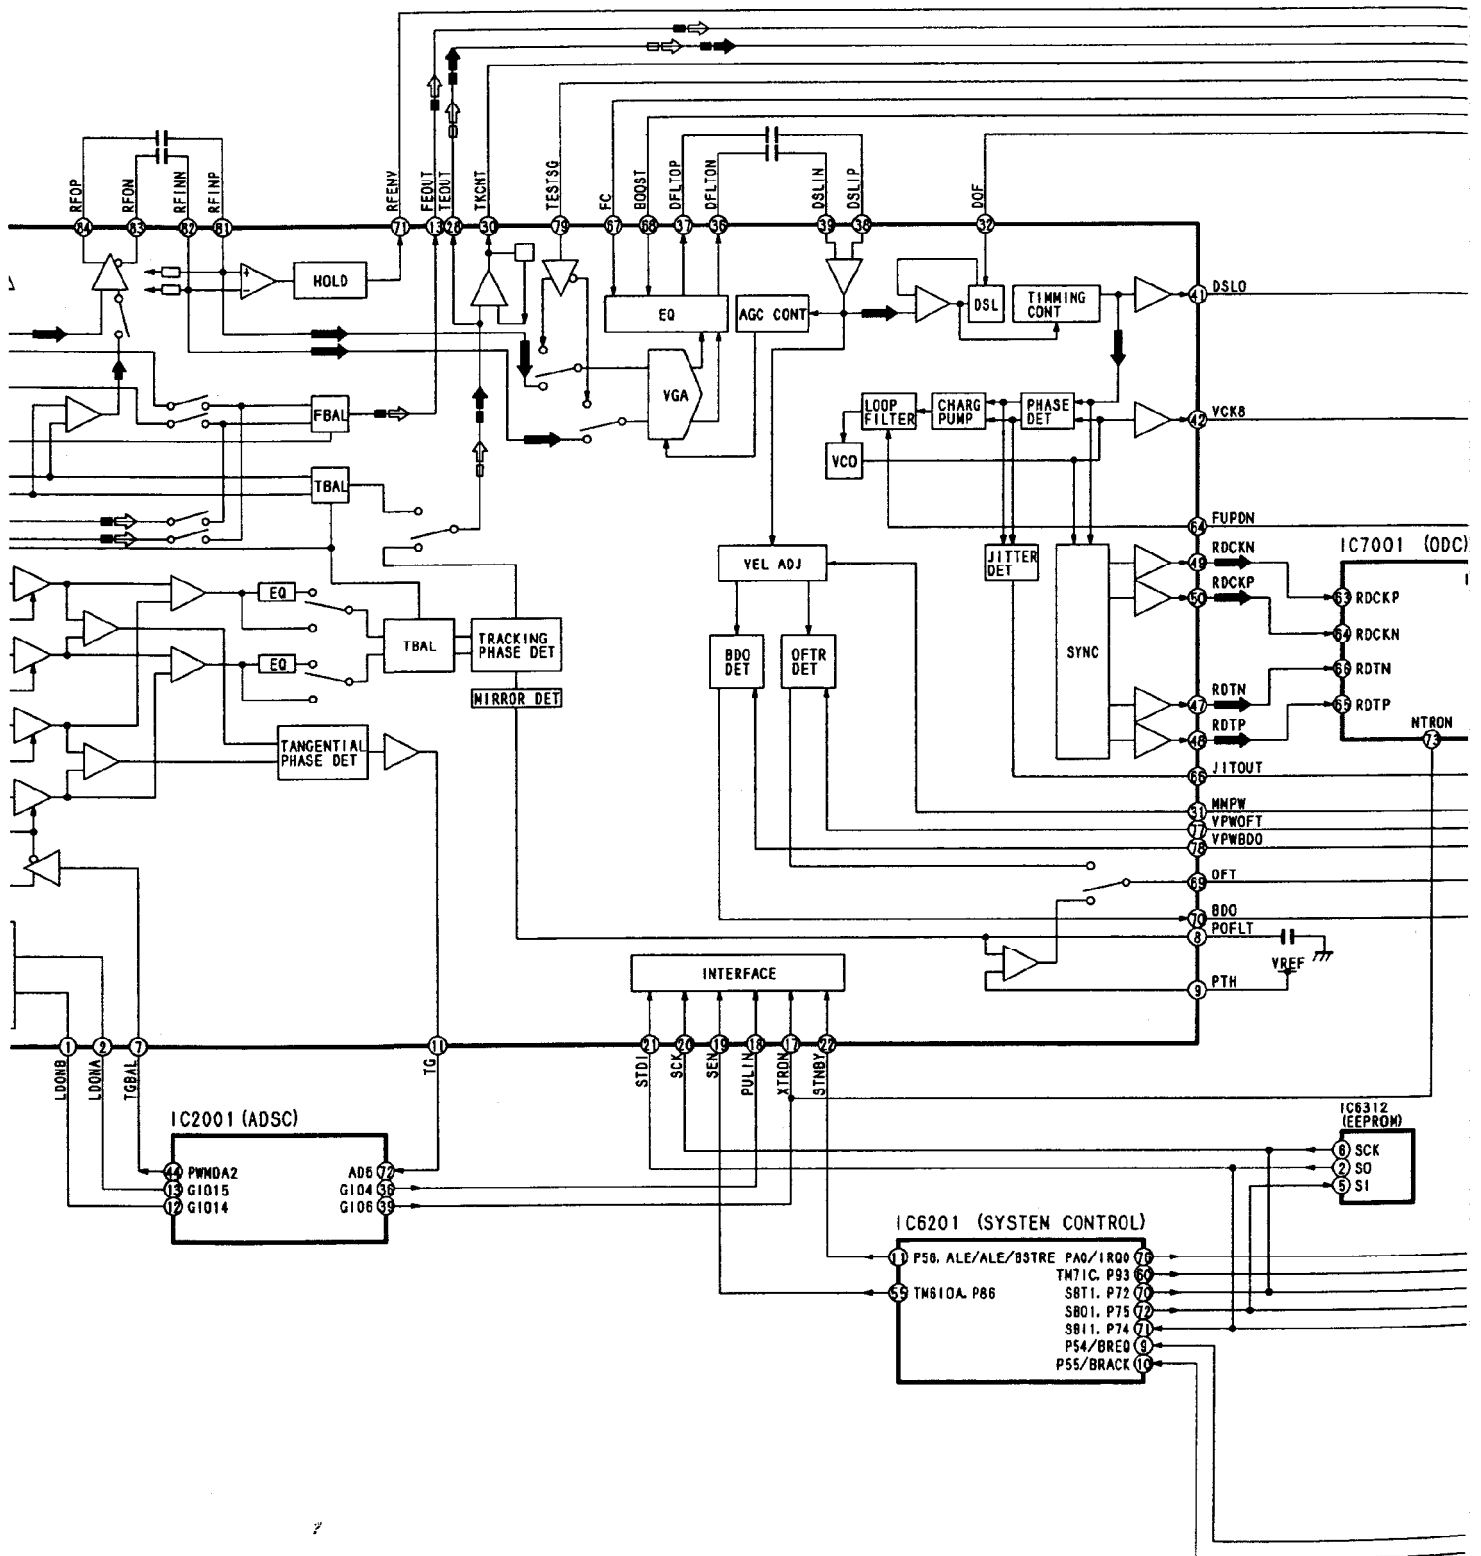

← RF SIGNAL ← DISC MOTOR DRIVE SIGNAL

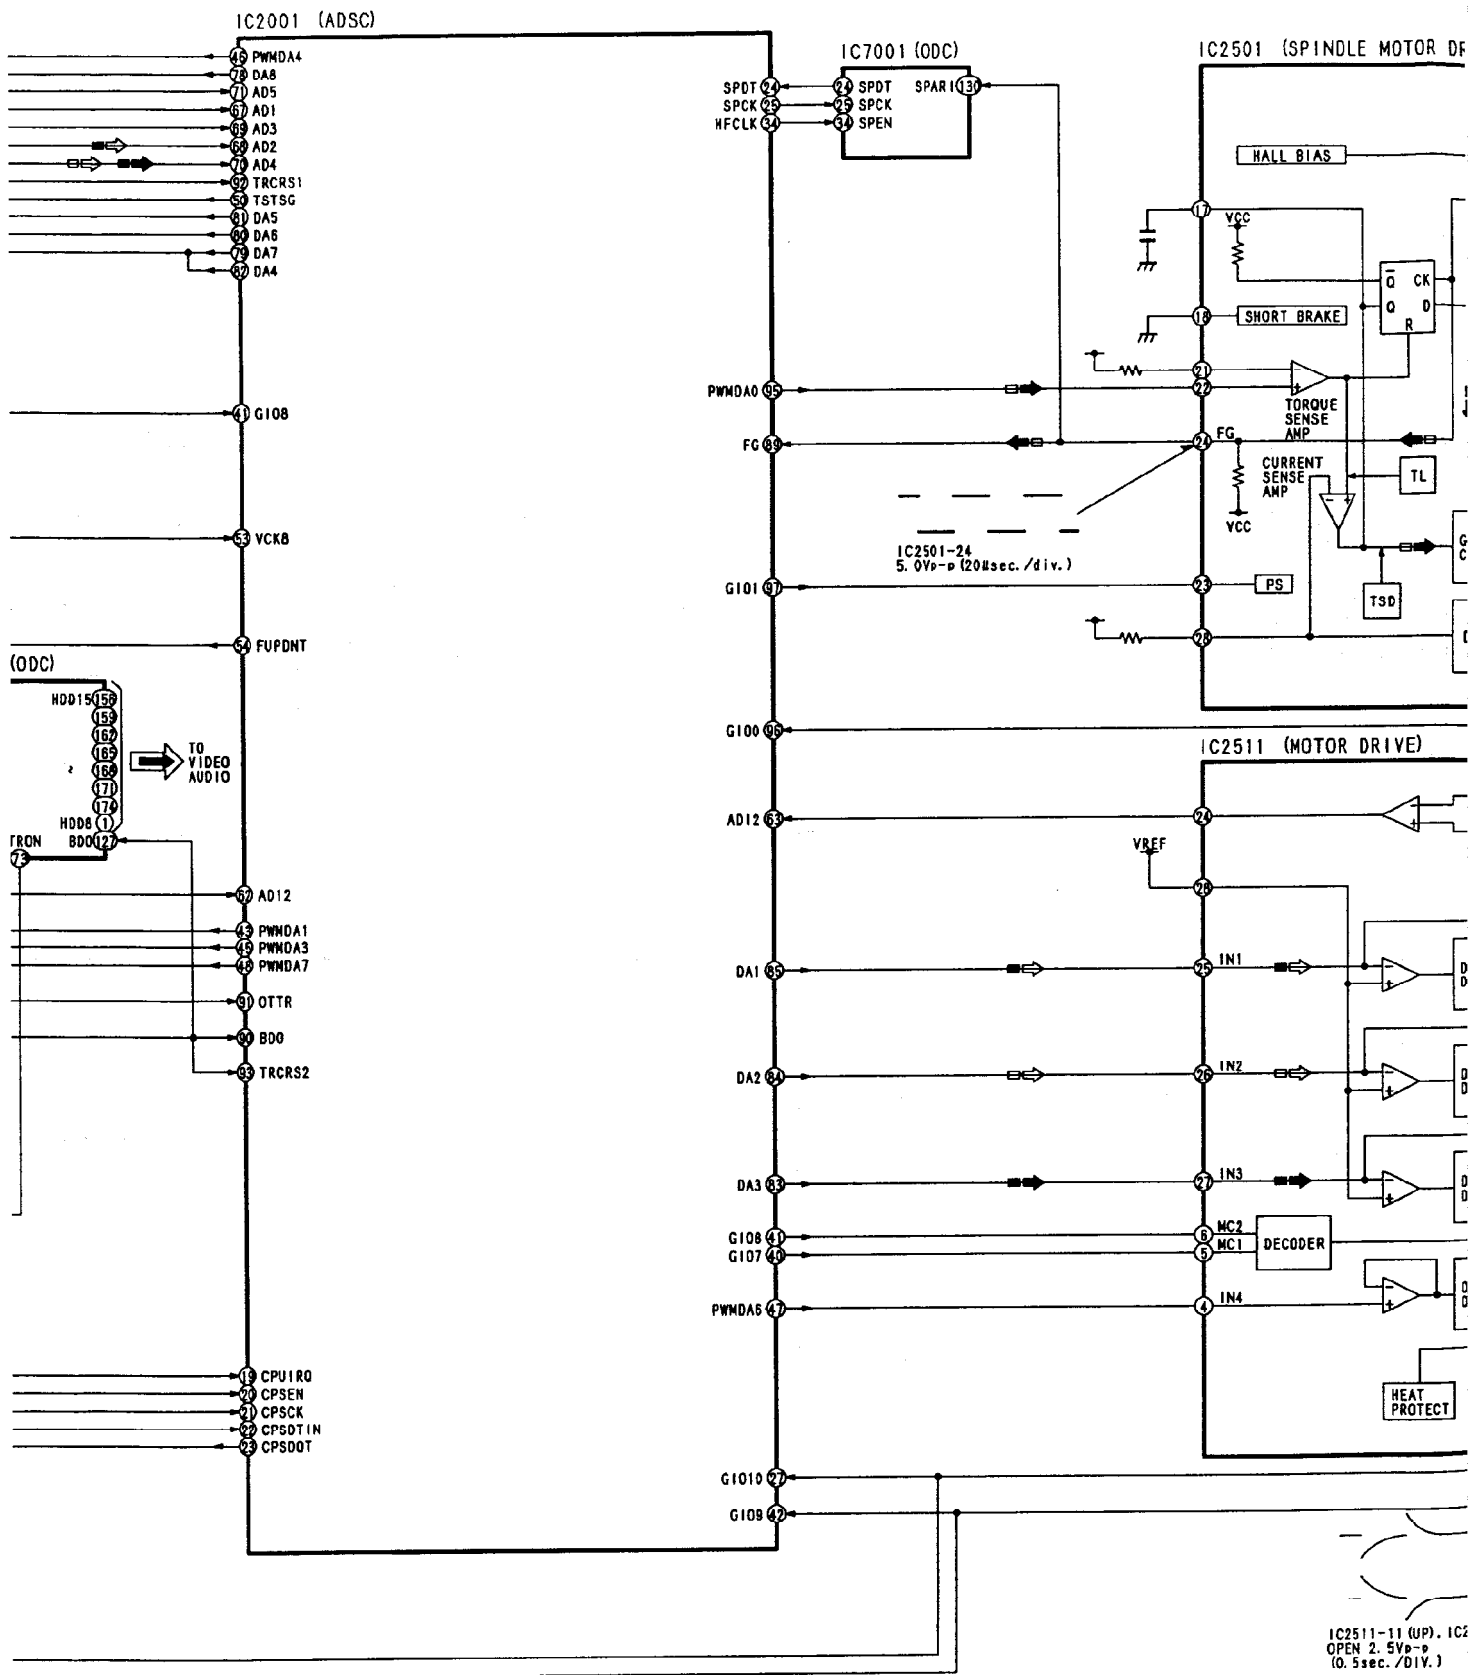



L ← TRAVERSE MOTOR DRIVE SIGNAL ⇐ TRACKING ERROR SIGNAL ⇐ FOCUS ERROR SIGNAL

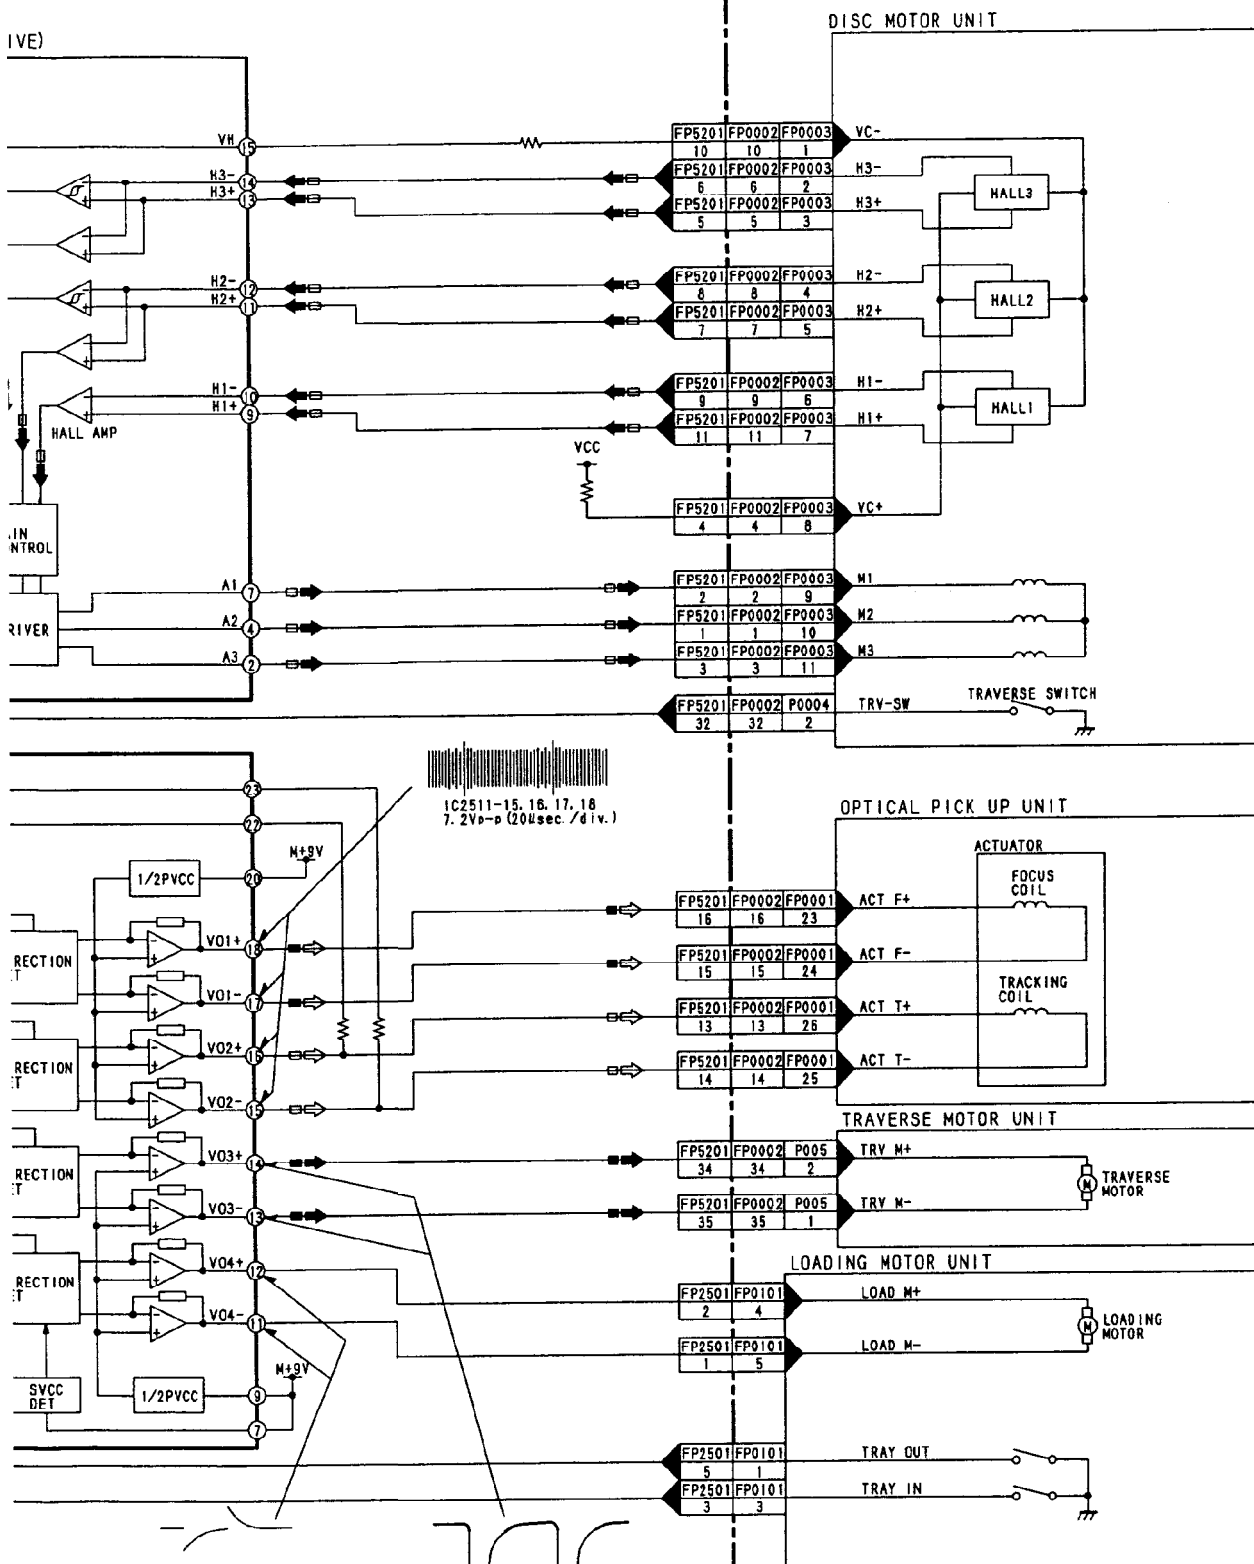


REF. NO. 20000 SERIES

3-4. VIDEO BLOCK DIAGRAM

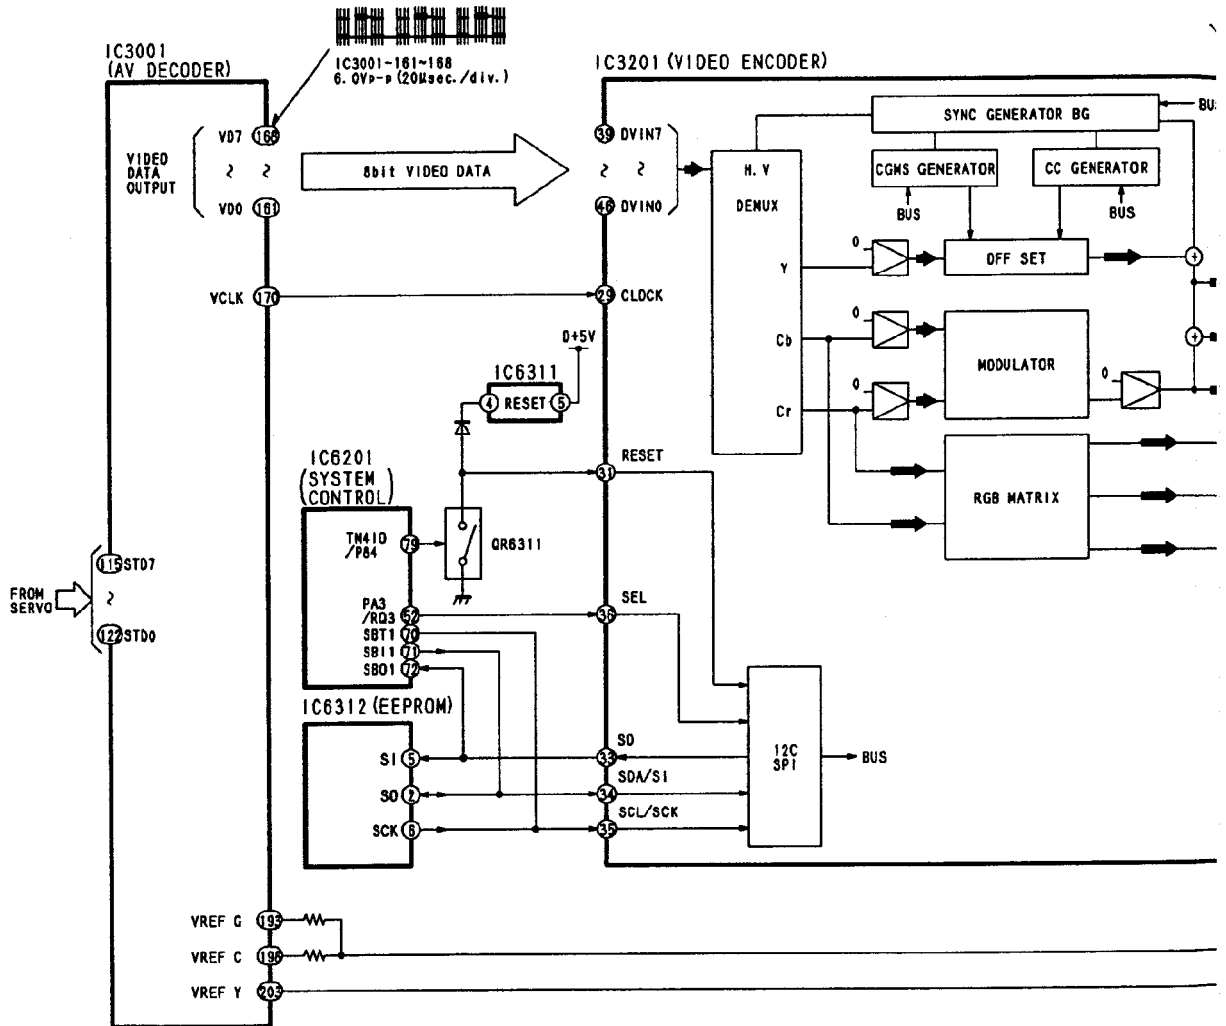


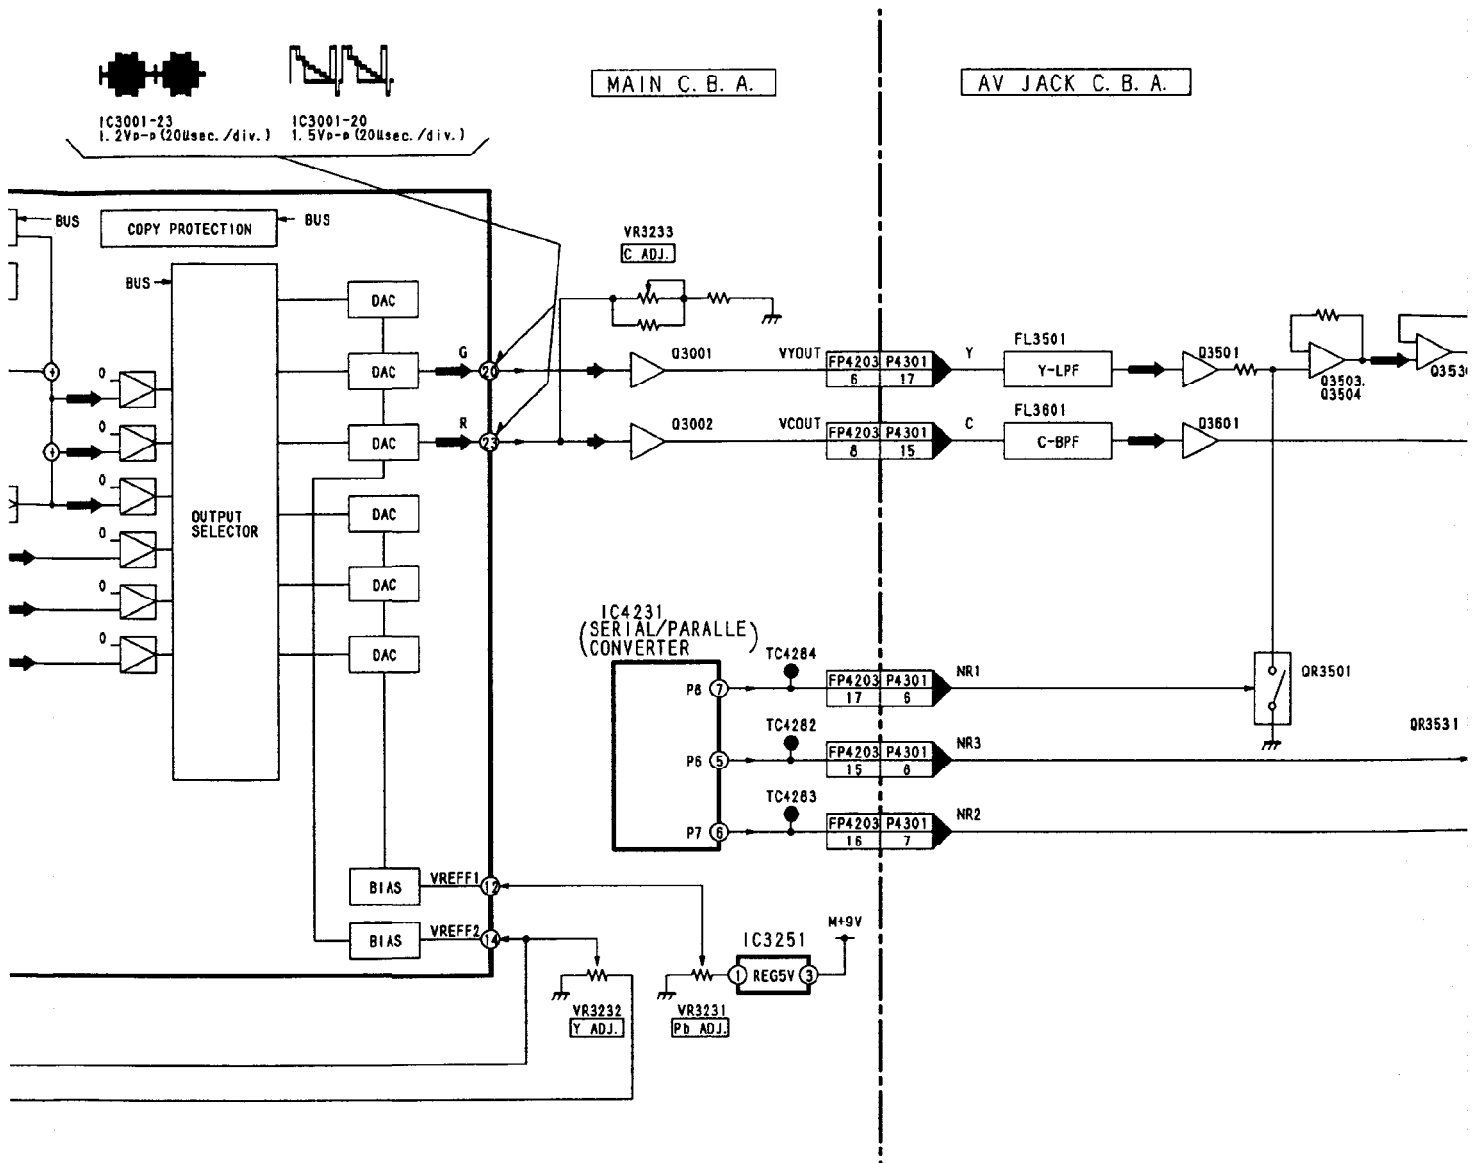


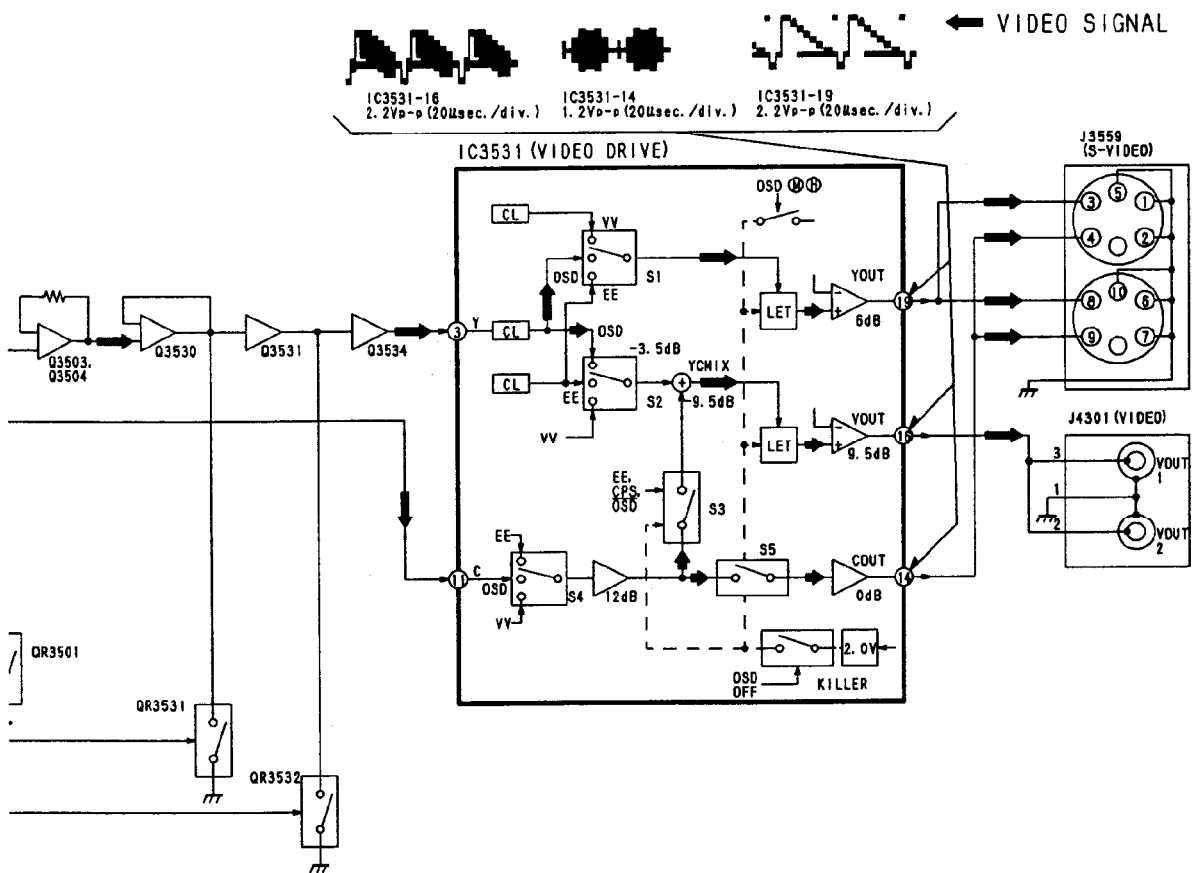


REF. NO. 20000 SERIES

3-5. AUDIO BLOCK DIAGRAM

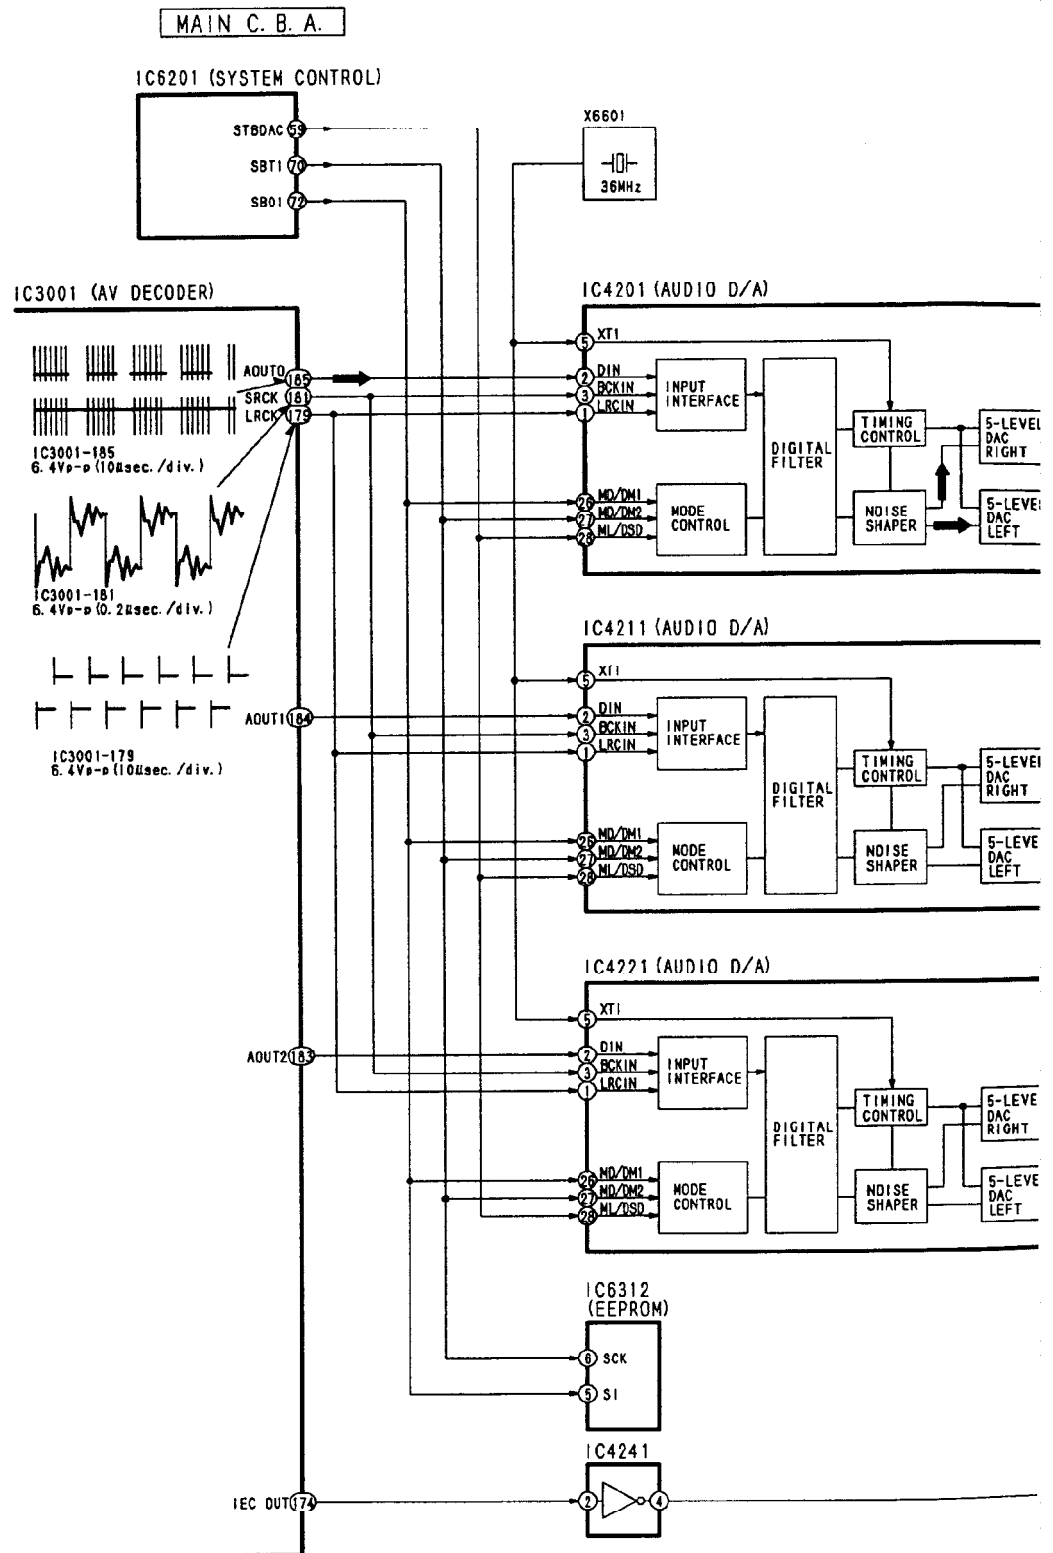


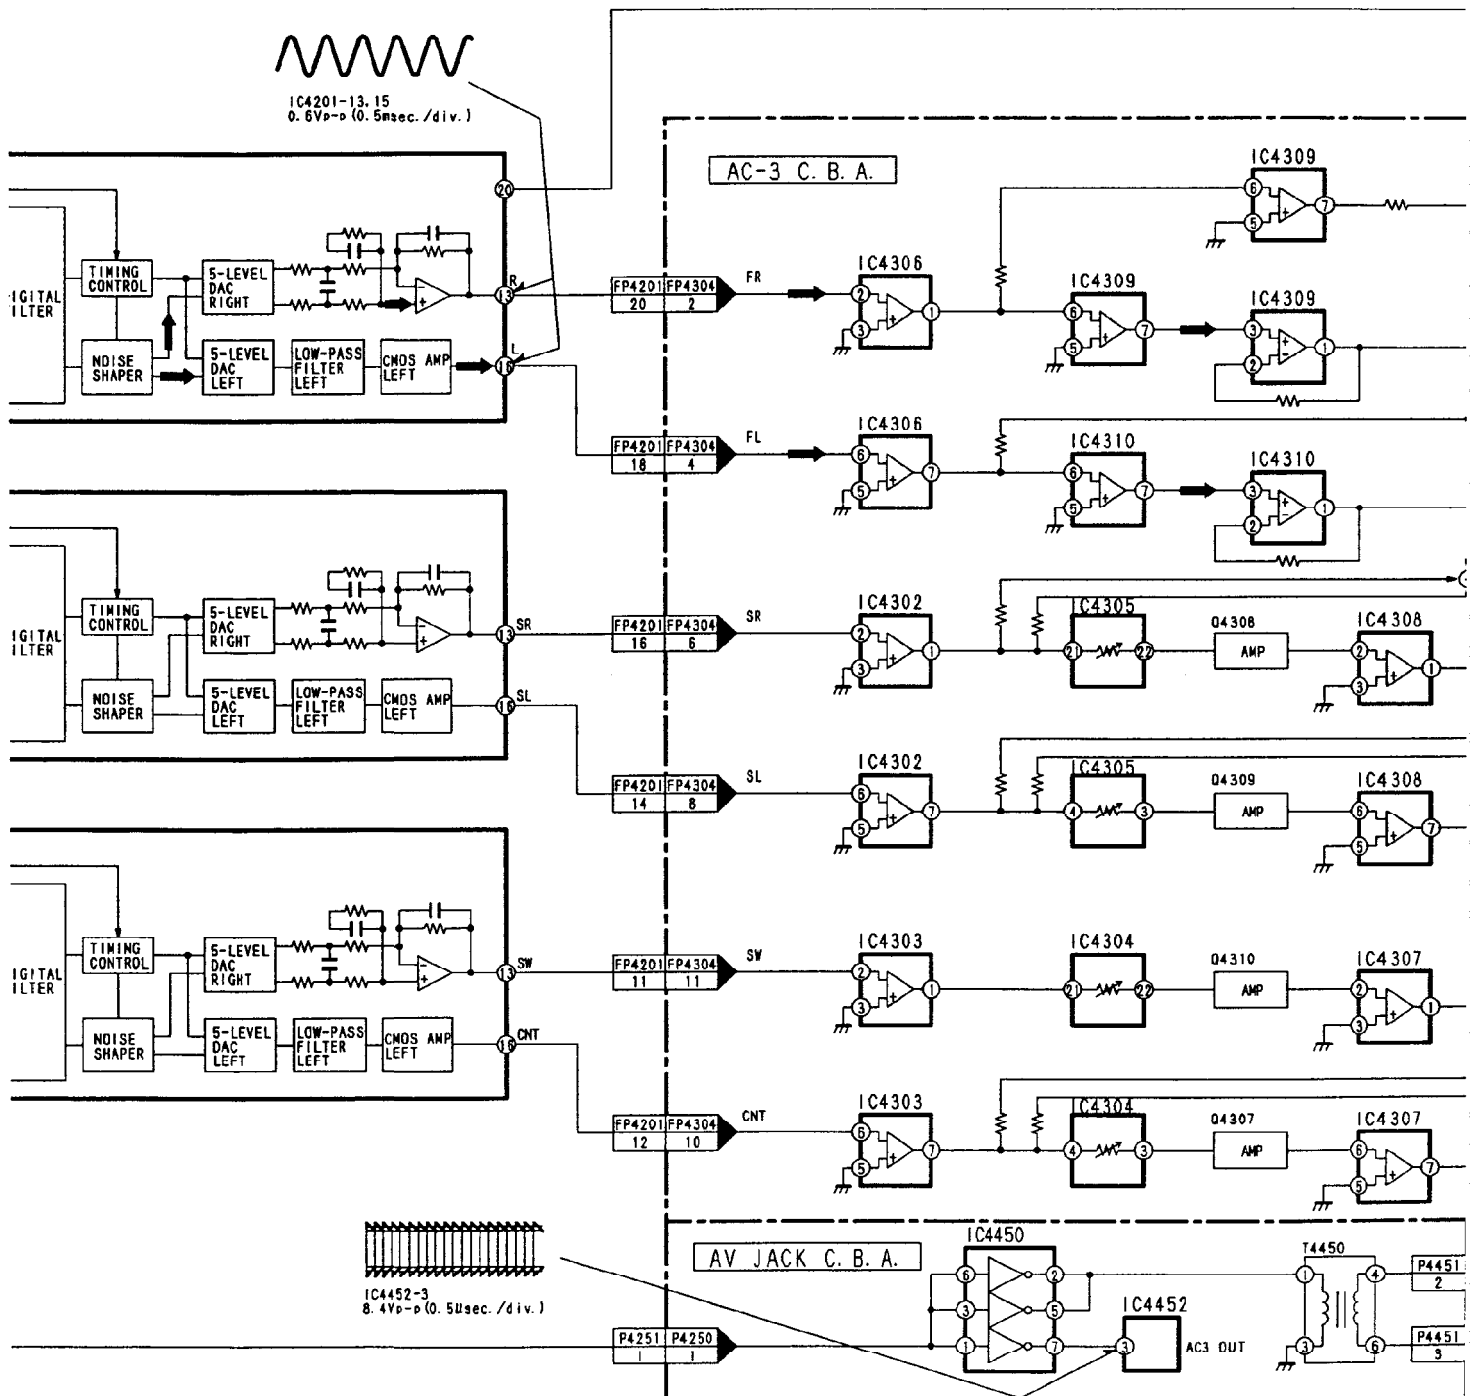


← AUDIO SIGNAL

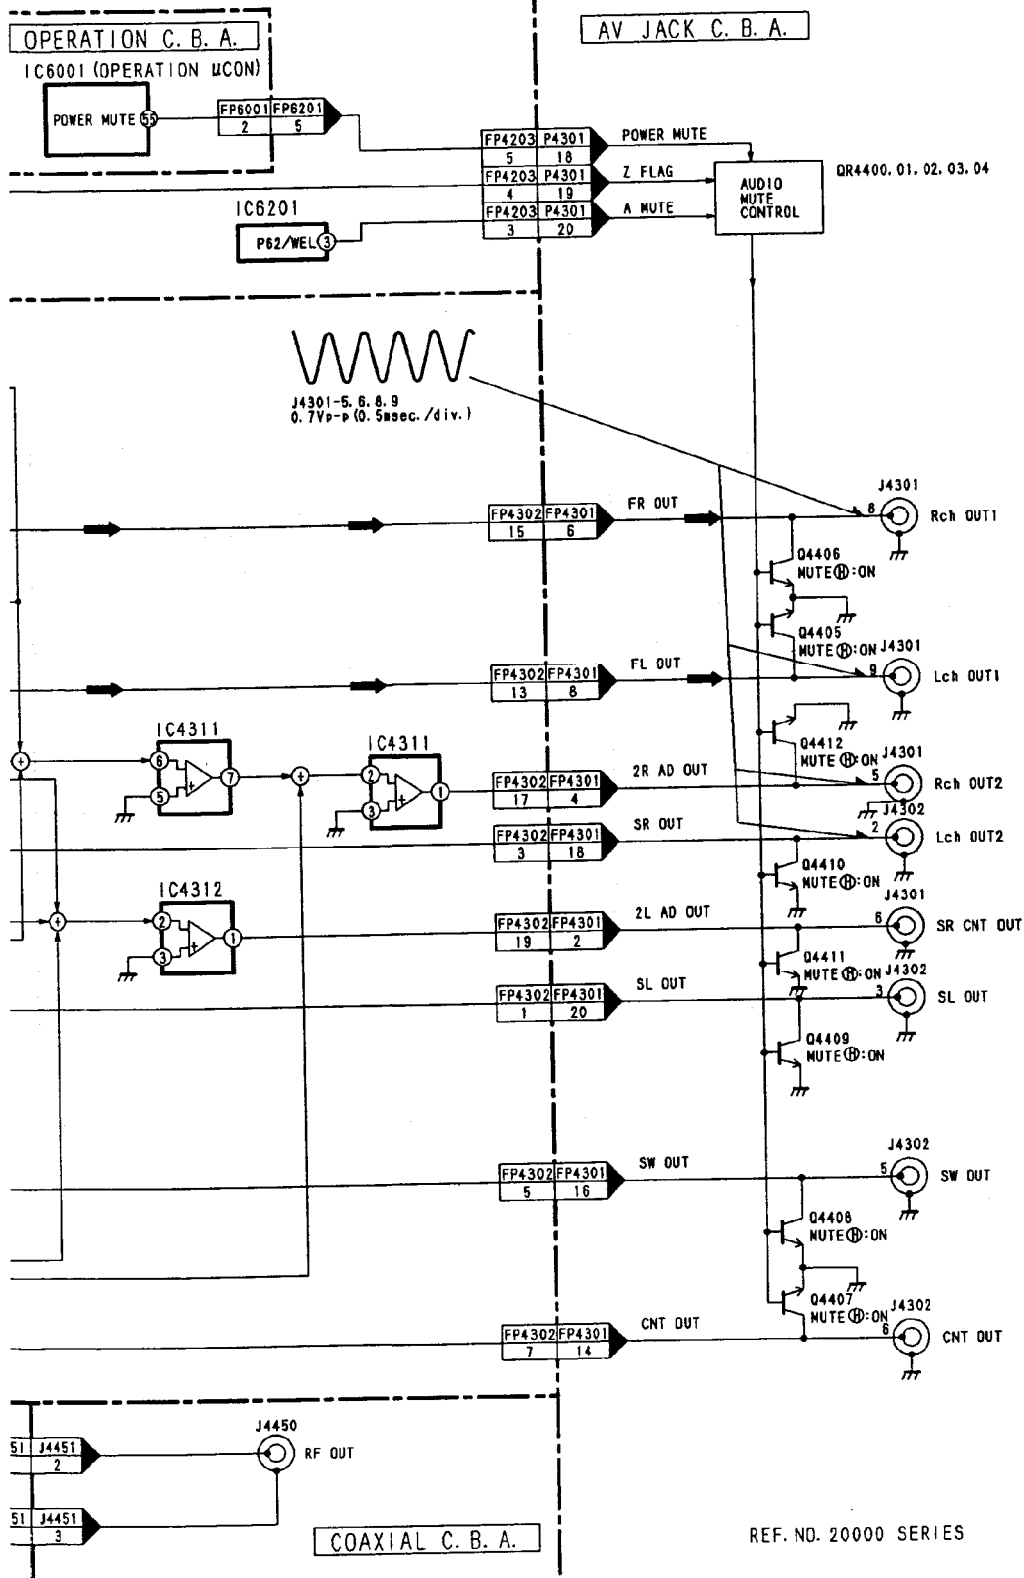


3-6. FEP AND ADSC AND SERVO SECTION (MAIN

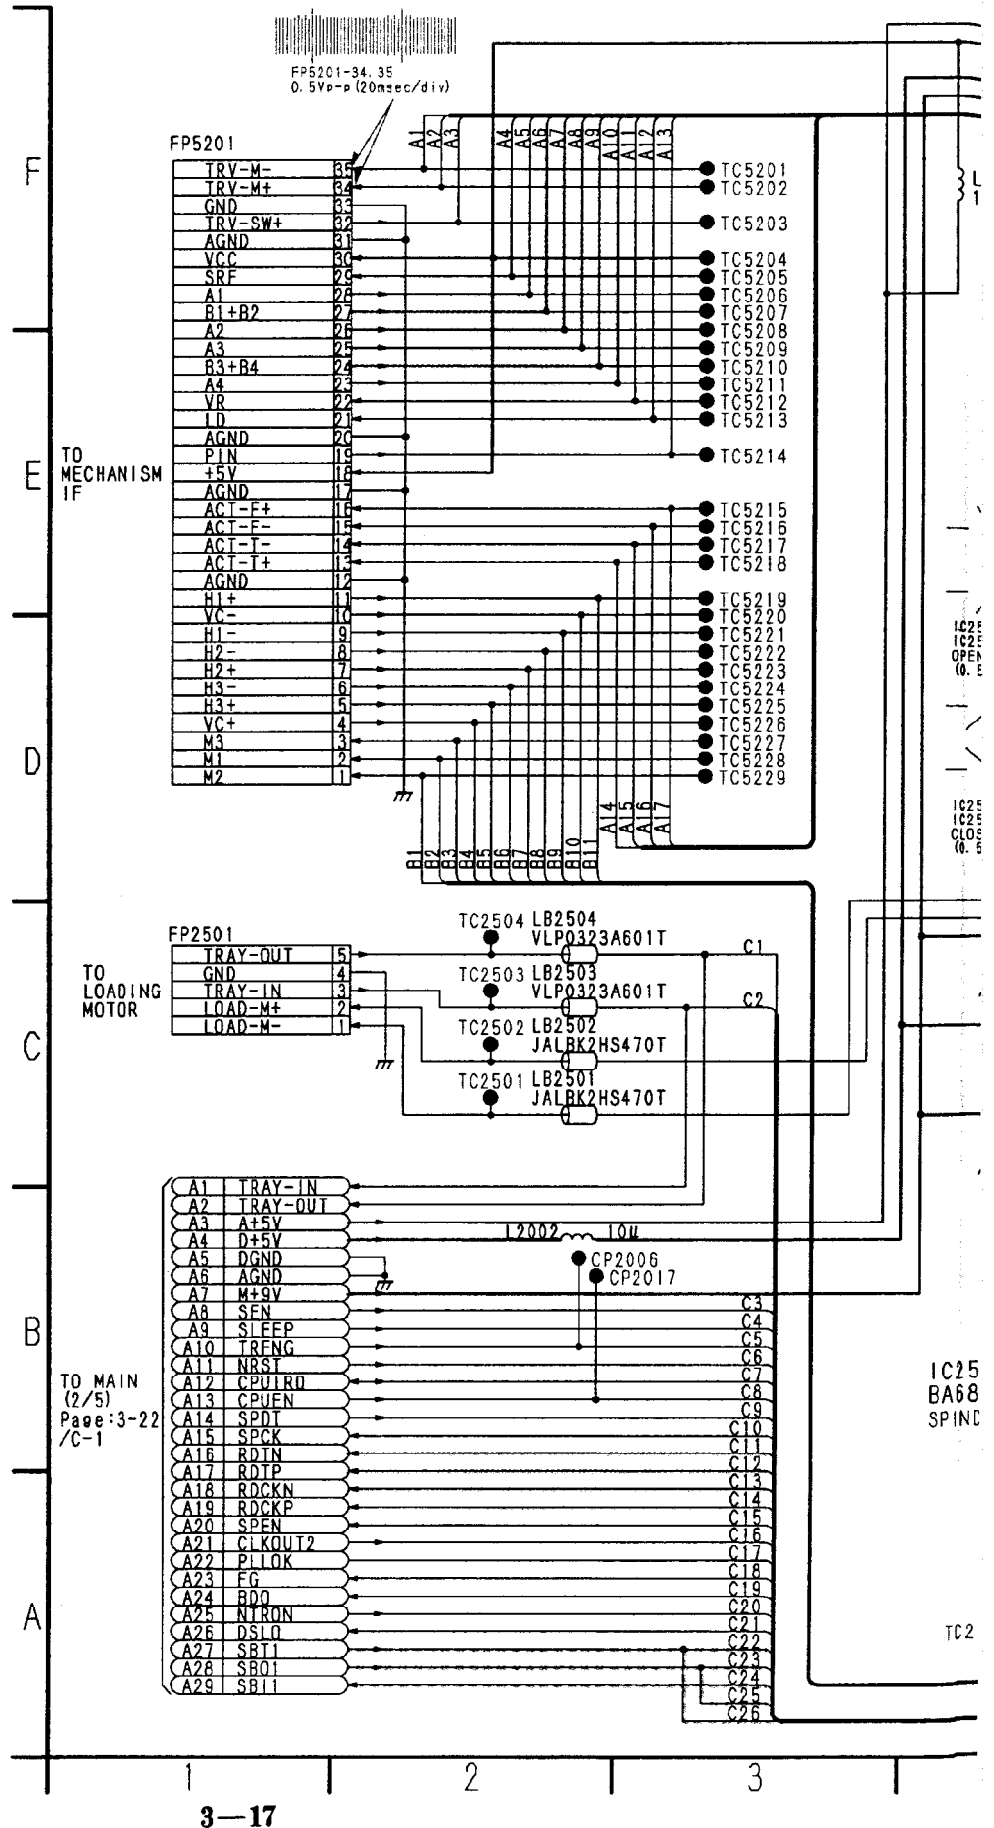


ON (MAIN C.B.A. <1/5>) SCHEMATIC DIAGRAM

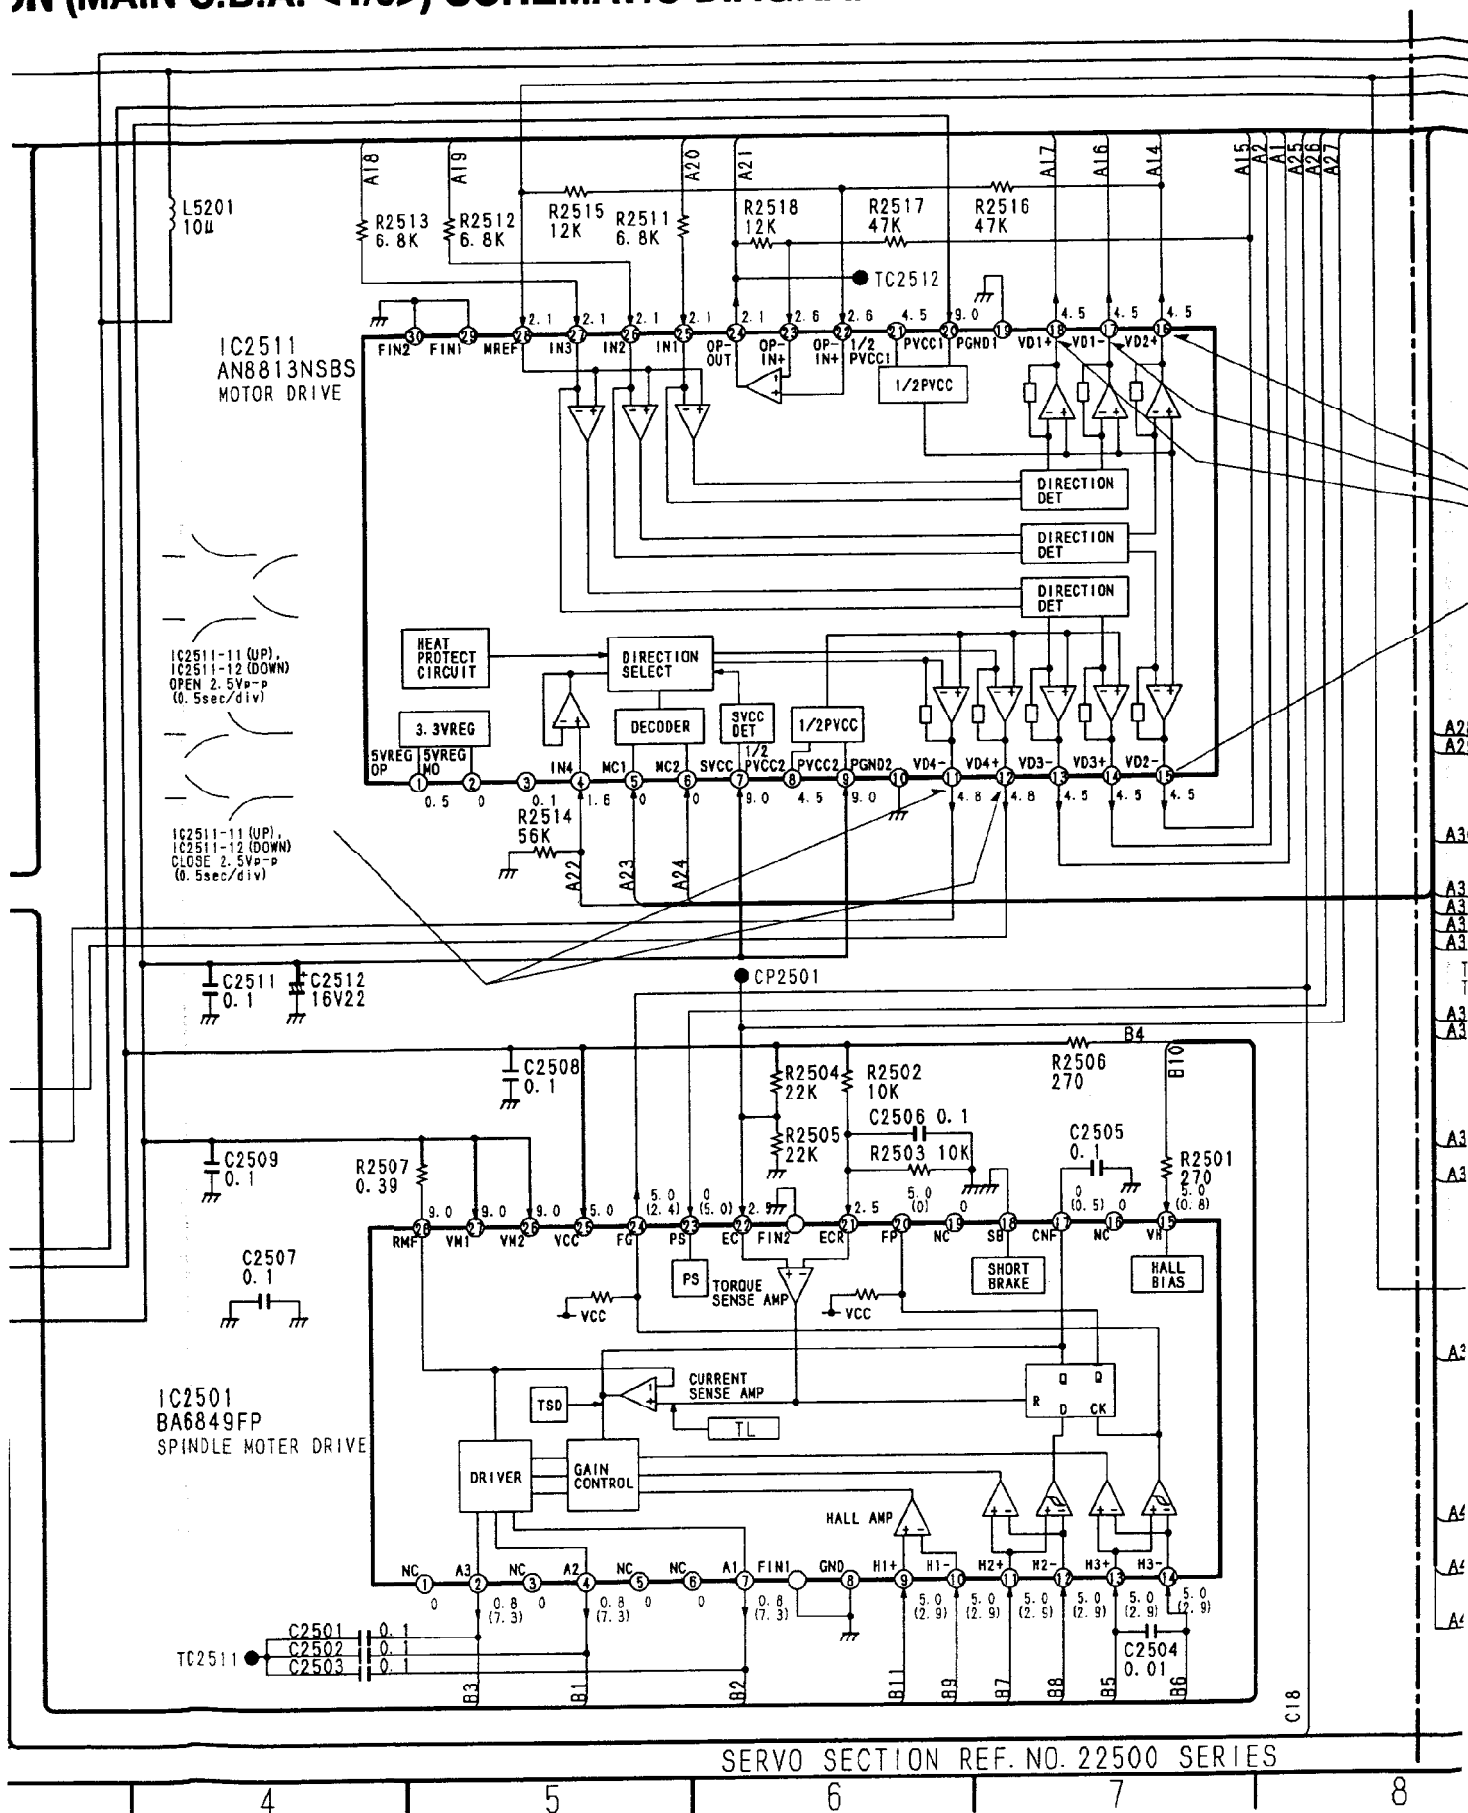

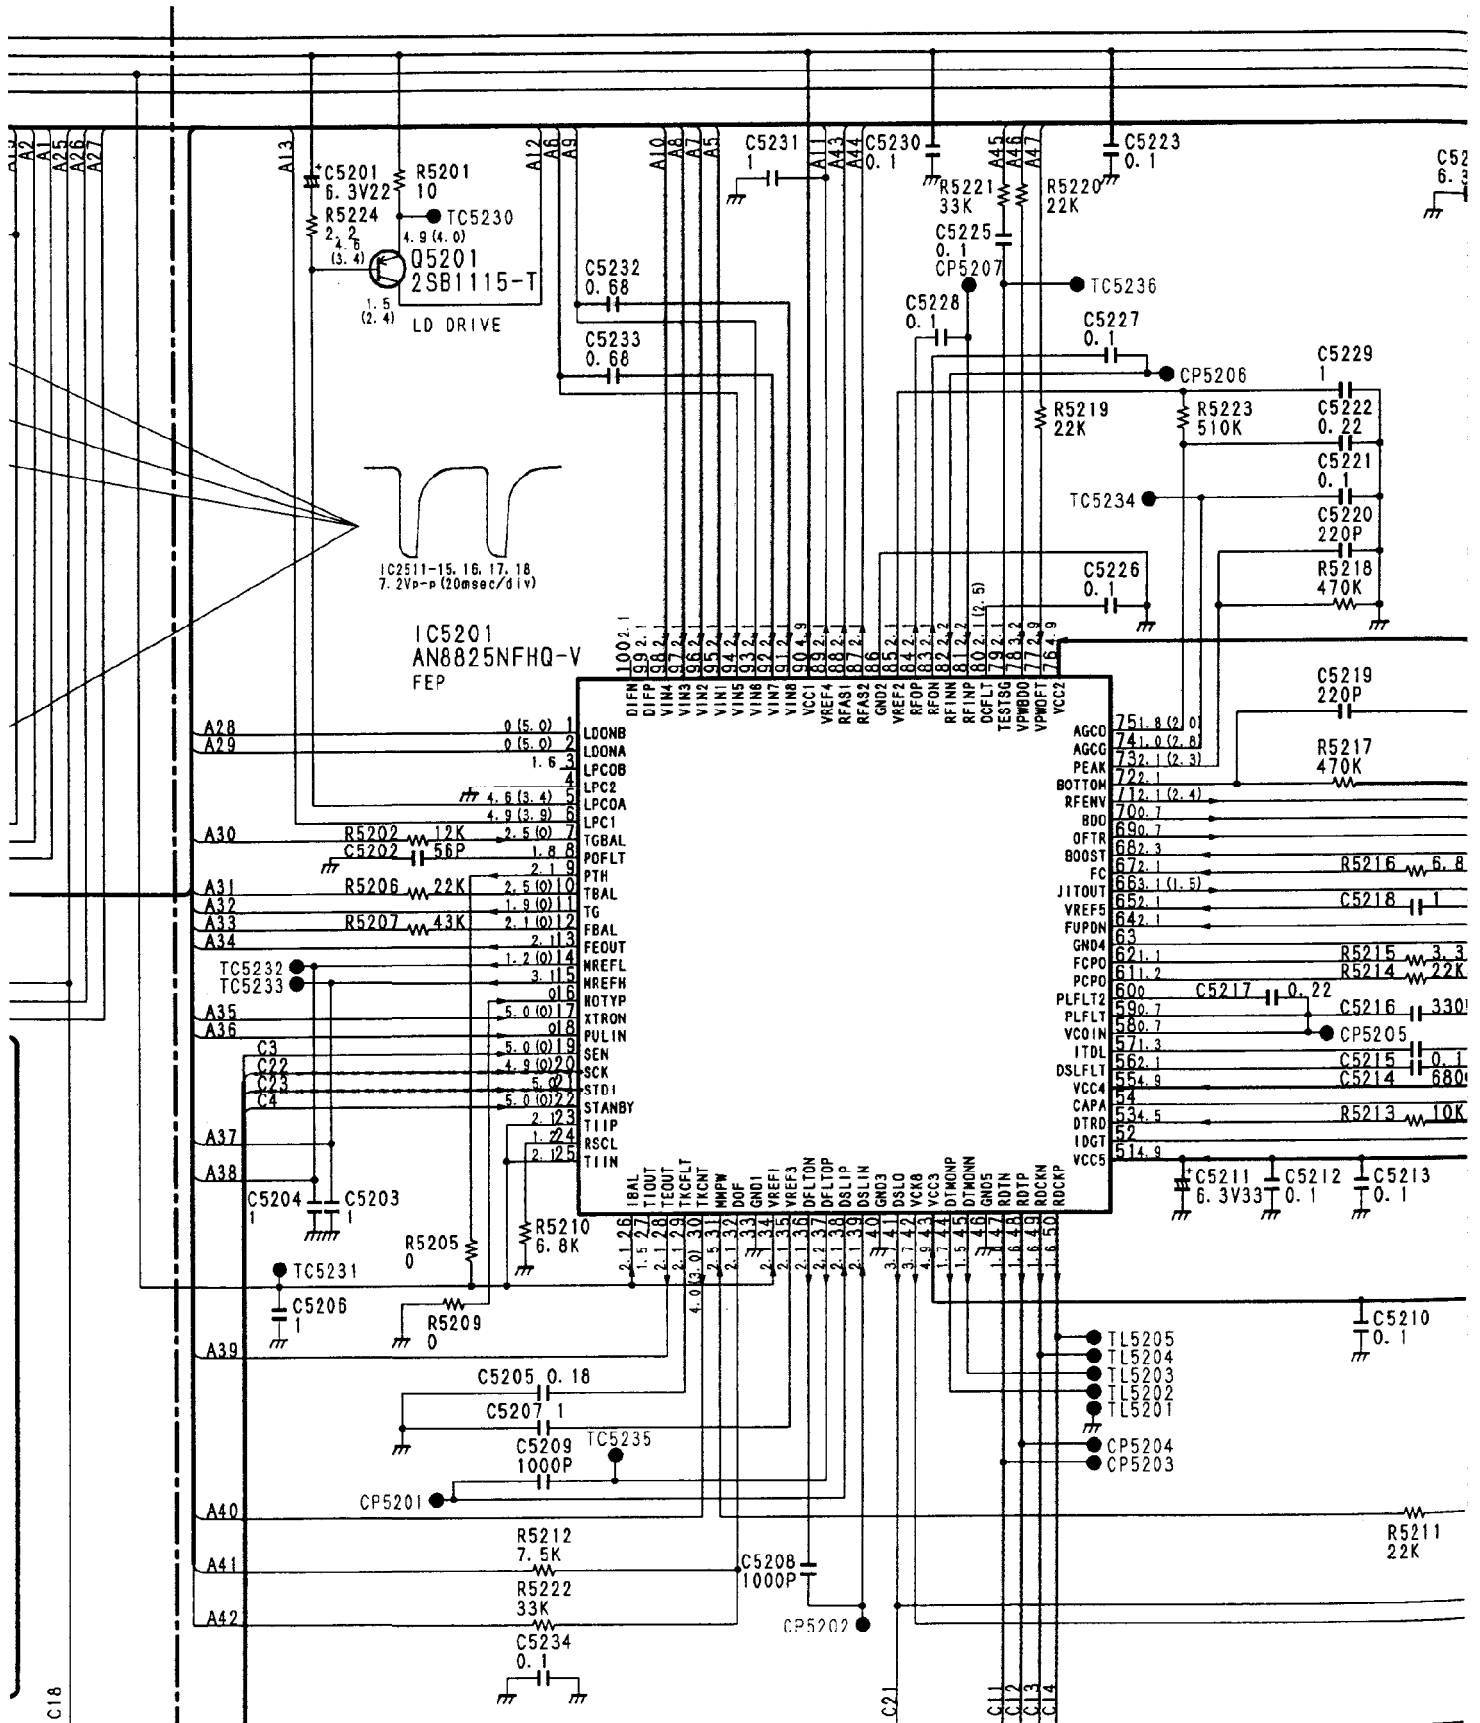


FEP SECTION REF. NO. 25200 SERIES

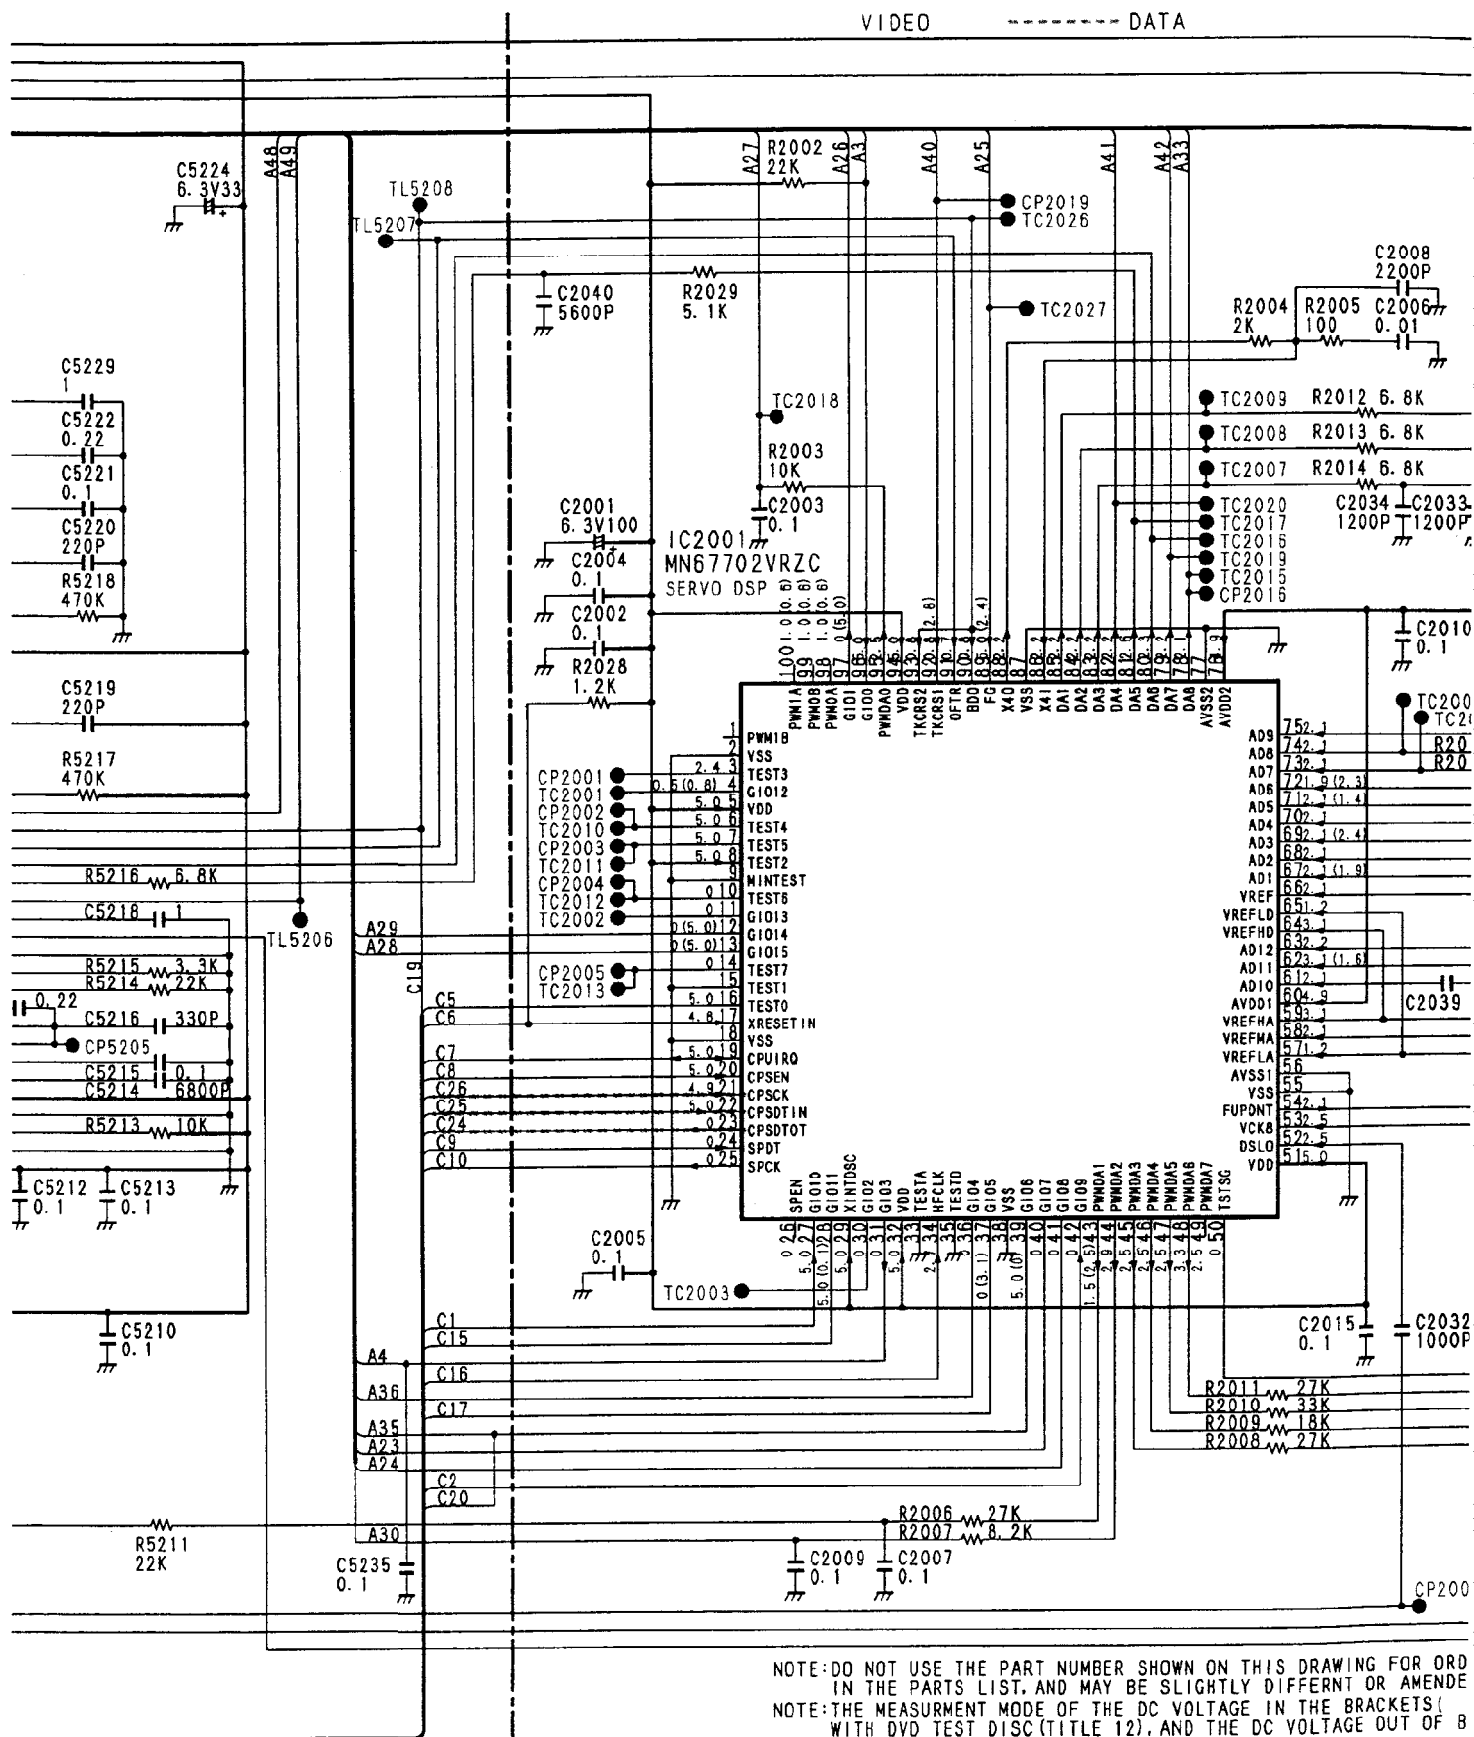

NOTE: DO NOT USE THE PART NUMBER SHOWN ON THIS DRAWING FOR ORD IN THE PARTS LIST, AND MAY BE SLIGHTLY DIFFERENT OR AMENDED.


NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE IN THE BRACKETS WITH DVD TEST DISC (TITLE 12), AND THE DC VOLTAGE OUT OF B

ADSC SECTION REF. NO. 22000 SERIES

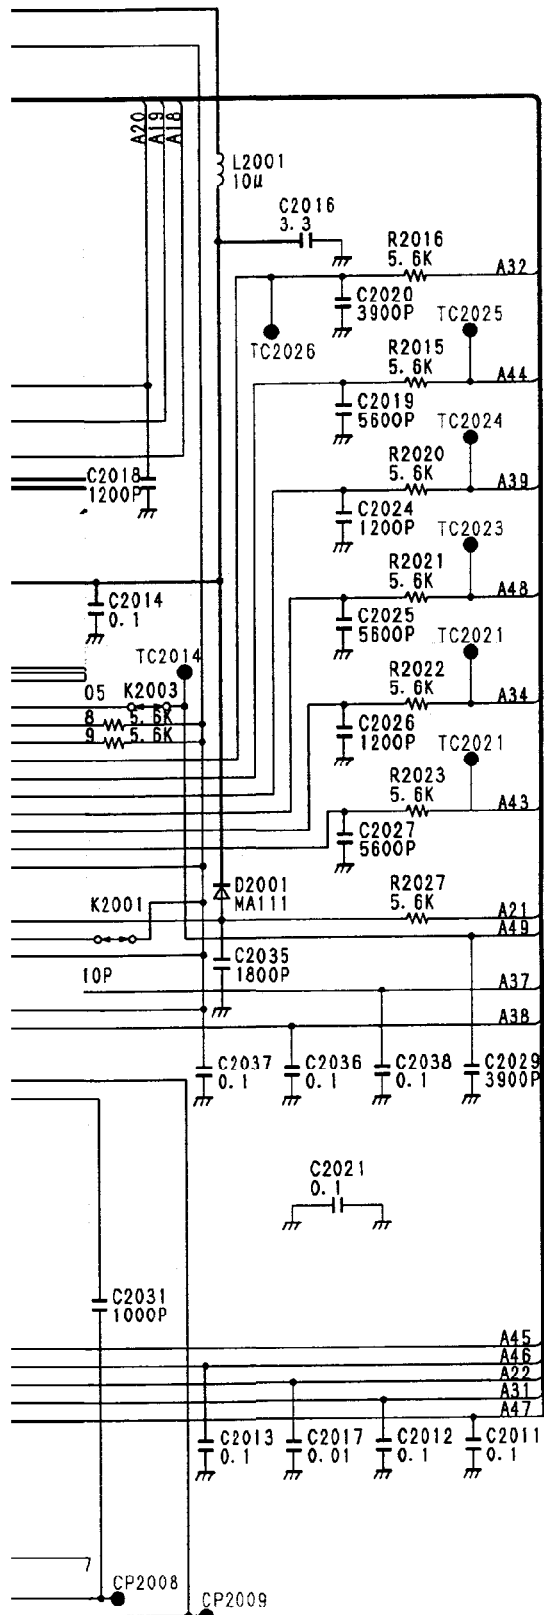


RING THE CORRECT PART NUMBER IS SHOWN
 SINCE THIS DRAWING WAS PREPARED.
 ON THIS DIAGRAM IS PLAYBACK MODE
 RACKETS IS STOP MODE.


3-7. ODC AND CPU SECTION (MAIN C.B.A. <2/5>) SCHEMATIC D

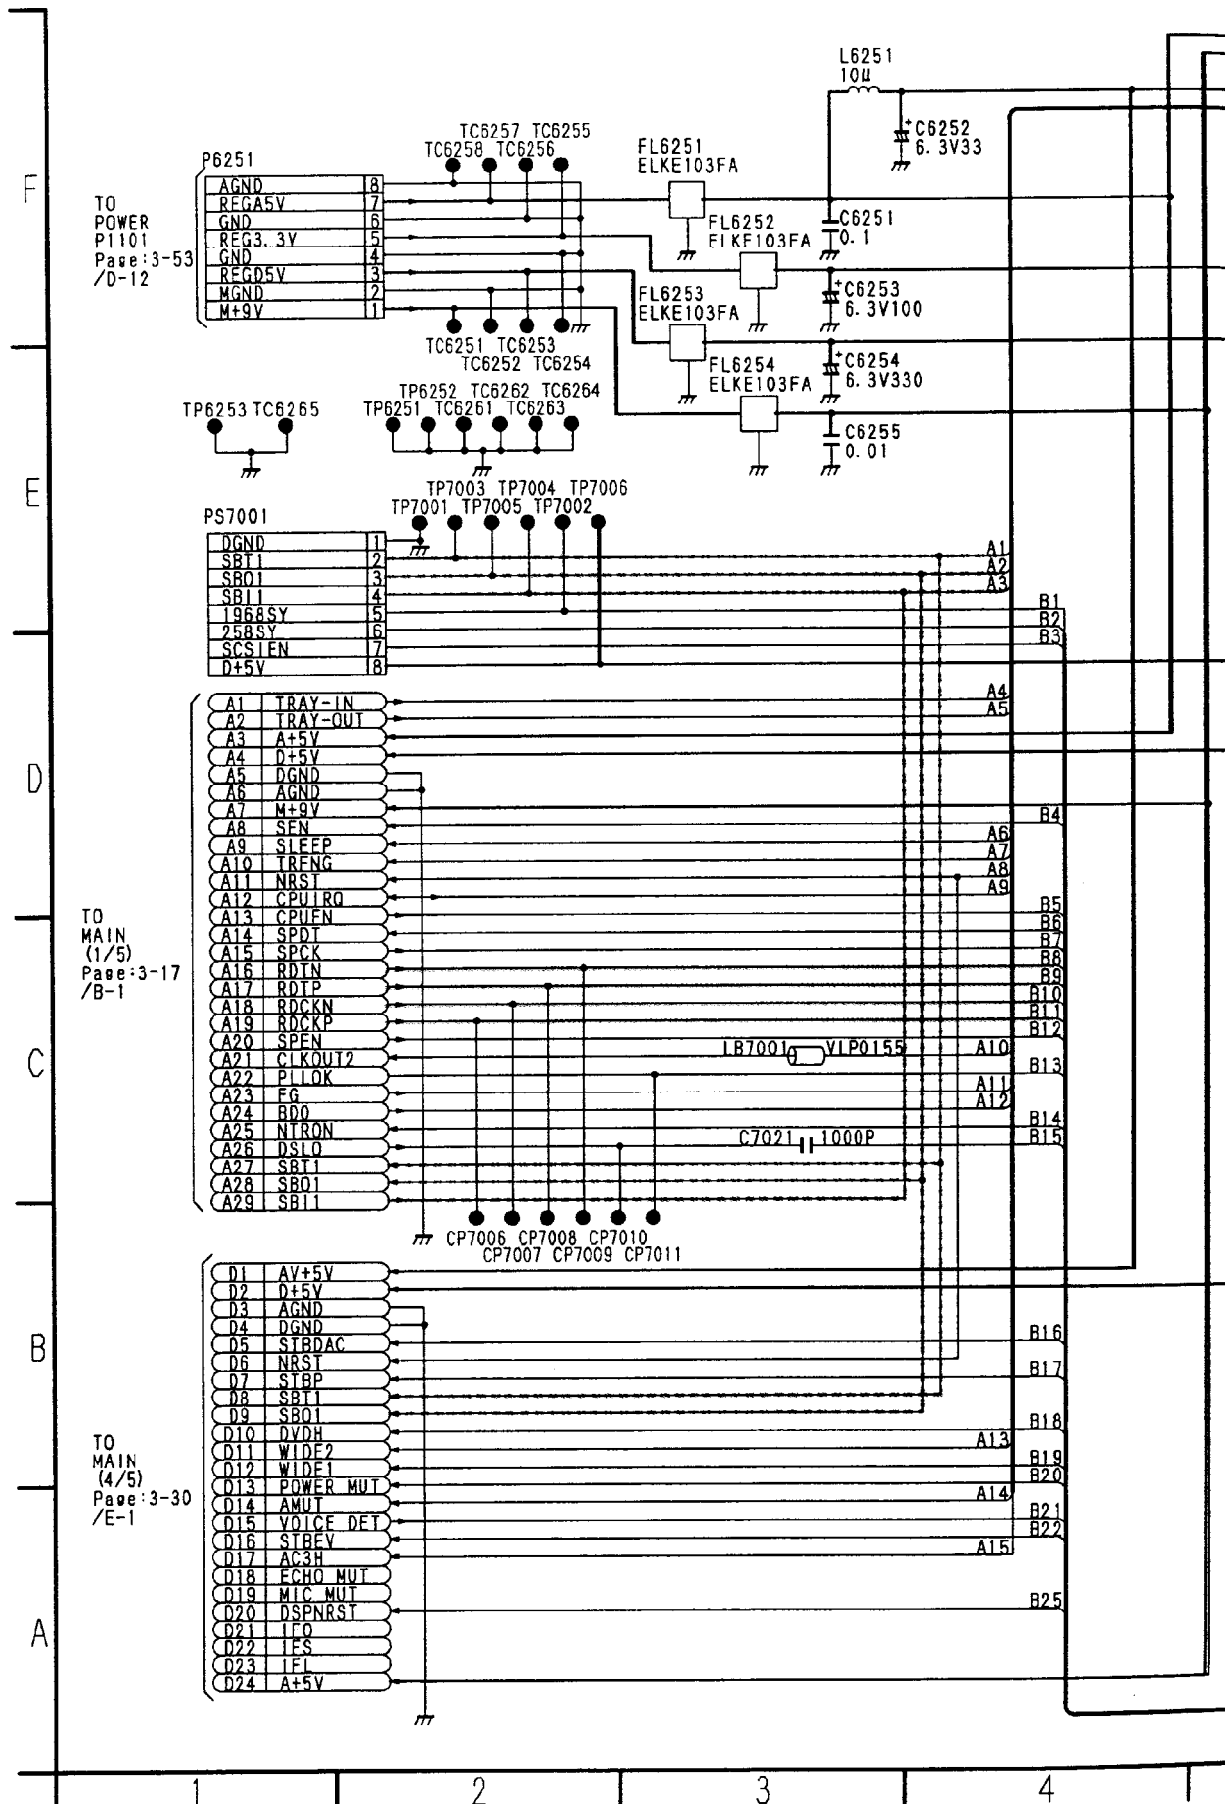


<2/5>) SCHEMATIC DIAGRAM

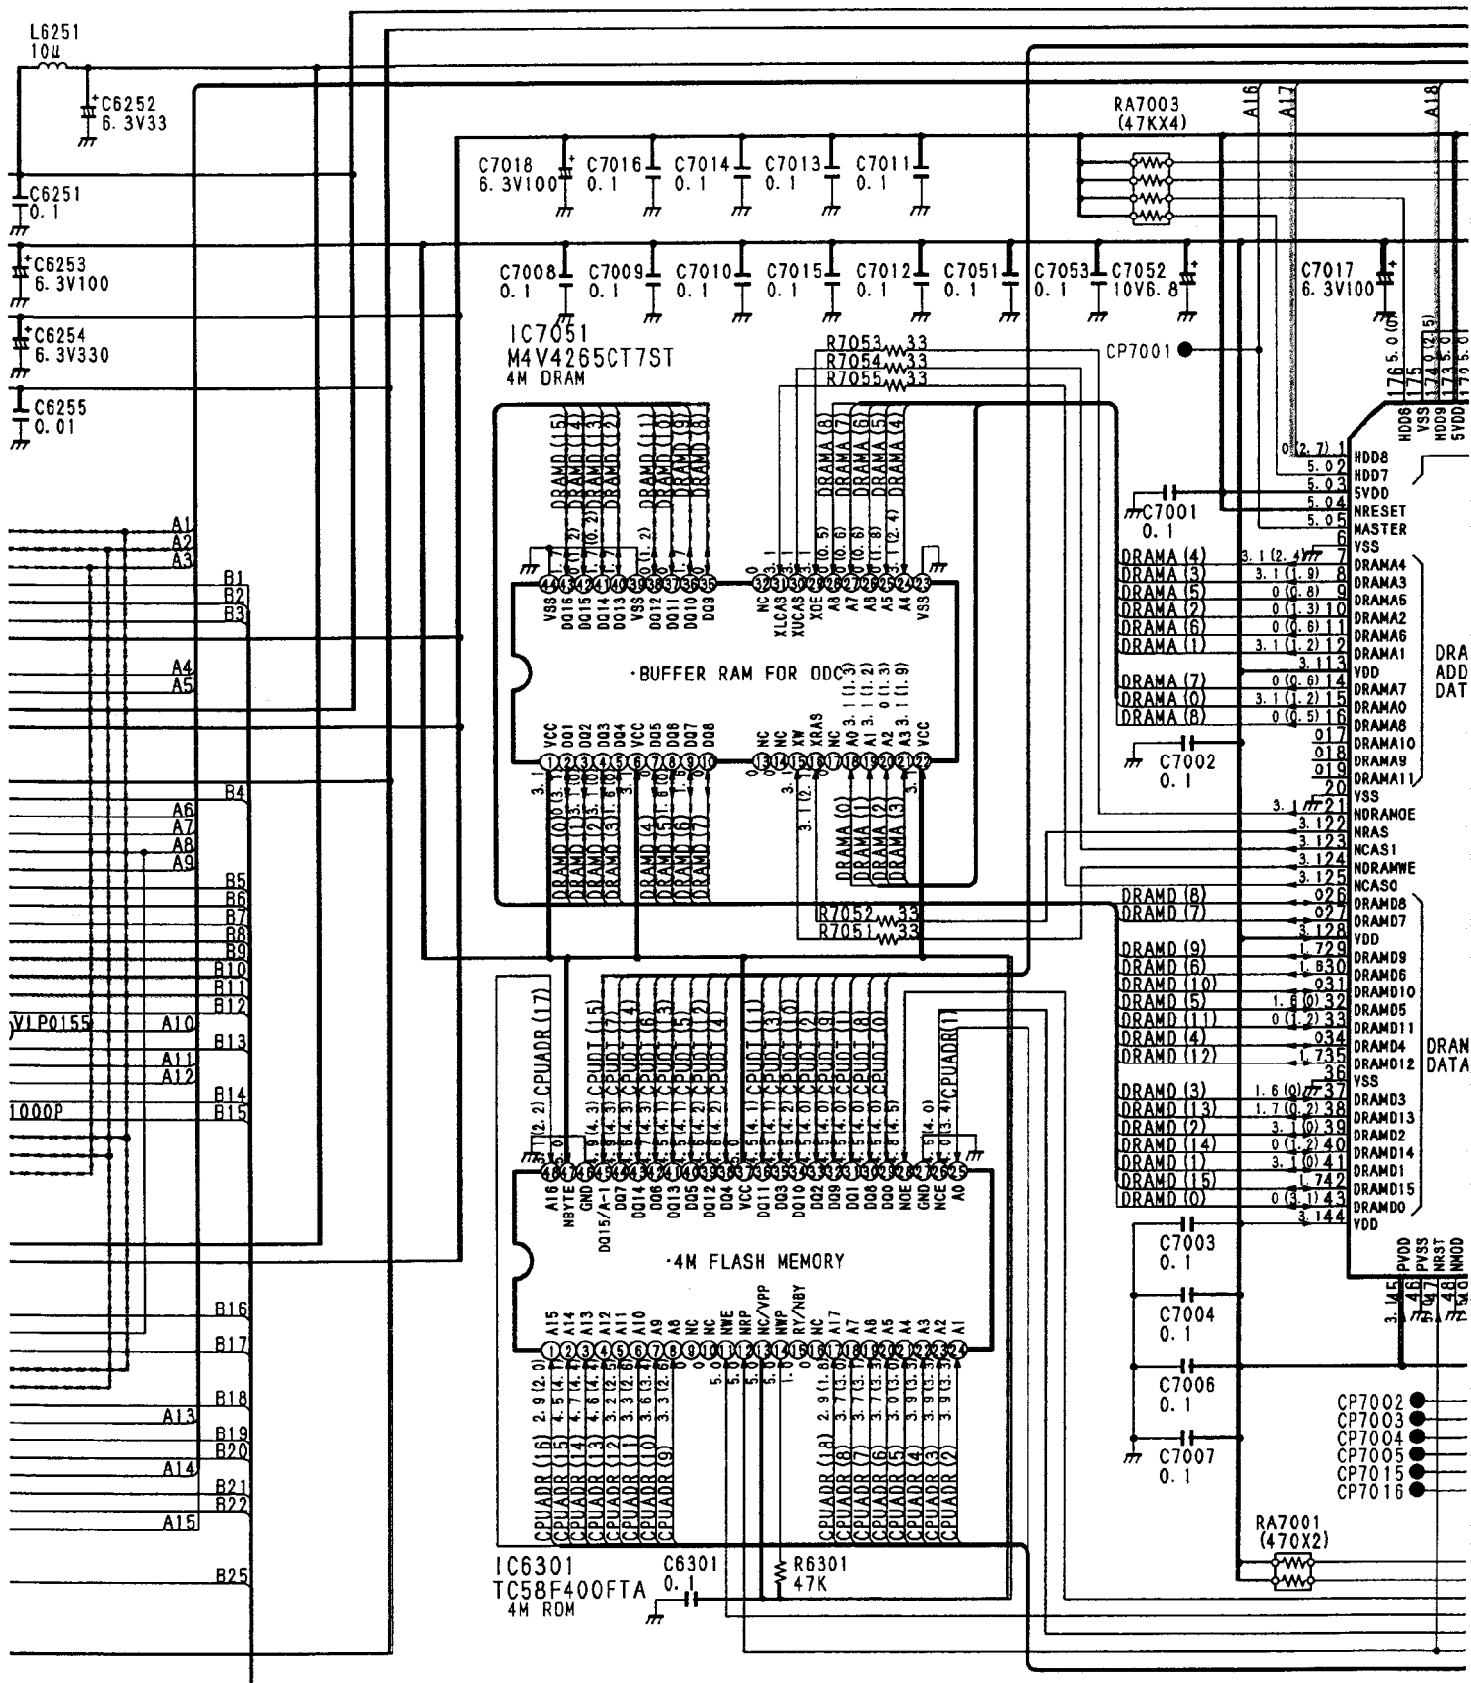


VIDEO ----- DATA

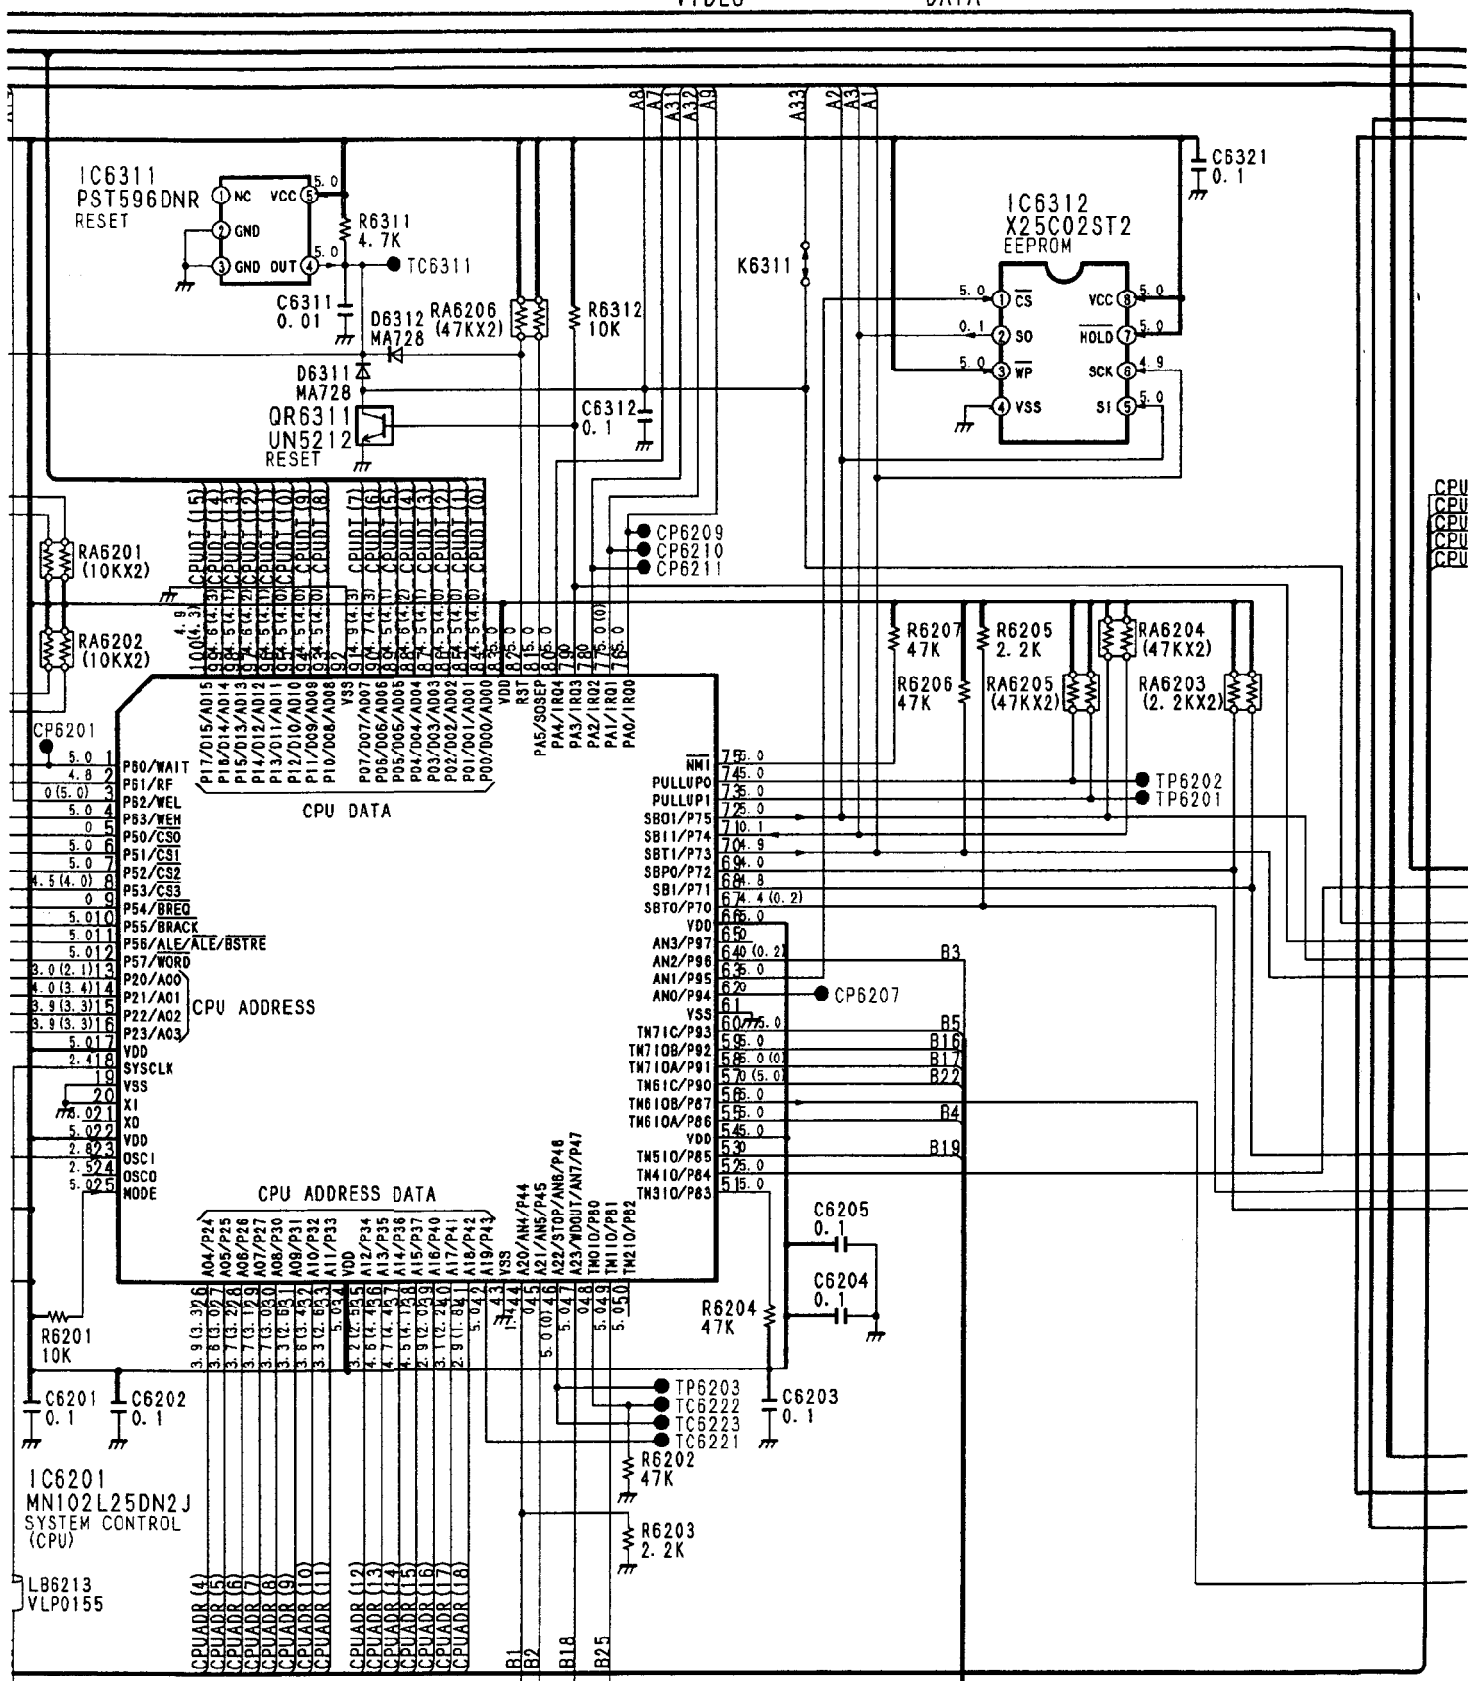

THE DC VOLTAGE IN THE BRACKETS() ON THIS DIAGRAM IS PLAYBACK MODE
LE 12) AND, THE DC VOLTAGE OUT OF BRACKETS IS STOP MODE.

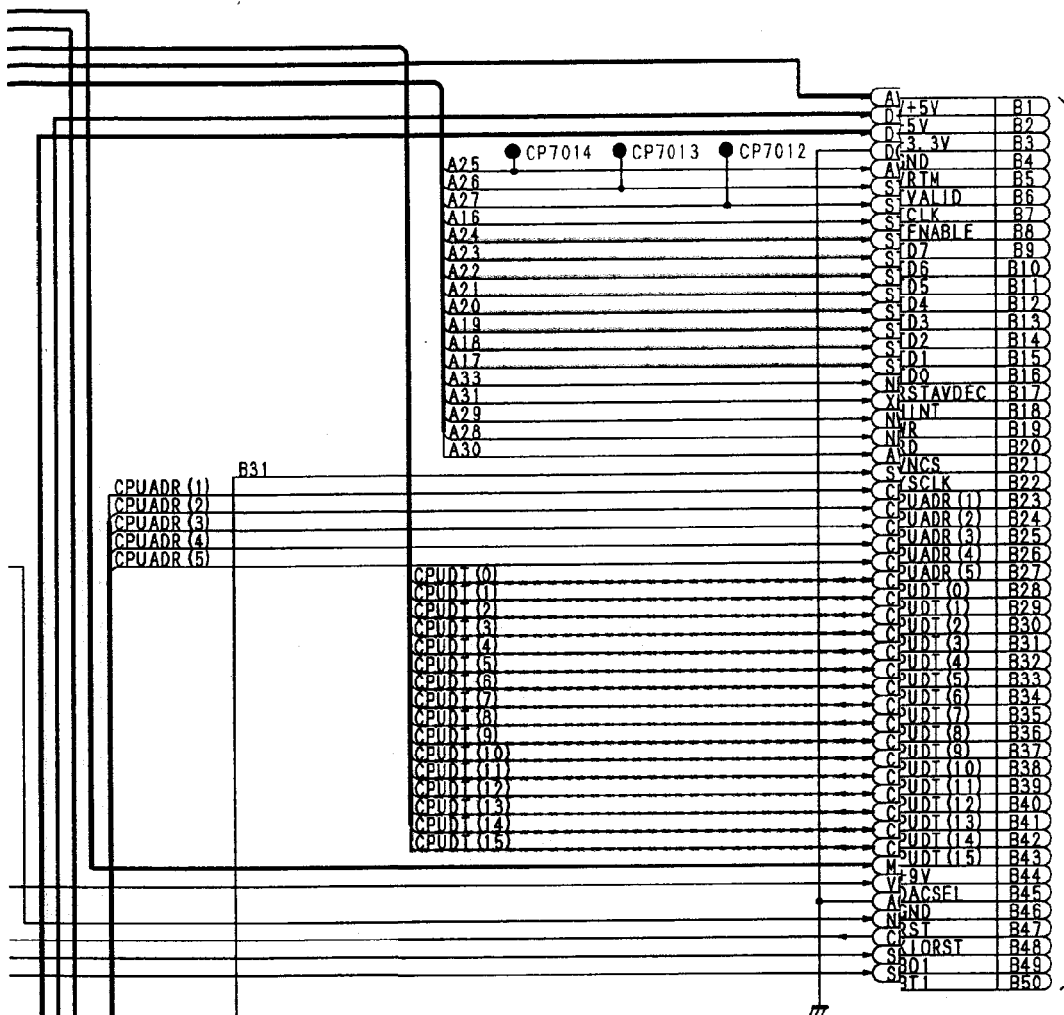


TO
MAIN
(5/5)
Page:3-33
/C-1

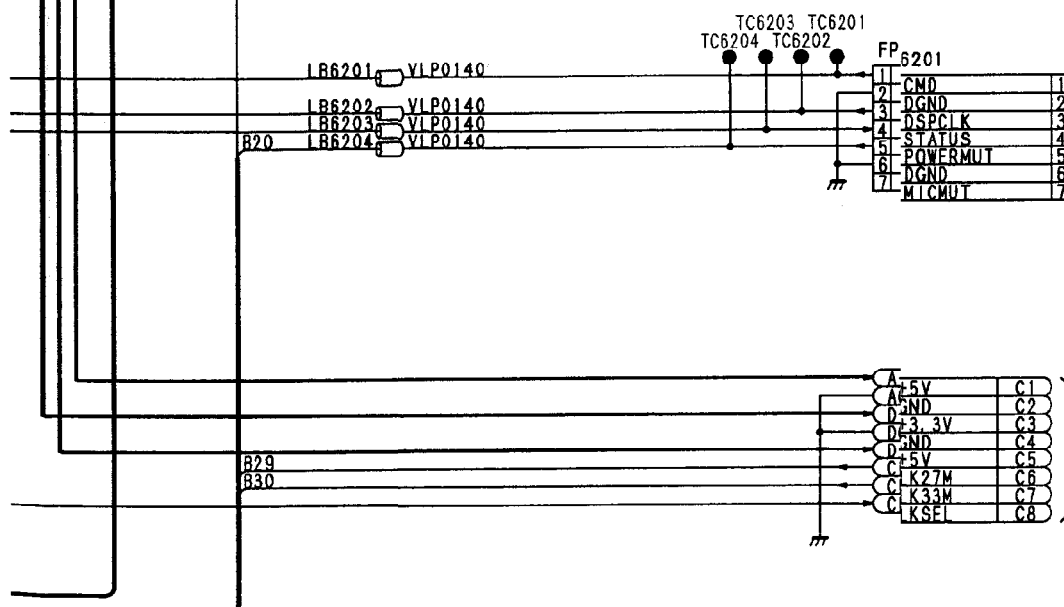


TO
OPERATION
FP6001
Page:3-43
/B-7

TO
MAIN
(3/5)
Page:3-27
/C-1

3-8. CLOCK SYNC SECTION (MAIN C.B.A. <3/5>)

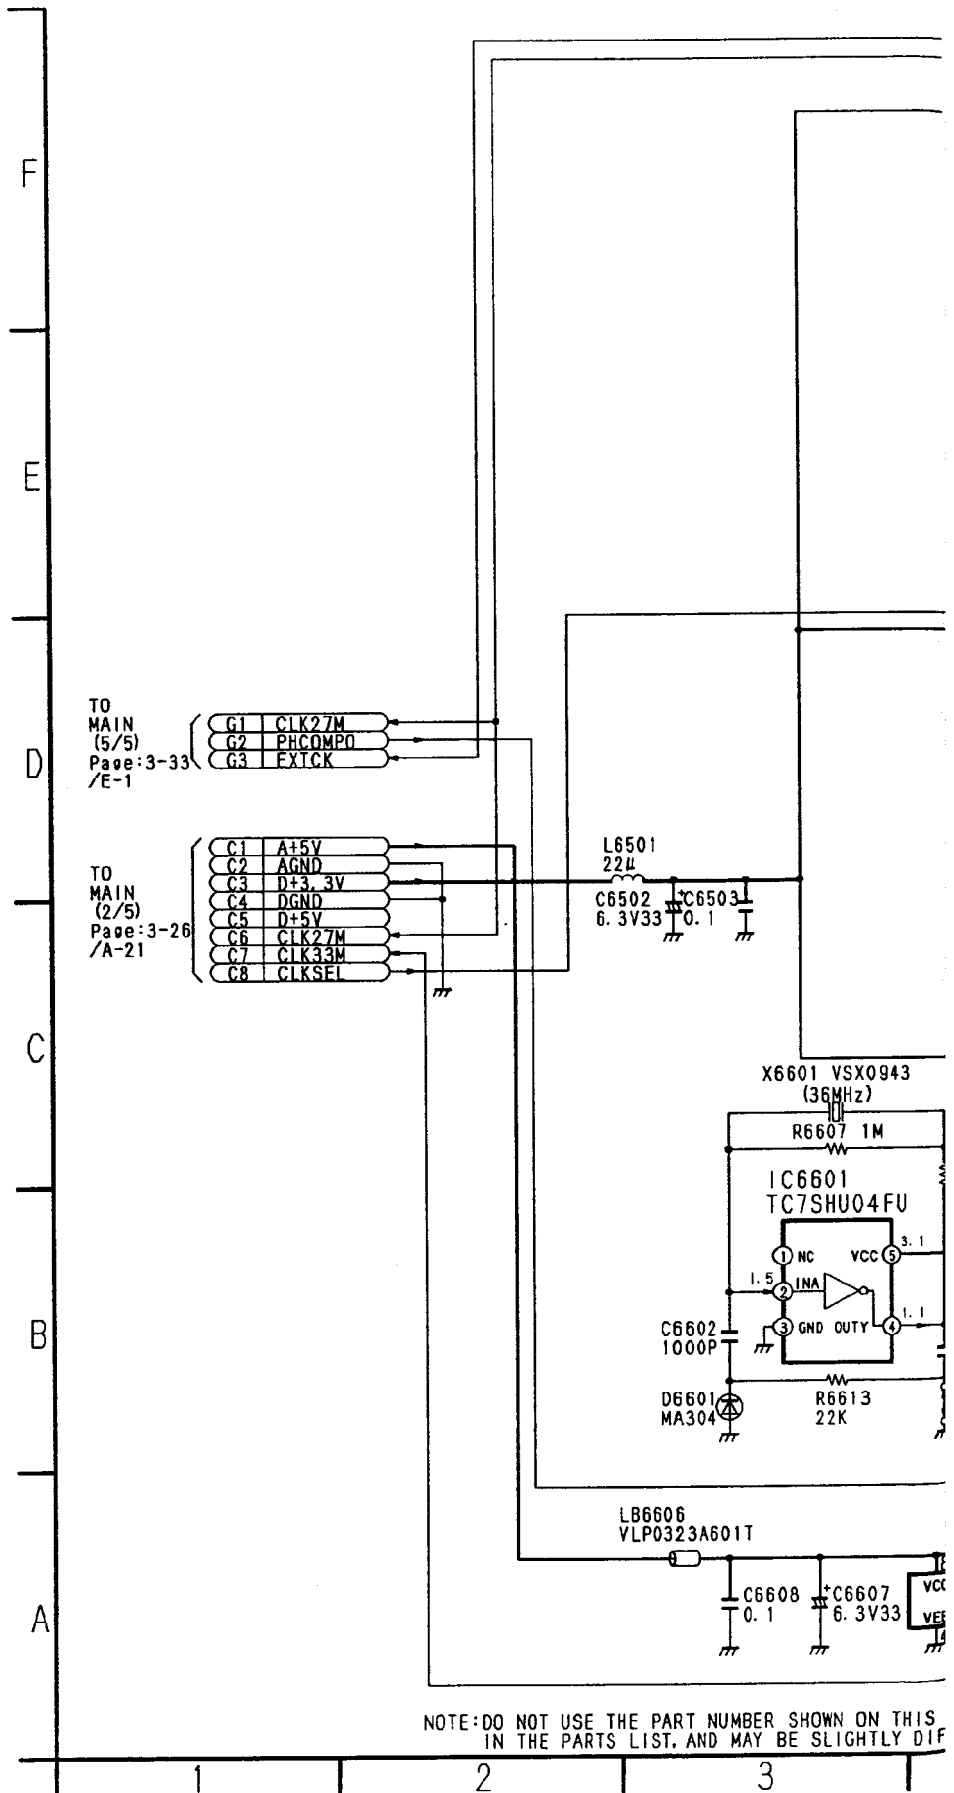


SCHEMATIC DIAGRAM

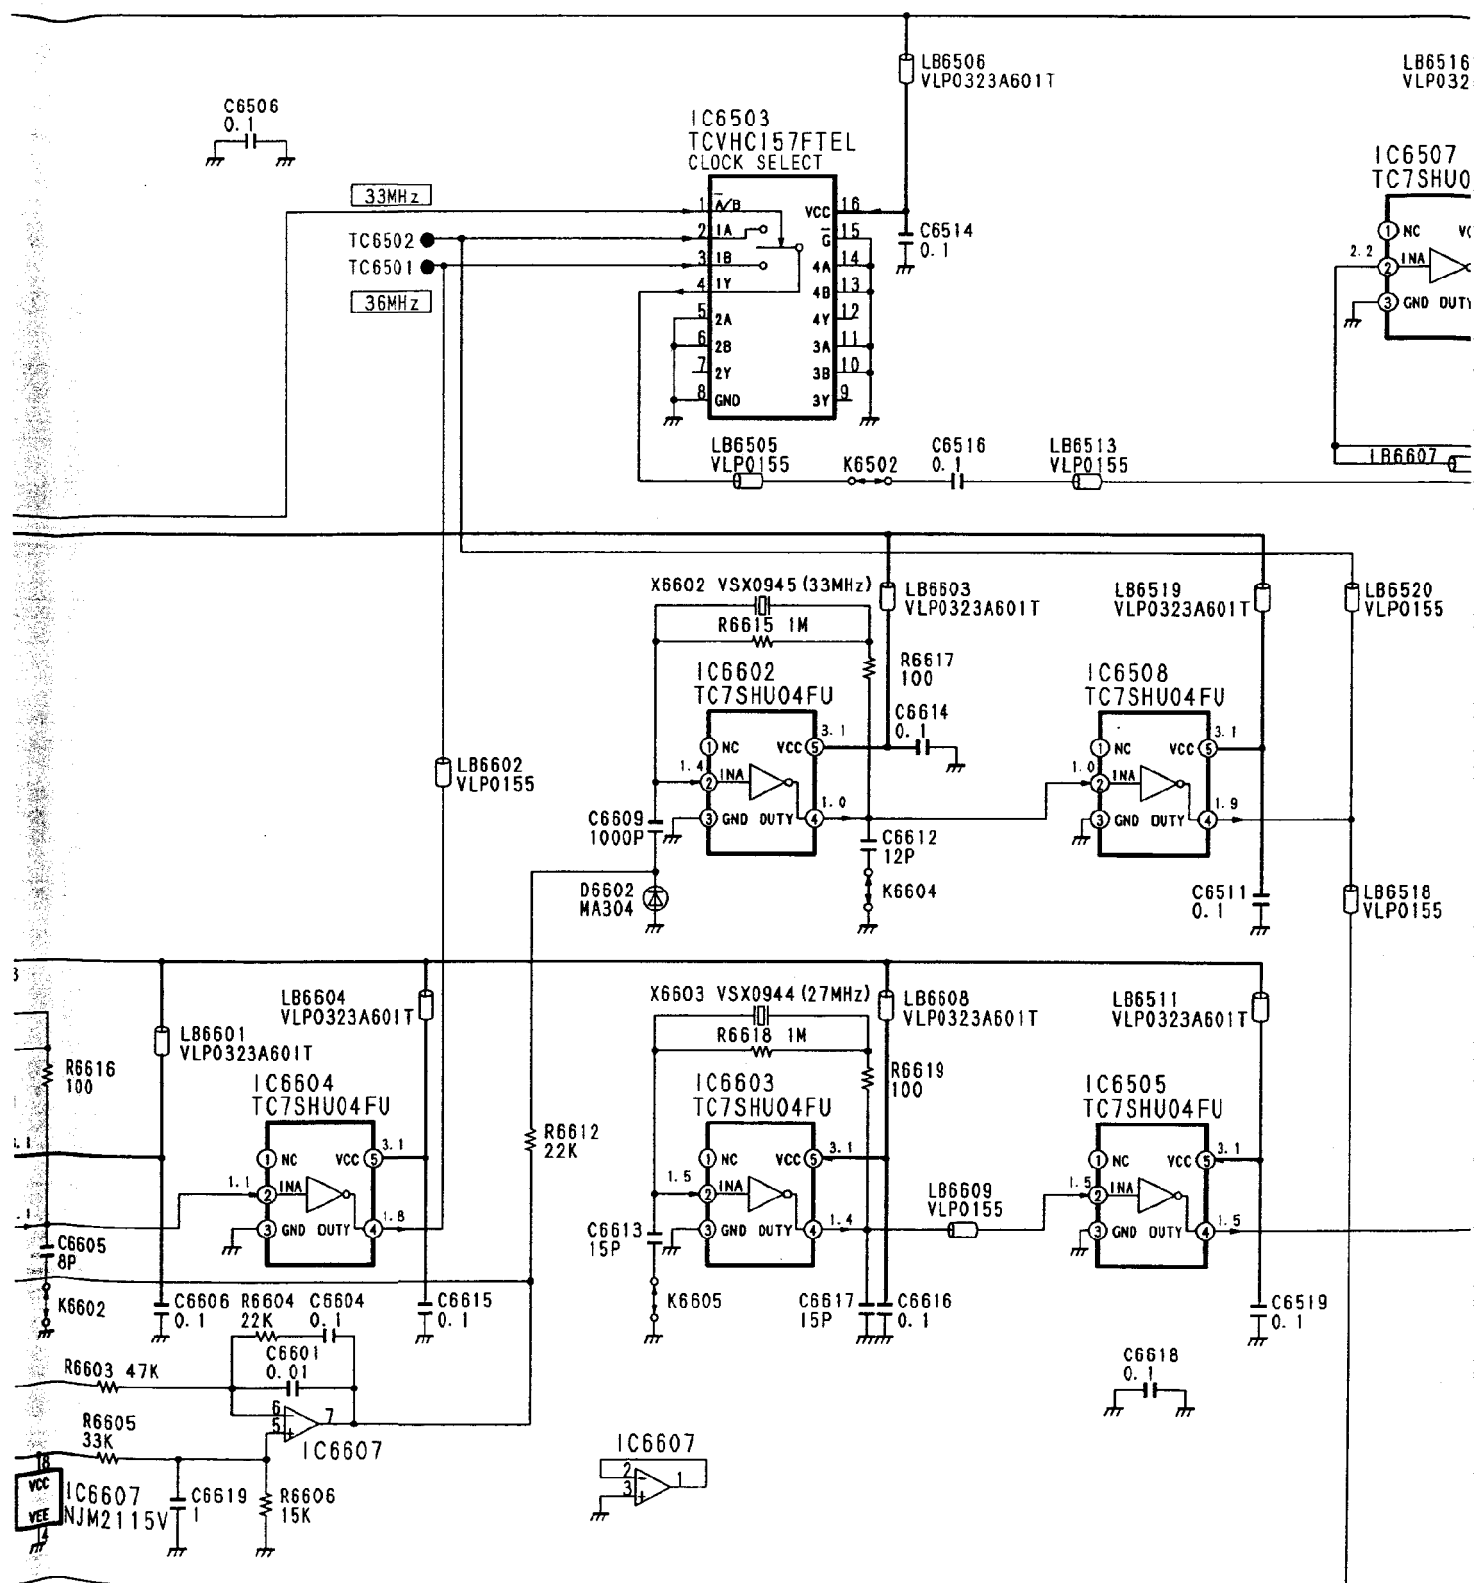


THIS DRAWING FOR ORDERING. THE CORRECT PART NUMBER IS SHOWN DIFFERENT OR AMENDED SINCE THIS DRAWING WAS PREPARED.

NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE IN THE BI WITH DVD TEST DISC (TITLE 12), AND THE DC VOLTAGE

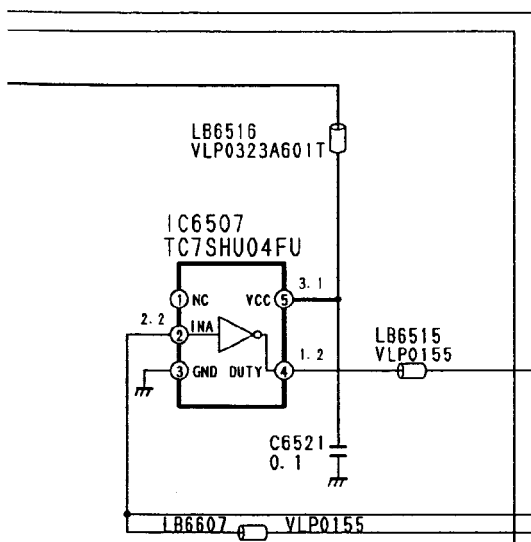

DACLKOKARA	11
DACLK0	12
DACLK	13

TO
MAIN
(4/5)
Page: 3-30
/A-1

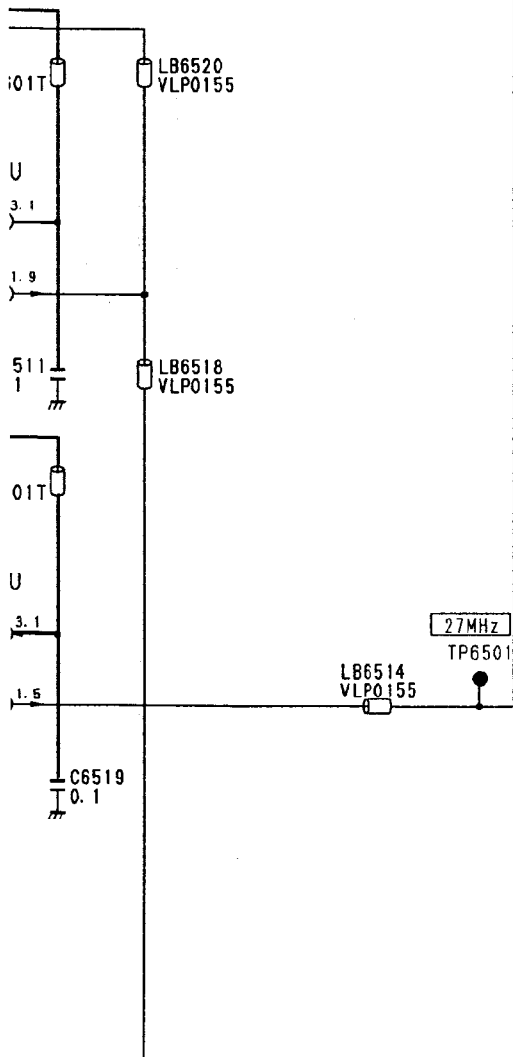







THE DC VOLTAGE IN THE BRACKETS () IN THIS DIAGRAM IS PLAYBACK MODE
E 12). AND THE DC VOLTAGE OUT OF BRACKETS IS STOP MODE.

3-9. AUDIO-DAC SECTION (MAIN C.B.A. <4/5>) SCHEMATIC DIAGRAM


TO MAIN
(2/5)
Page:3-22
/B-1

TO MAIN
(5/5)
Page:3-37
/F-19

TO MAIN
(3/5)
Page:3-29
/E-10

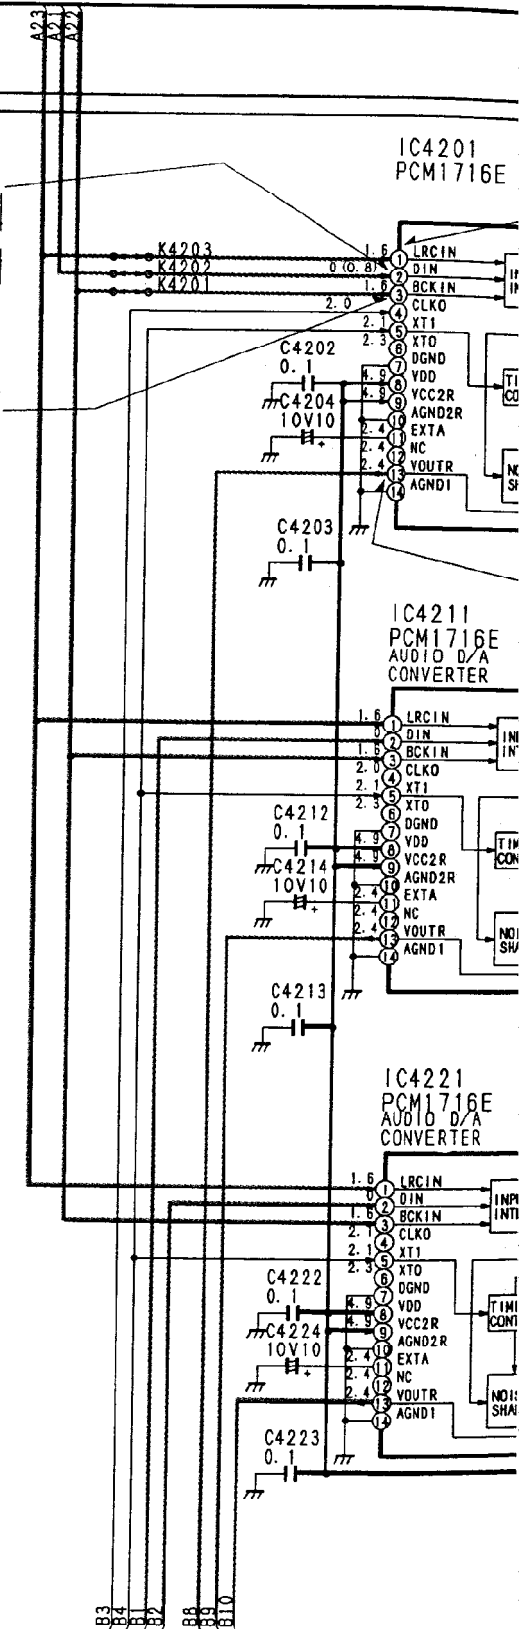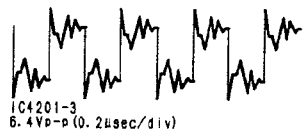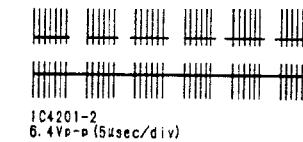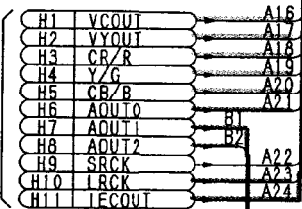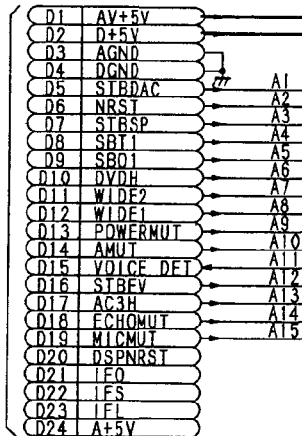


AUDIO-DAC SECTION REF. NO. 24206

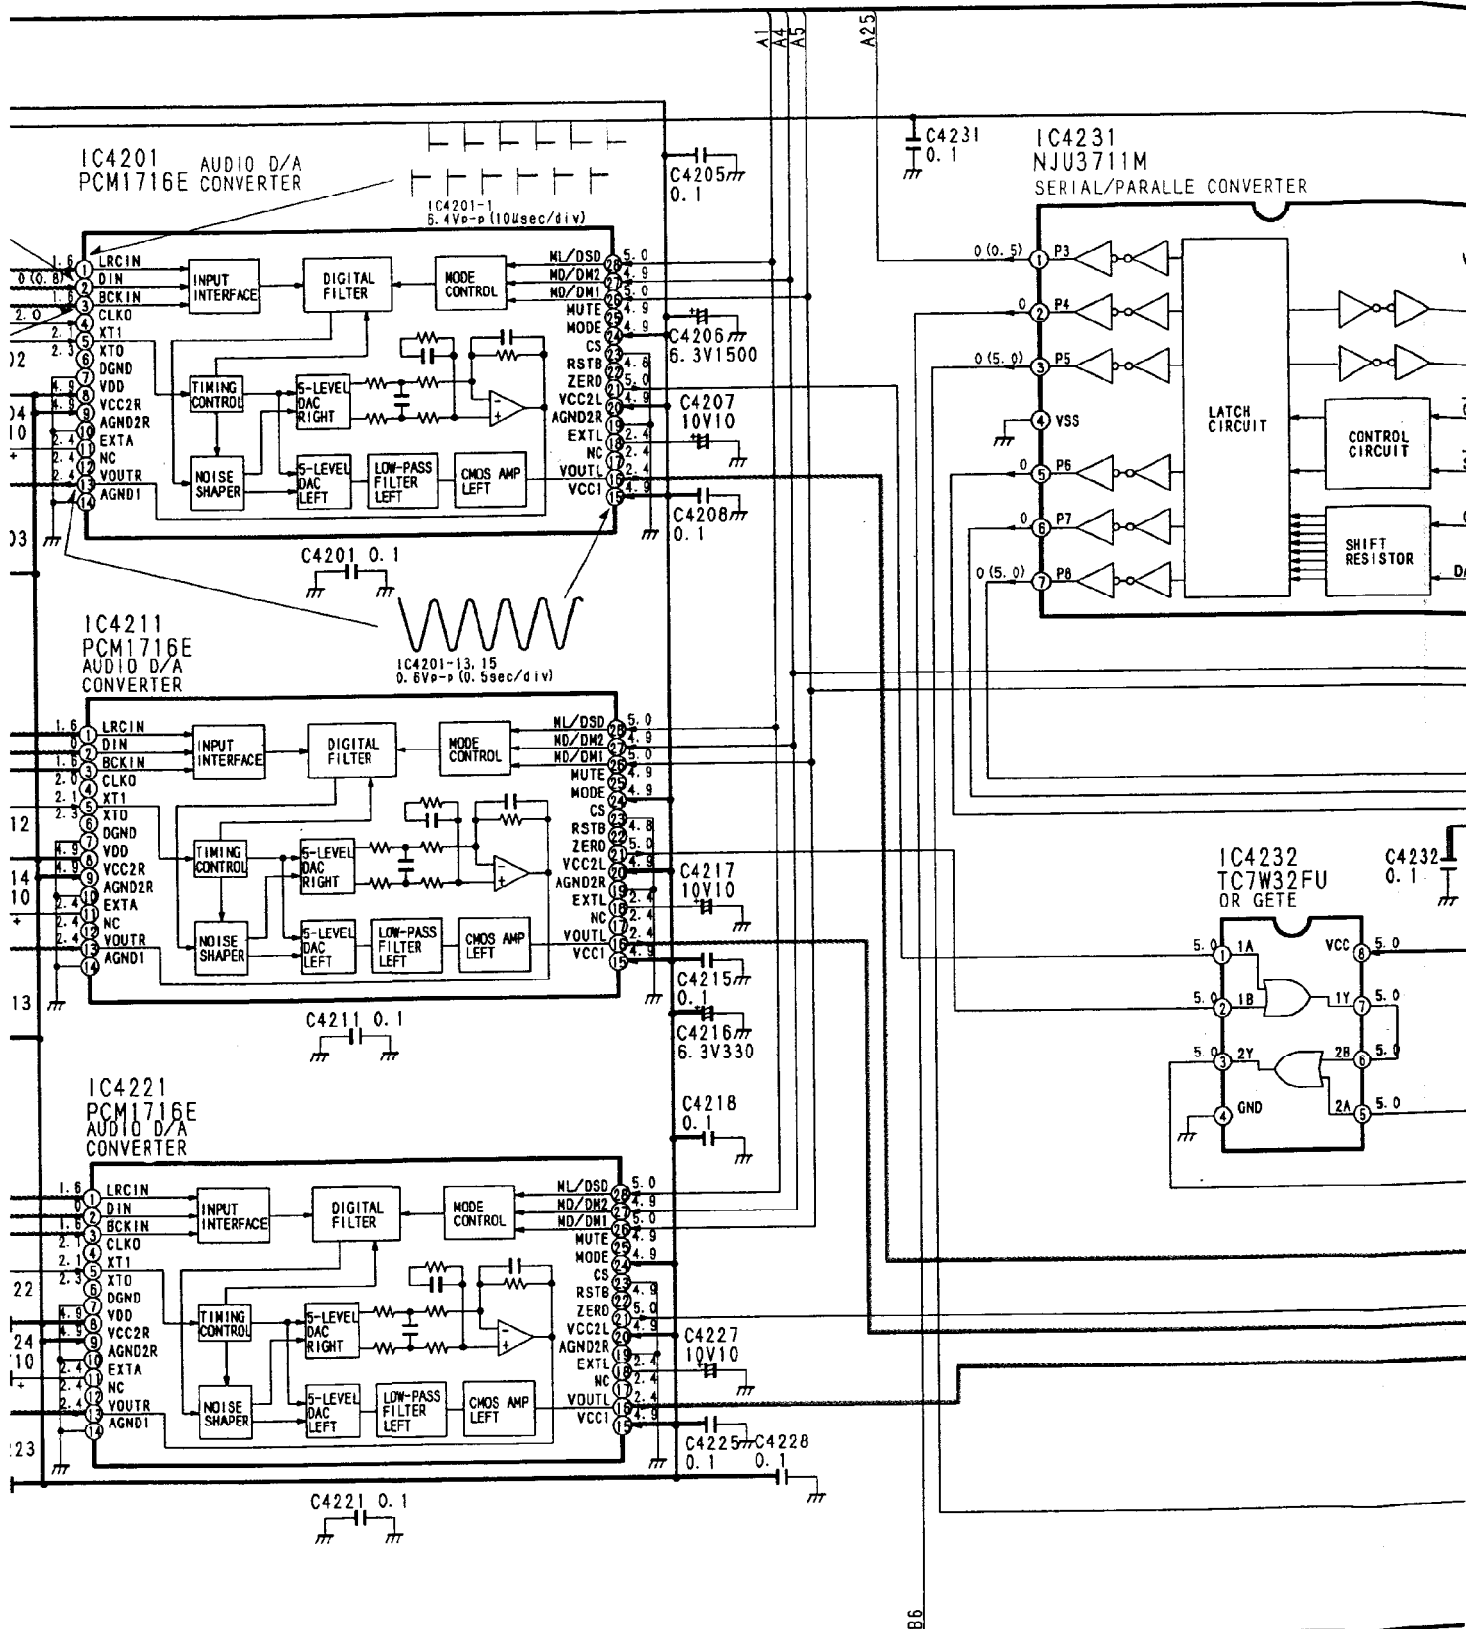

N REF. NO. 24200 SERIES


NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE IN THE BRACKETS () ON THIS DIAGRAM IS PLAYBACK MODE WITH DVD TEST DISC (TITLE 12), AND THE DC VOLTAGE OUT OF BRACKETS IS STOP MODE.

• AUDIO ----- DATA

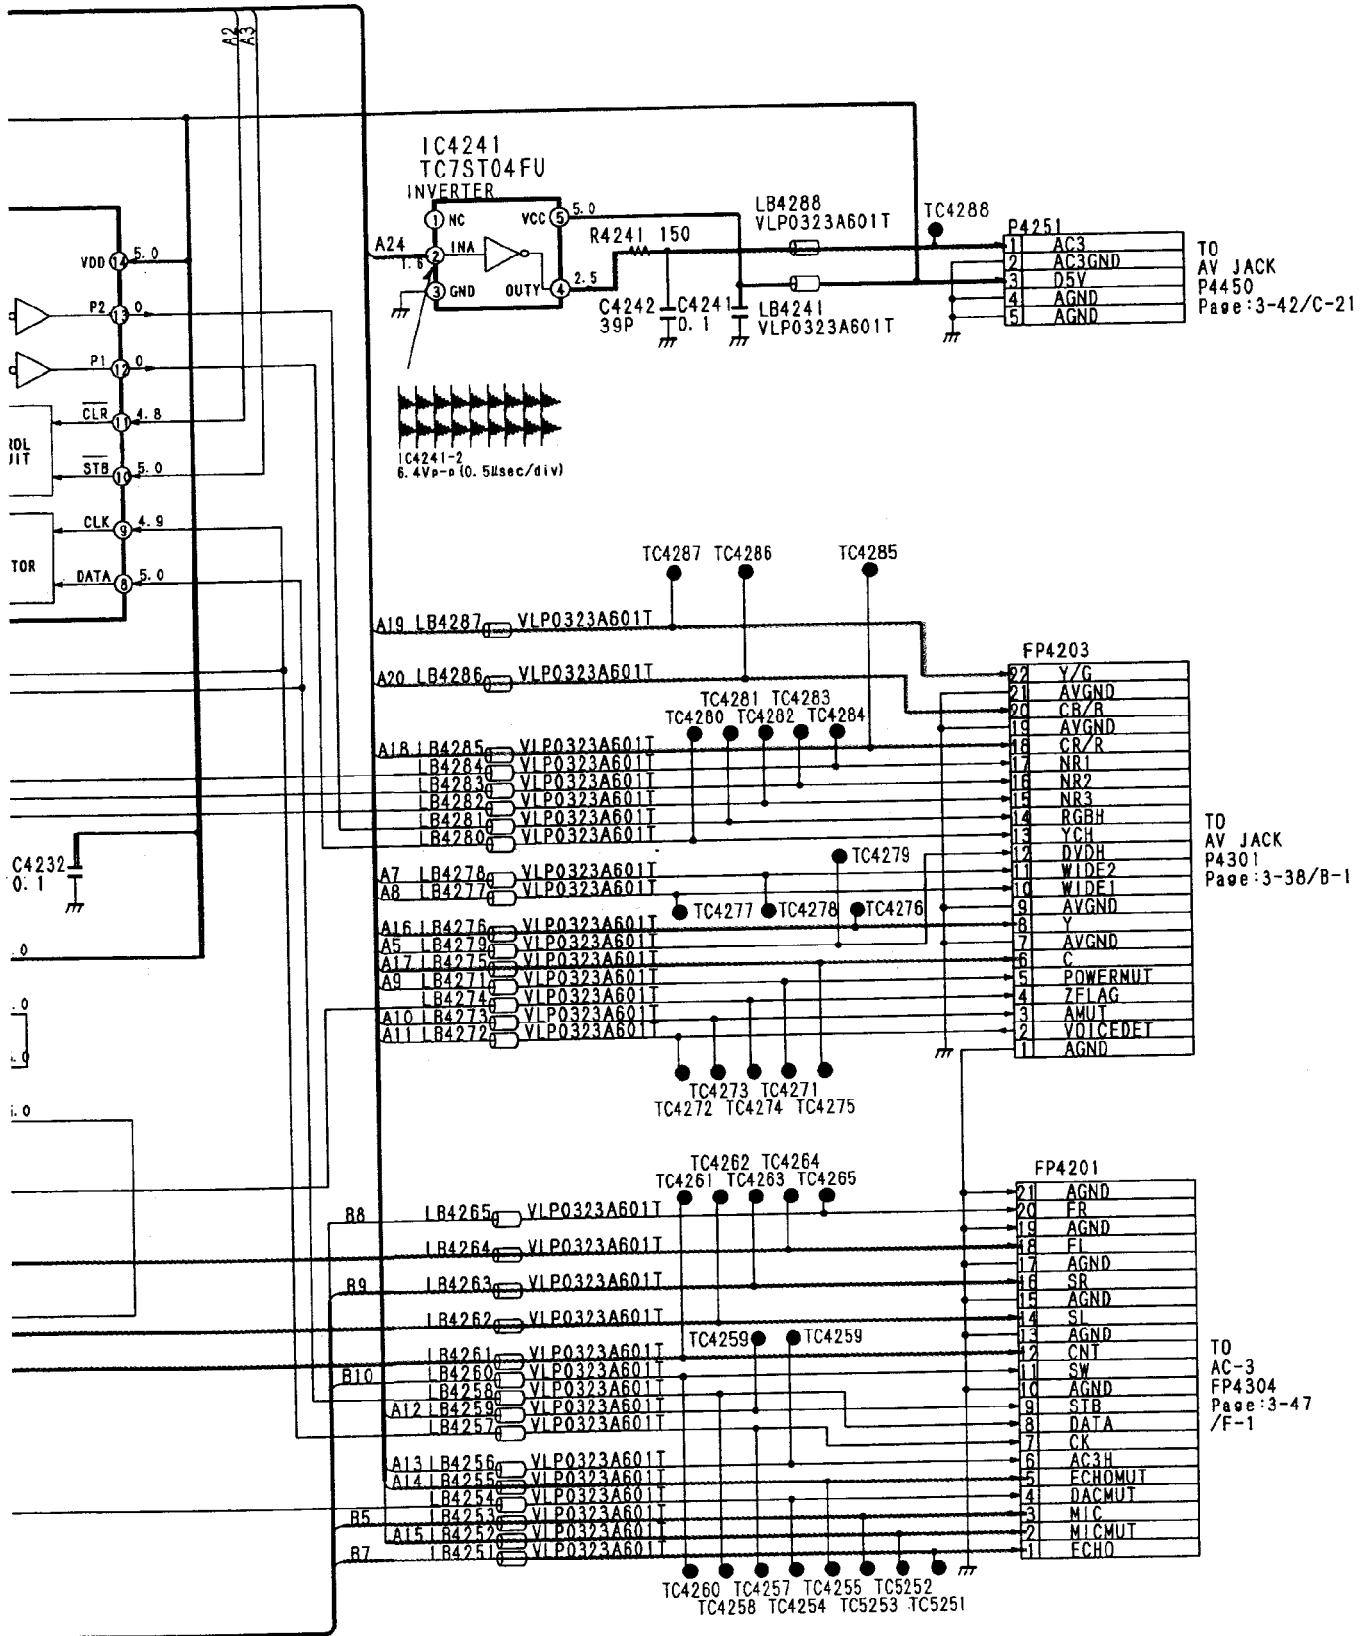


;()ON
E 12).

3-10. AVDEC AND VIDEO-DAC SECTION (MAIN C.B.)

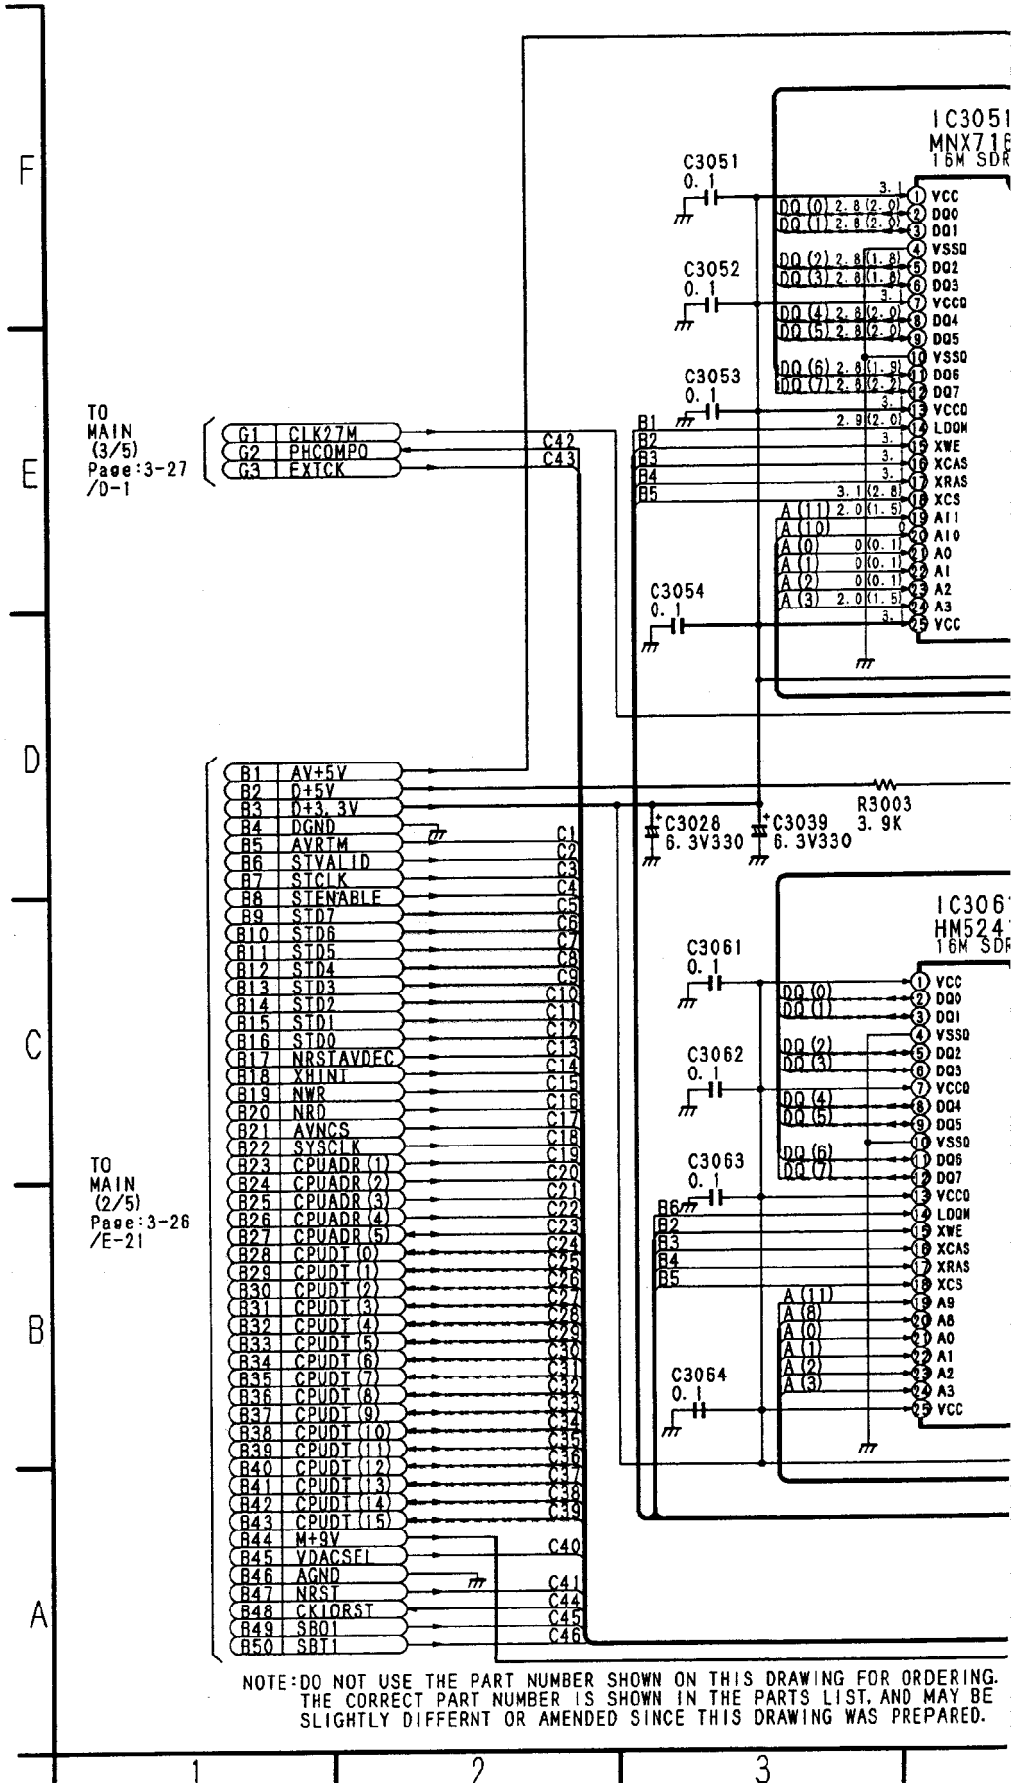


B.A. <5/5>) SCHEMATIC DIAGRAM

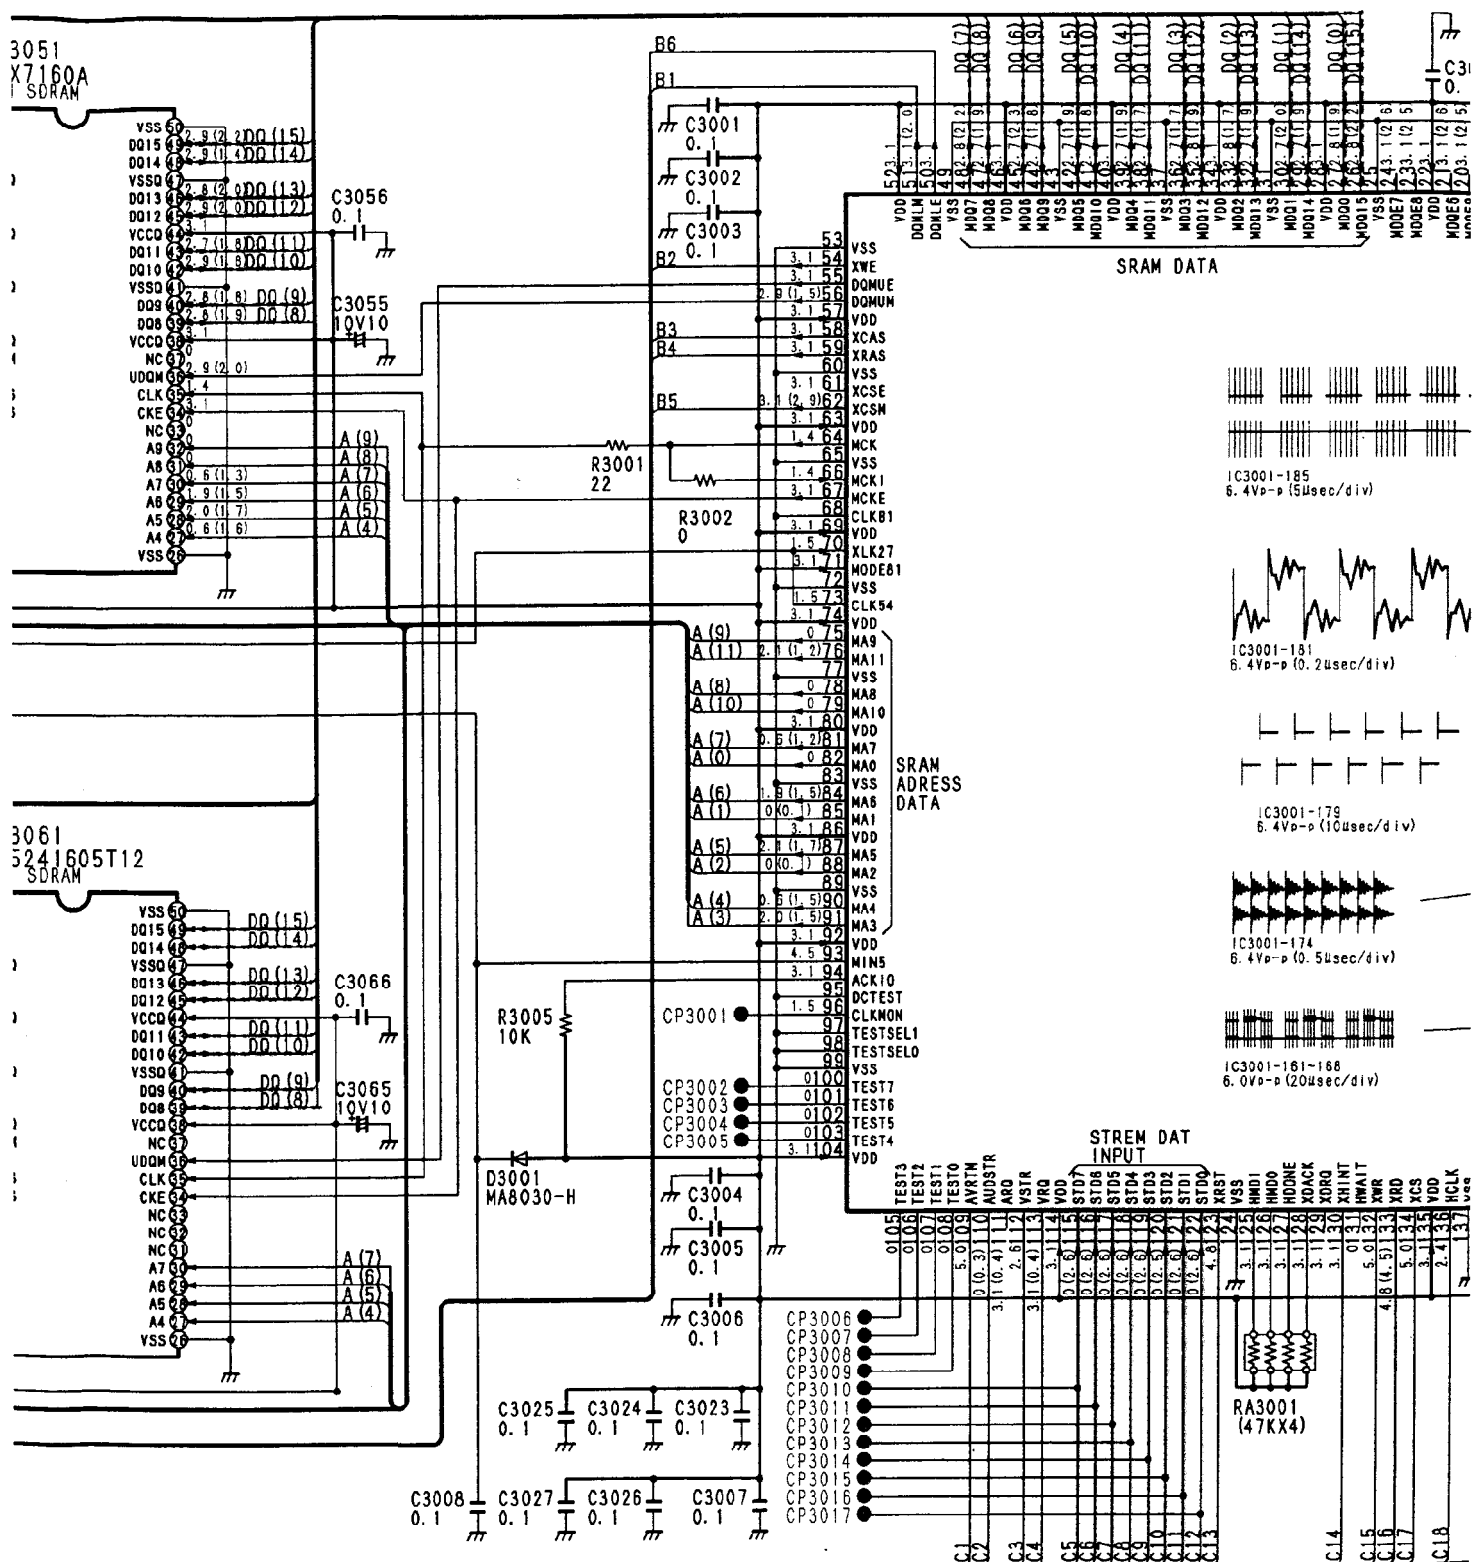


NG.
BE
D.

NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE IN THE BRACKETS () ON THIS DIAGRAM IS PLAYBACK MODE WITH DVD TEST DISC (TITLE 12). AND THE DC VOLTAGE OUT OF BRACKETS IS STOP MODE.

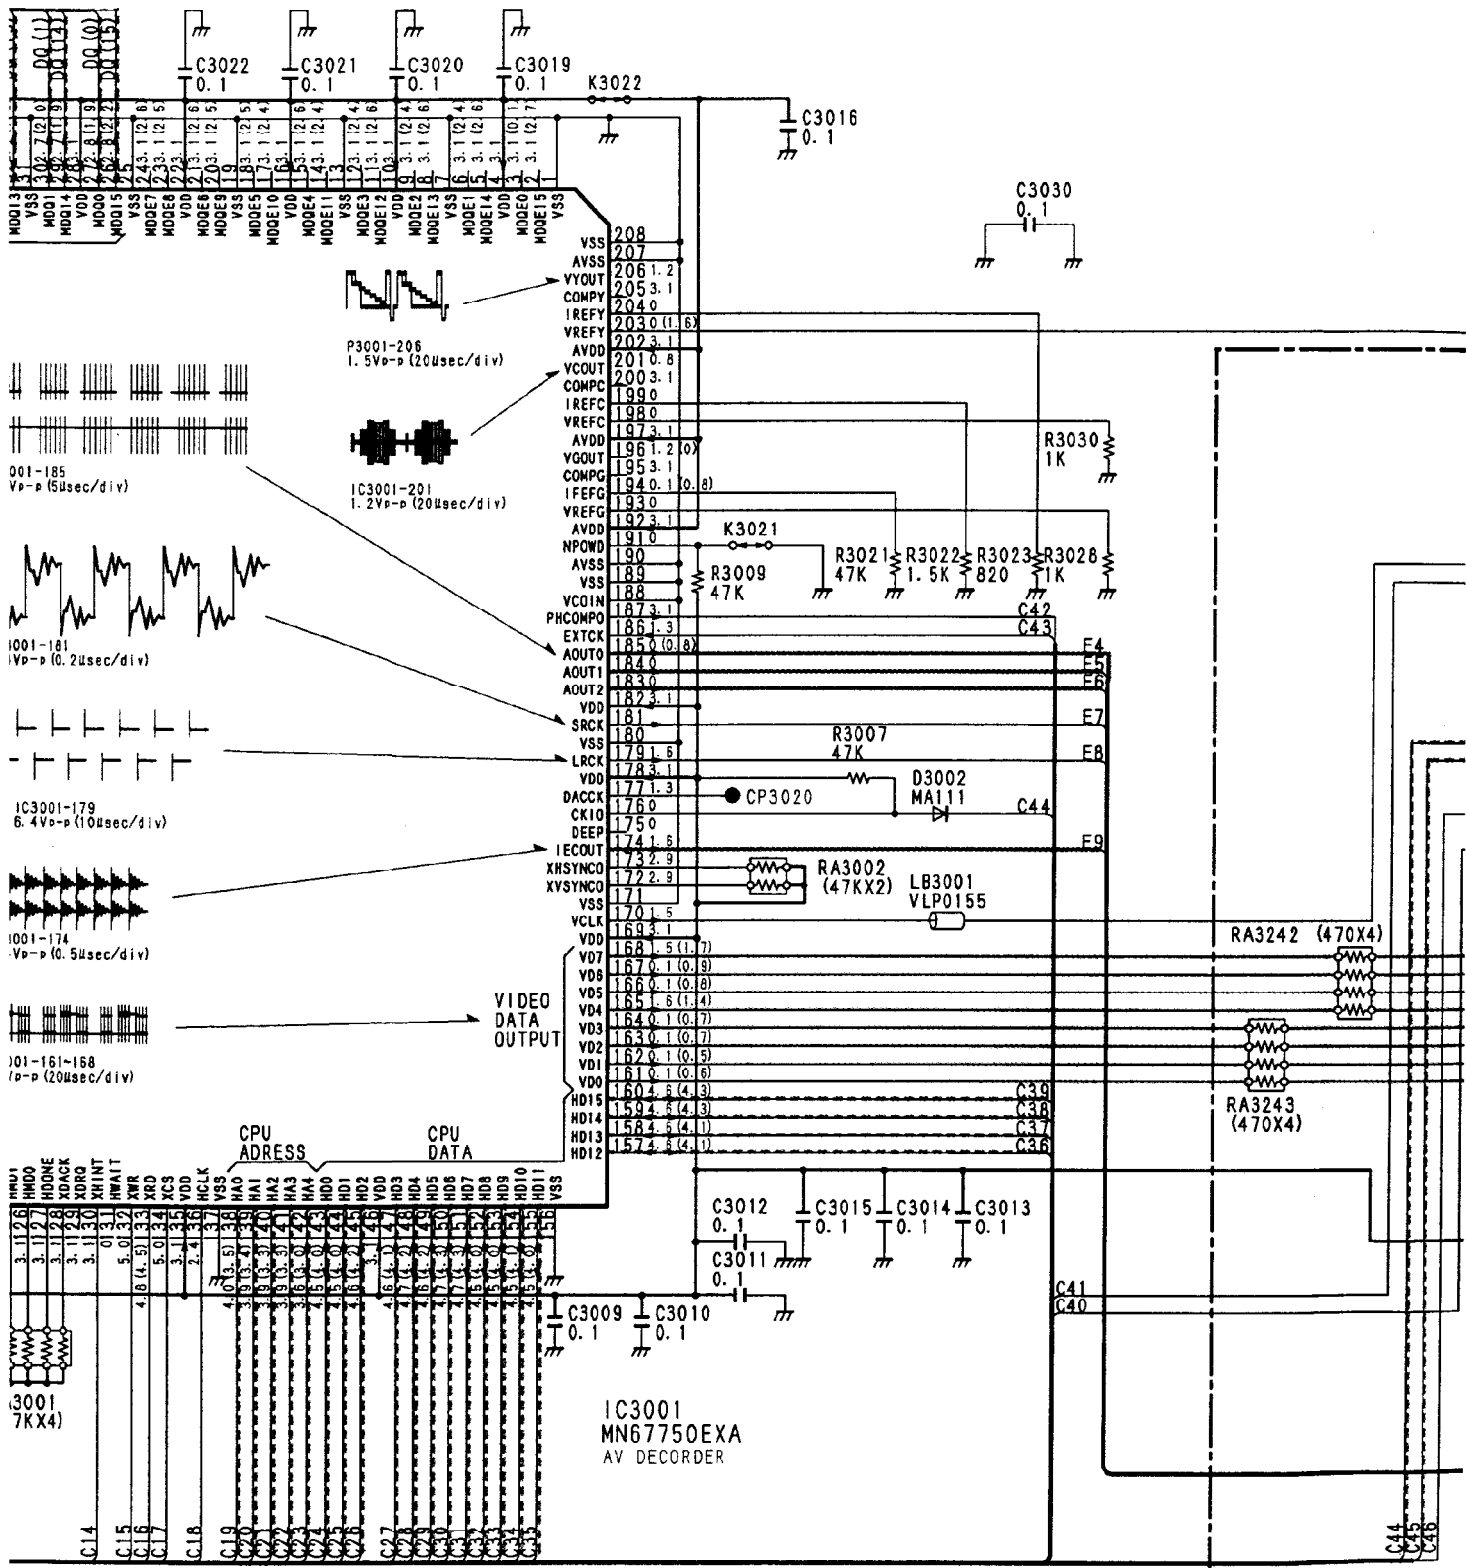



AV DECODER SECTION REF. NO. 23000 SERIES


VIDEO DECOD

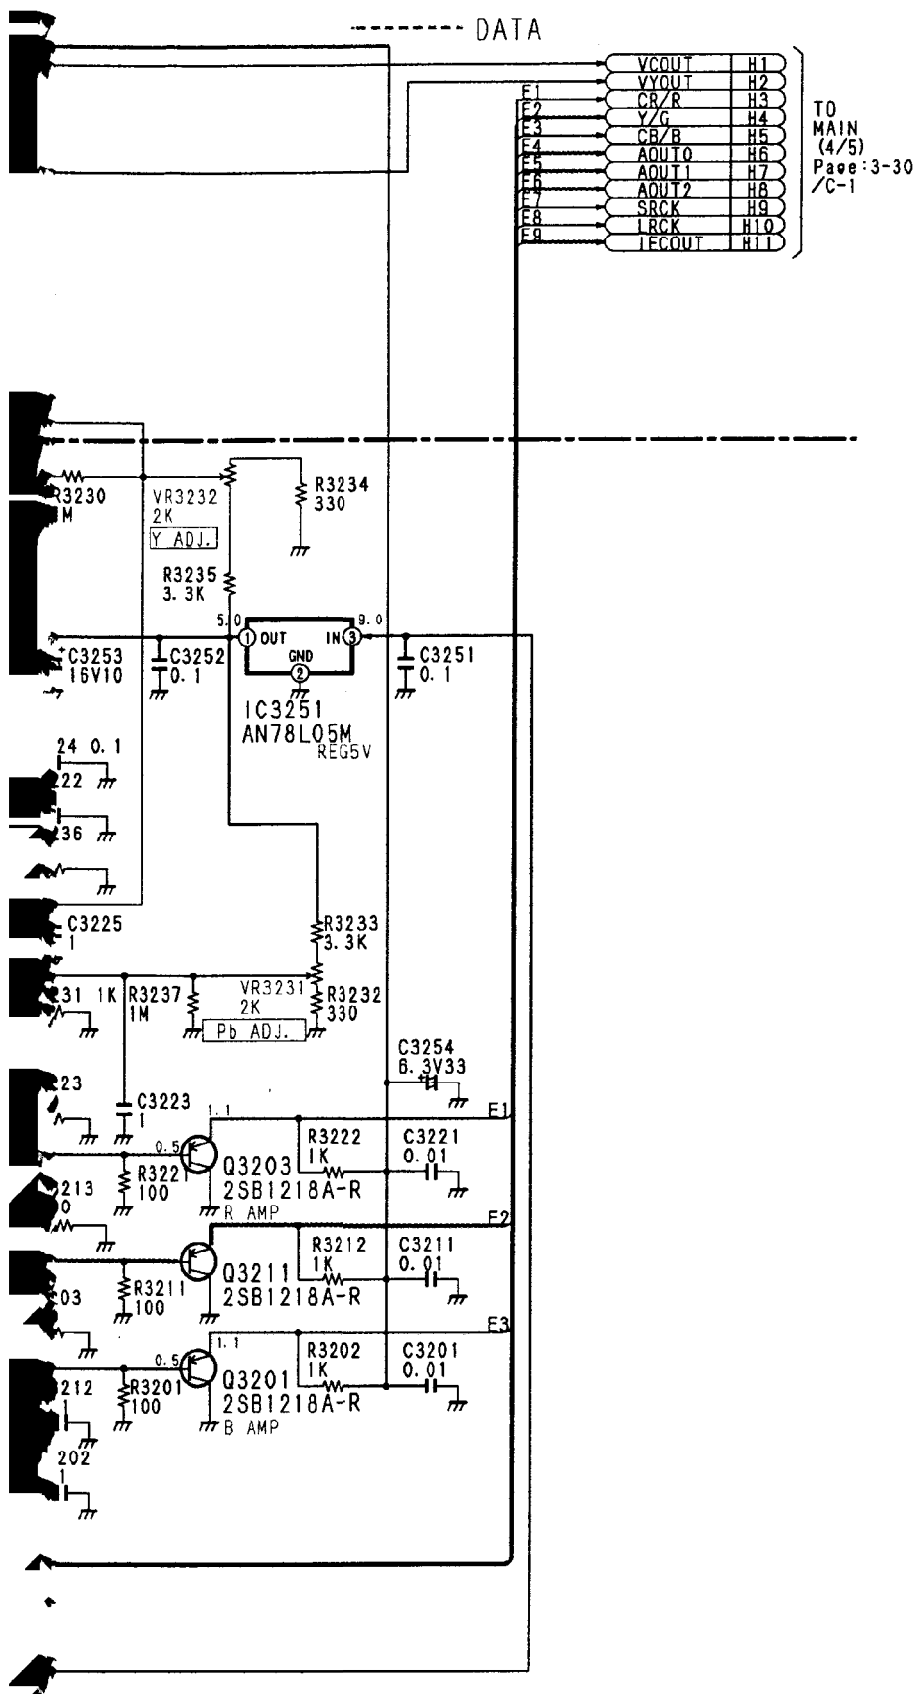

3-11. AV JACK SCHEMATIC DIAGRAM

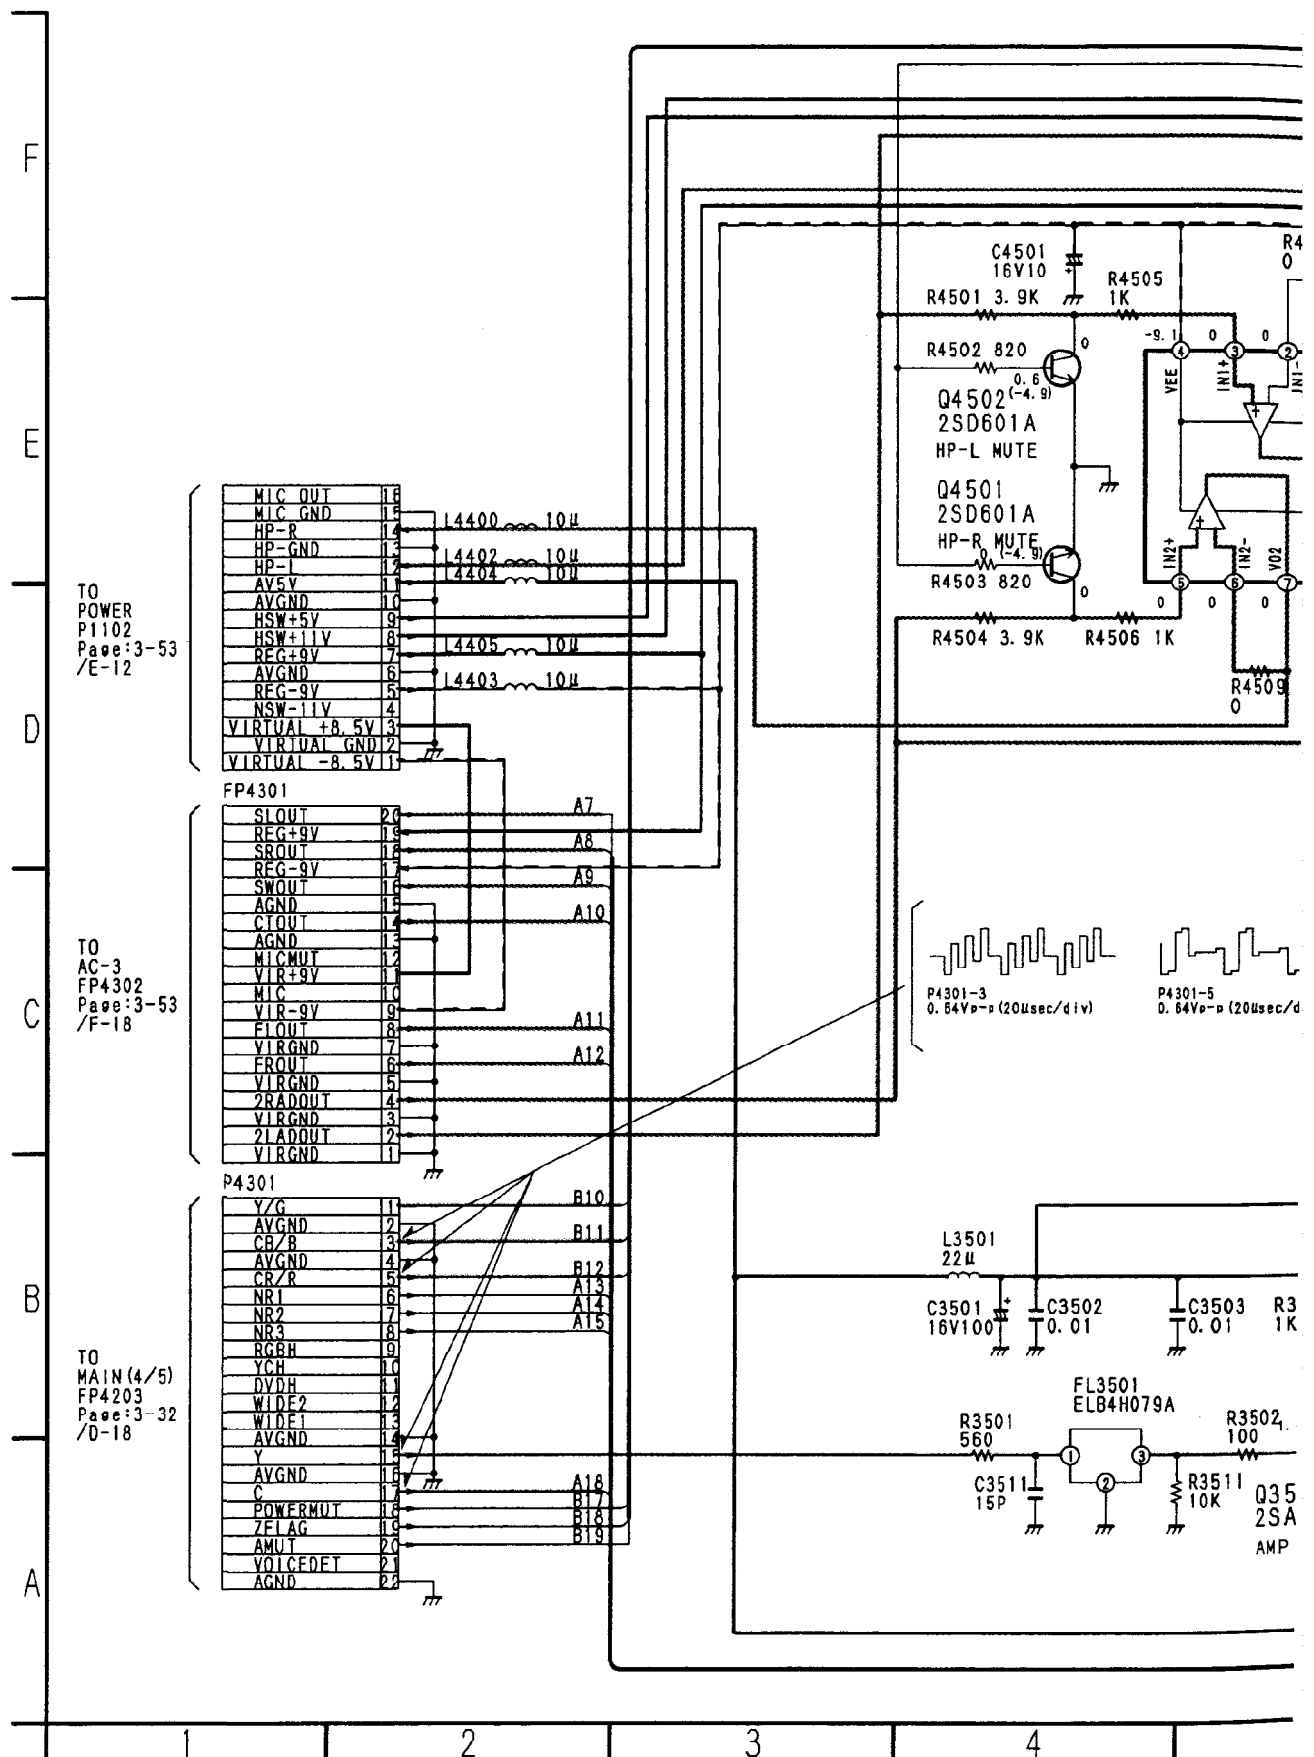

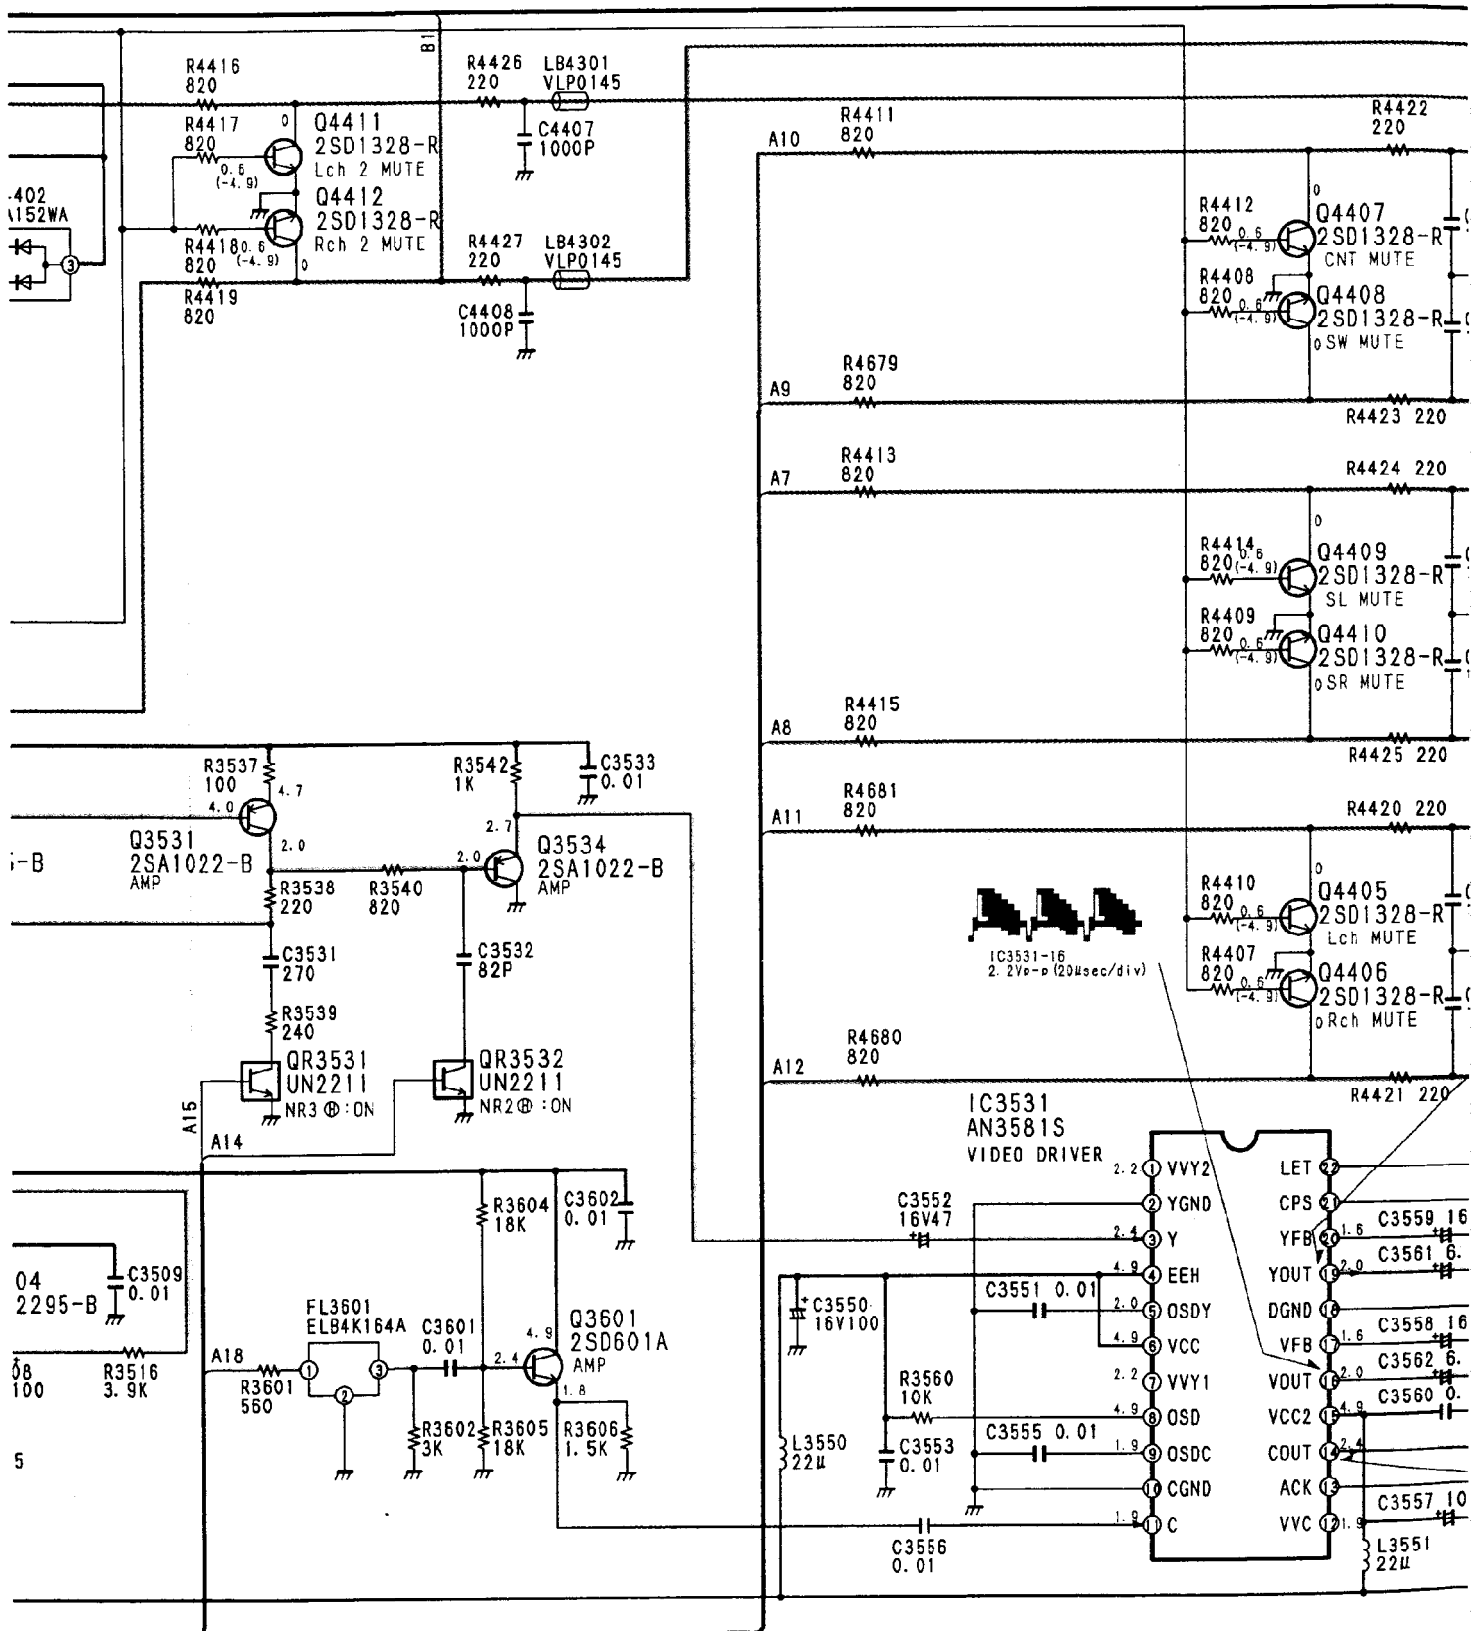

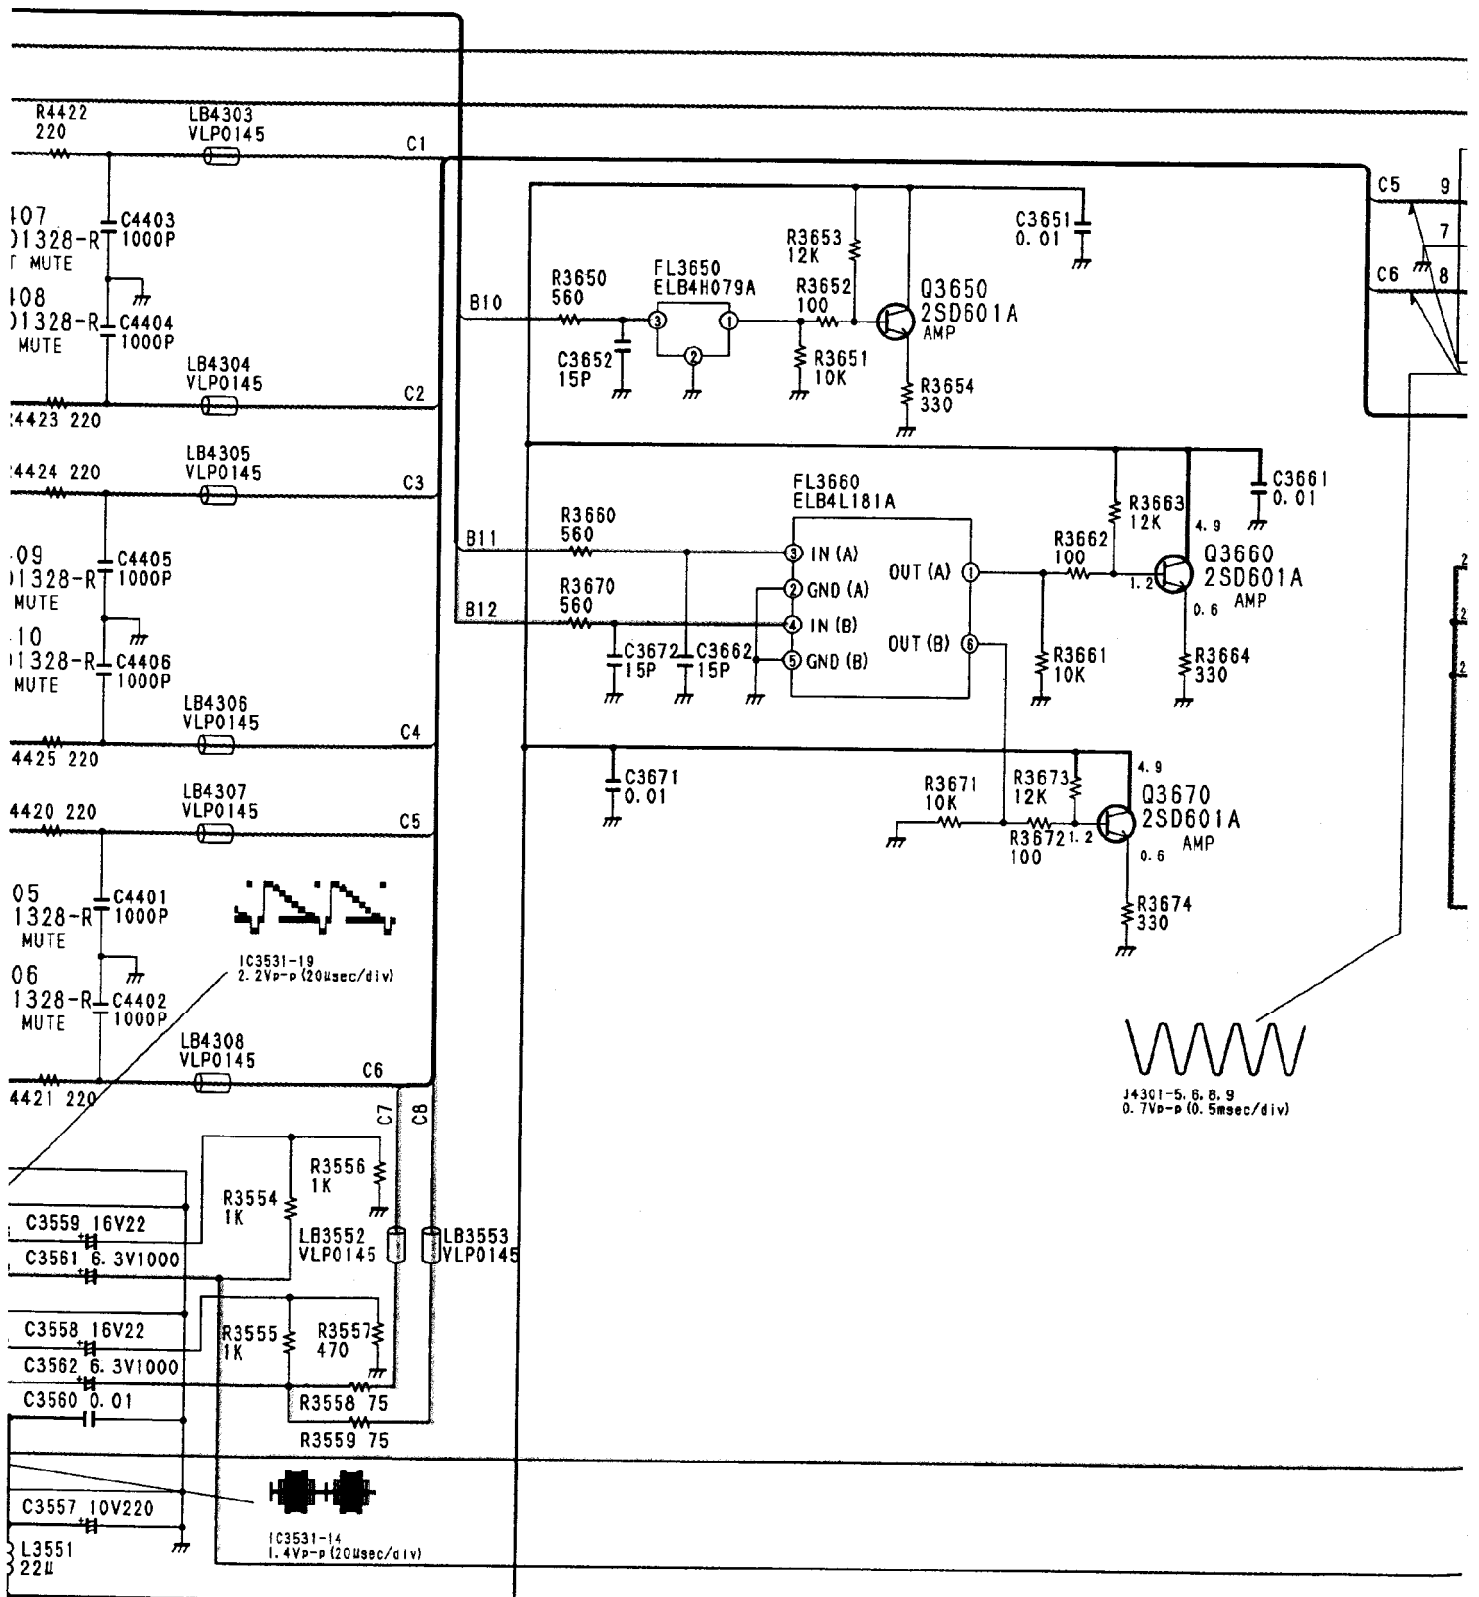

IS PLAYBACK MODE
ODE.

NOTE: DO NOT USE THE PART NUMBER SHOWN ON THIS DRAWING FOR ORDERING. THE CORRECT PART IN THE PARTS LIST, AND MAY BE SLIGHTLY DIFFERENT OR AMENDED SINCE THIS DRAWING W.

13


14

15


16

17


VIDEO — AUDIO

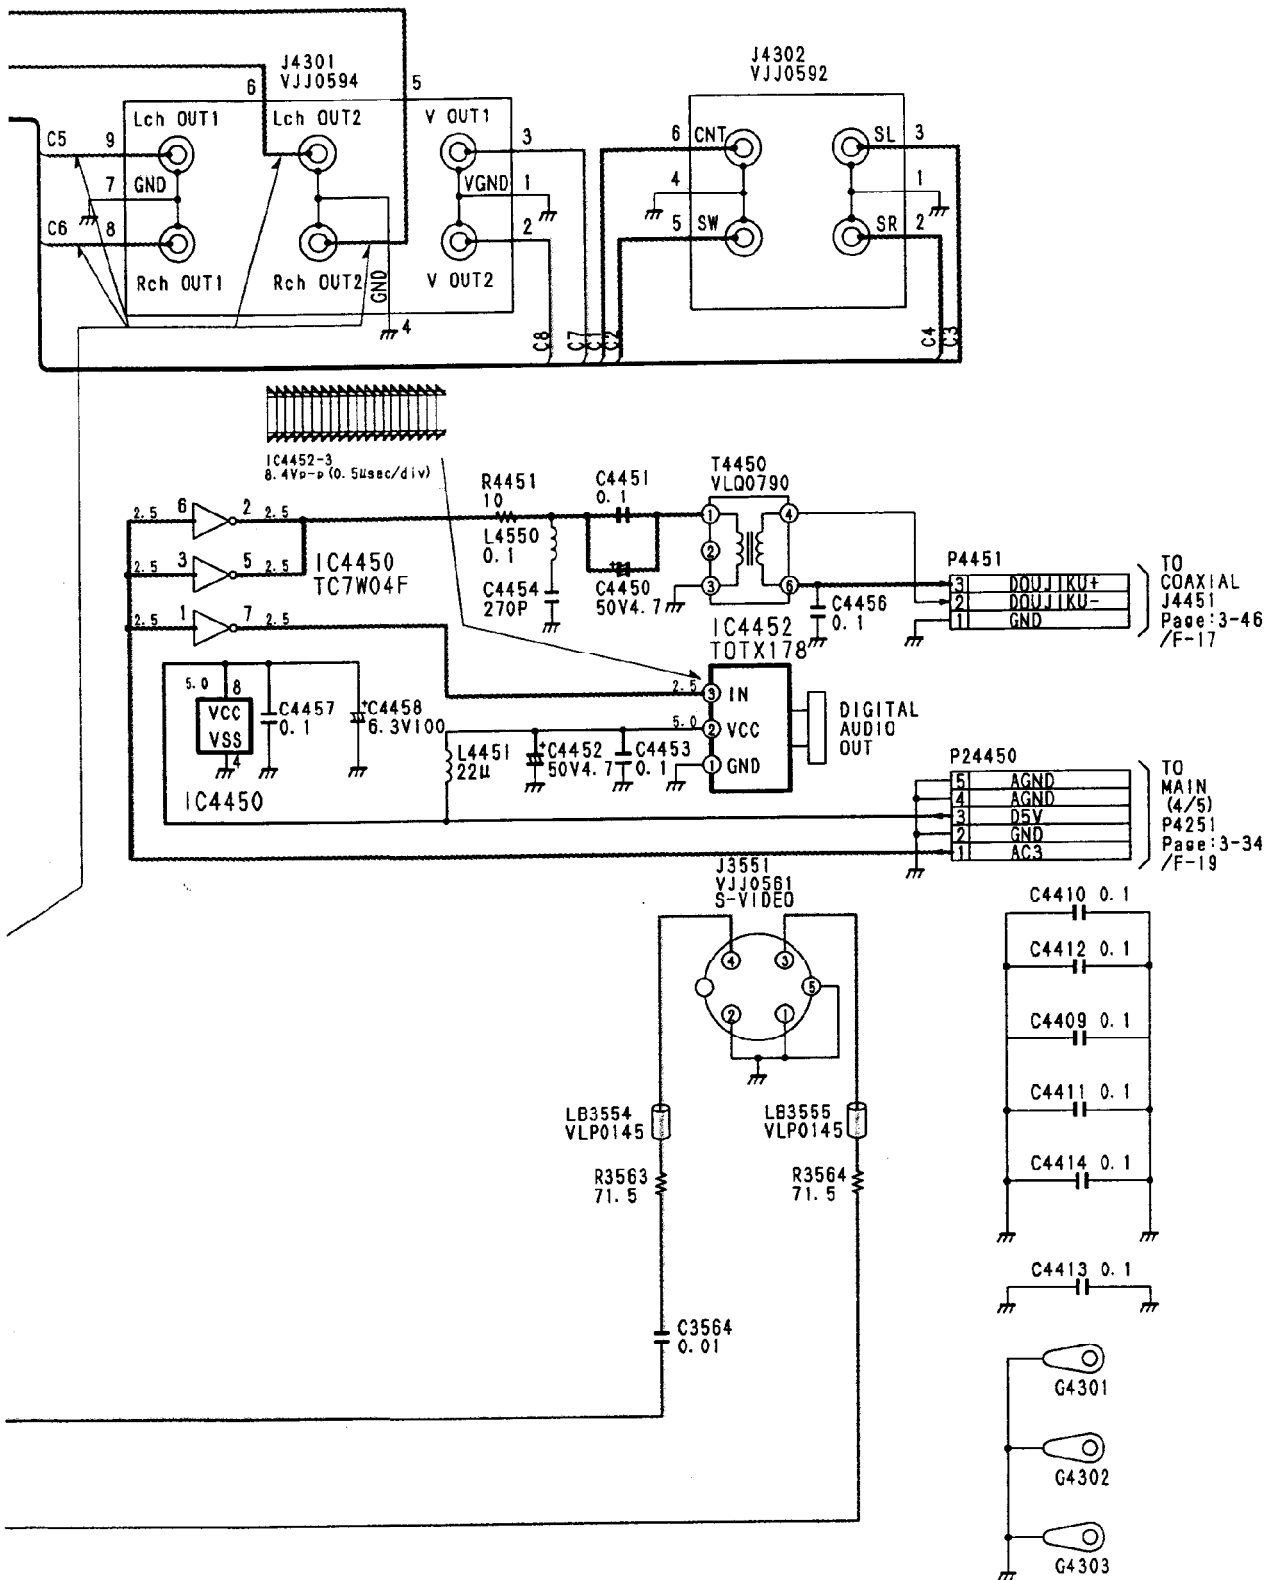


3-12. OPERATION, VOLUME, HP JACK AND COAXIAL SCHEMATIC DI

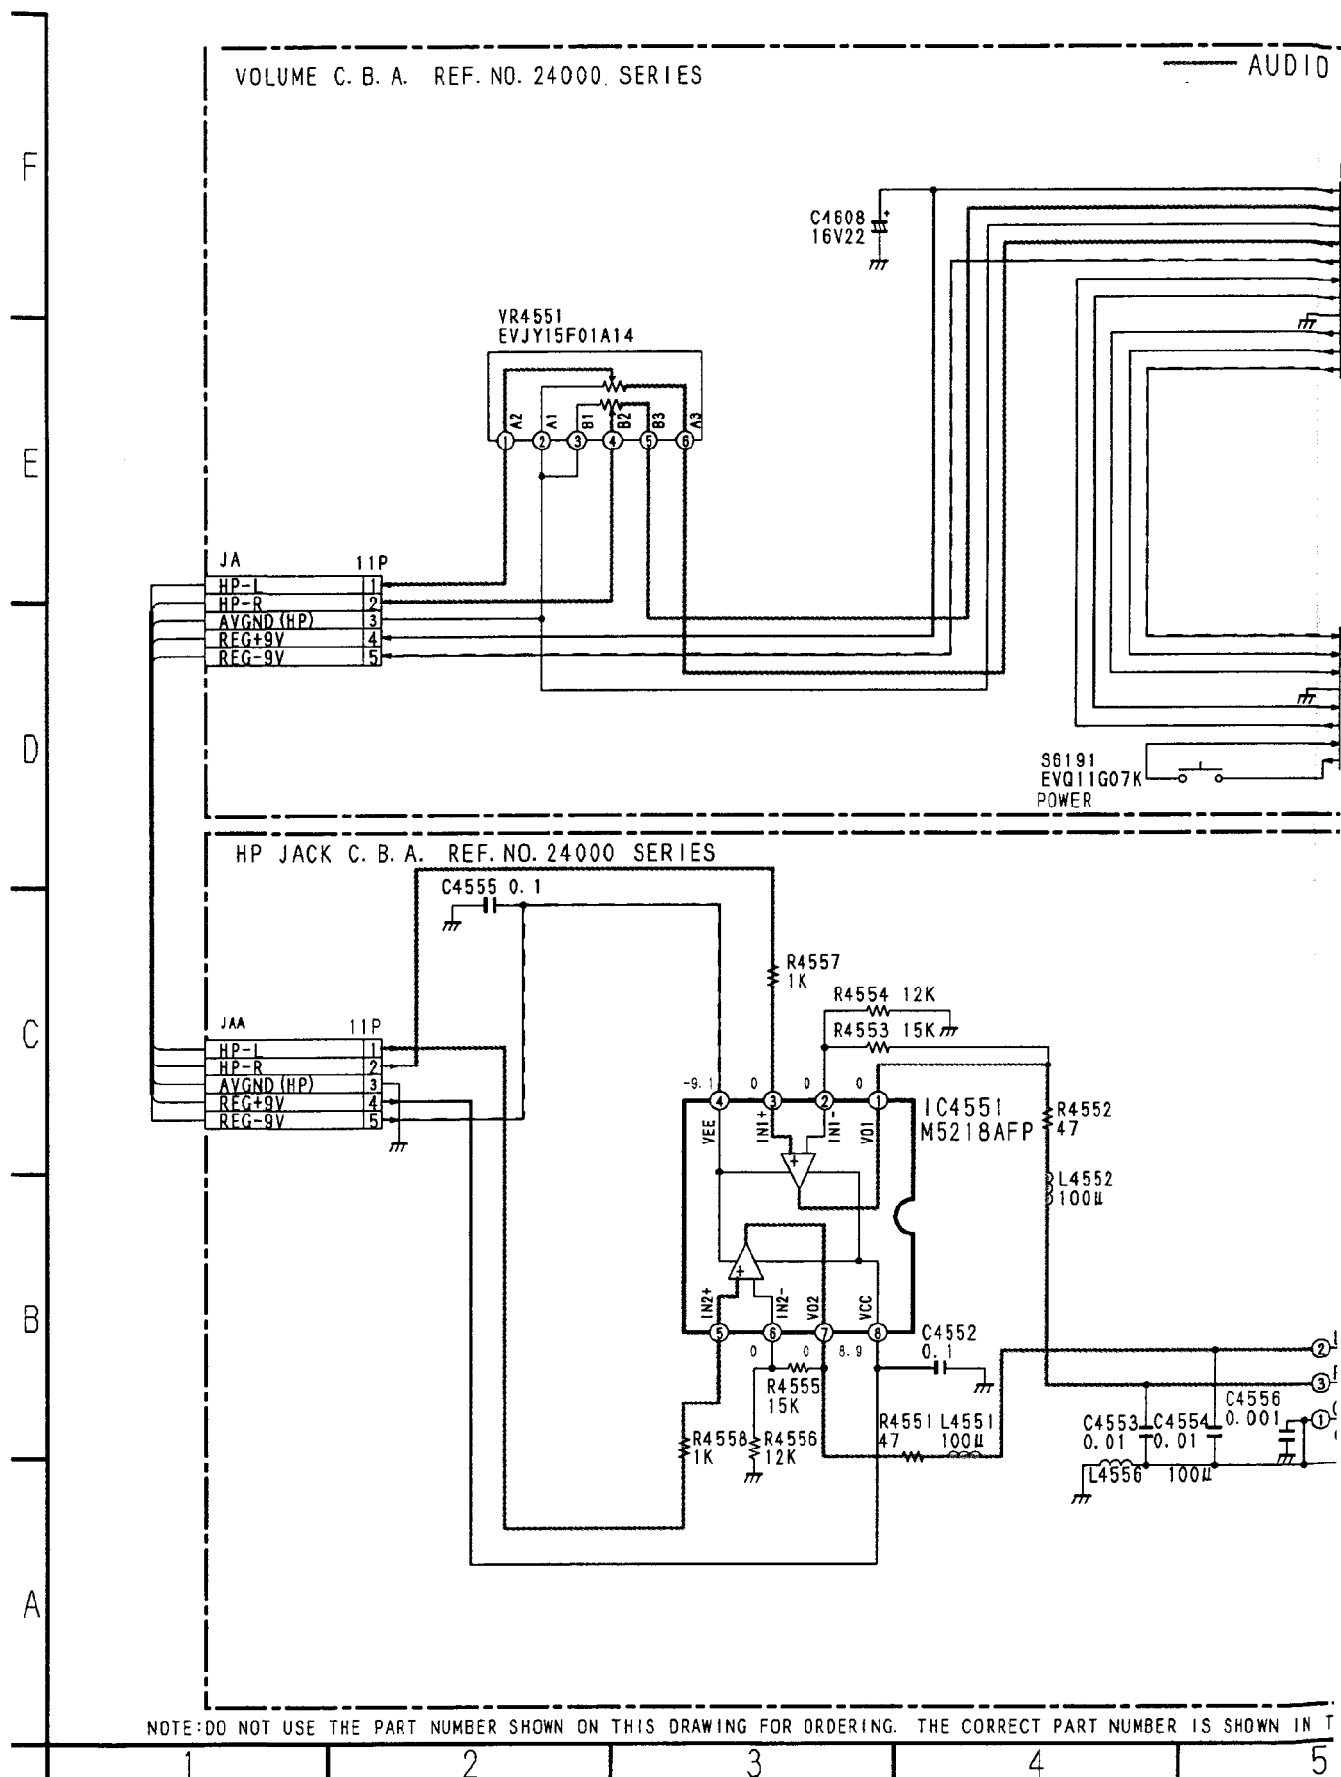


IC DIAGRAM

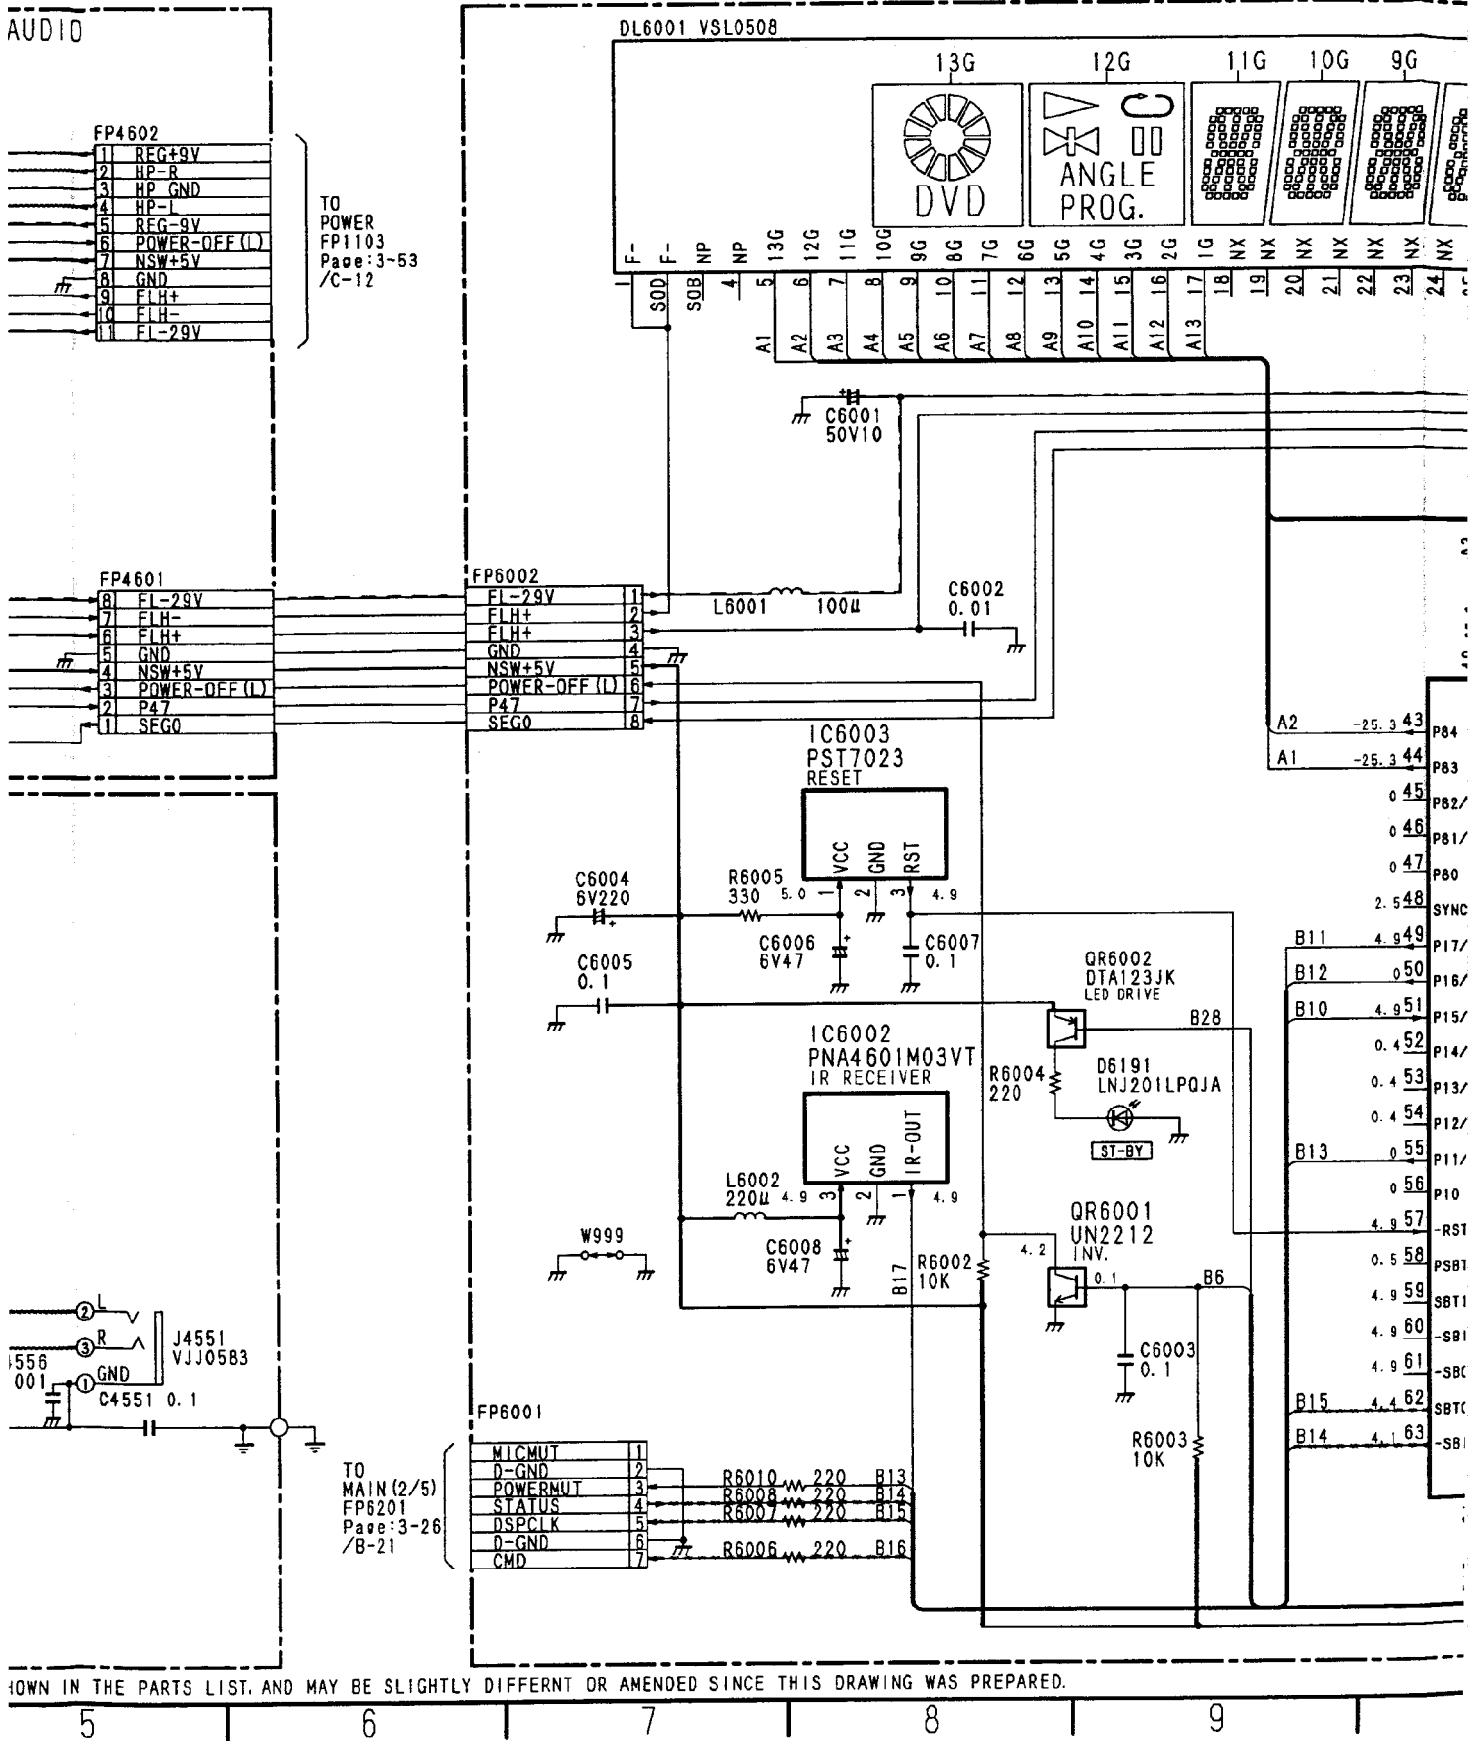

OWN IN THE PARTS LIST, AND MAY BE SLIGHTLY DIFFERNT OR AMENDED SINCE THIS DRAWING WAS PREPARED.

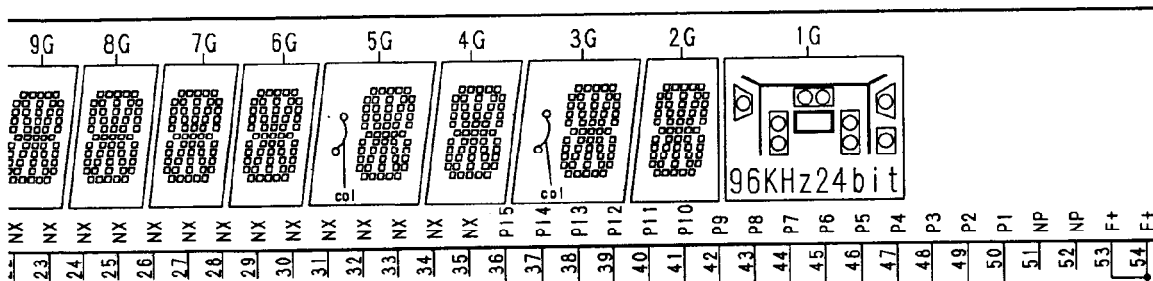

OPERATION (C)
REF. NO. 260C


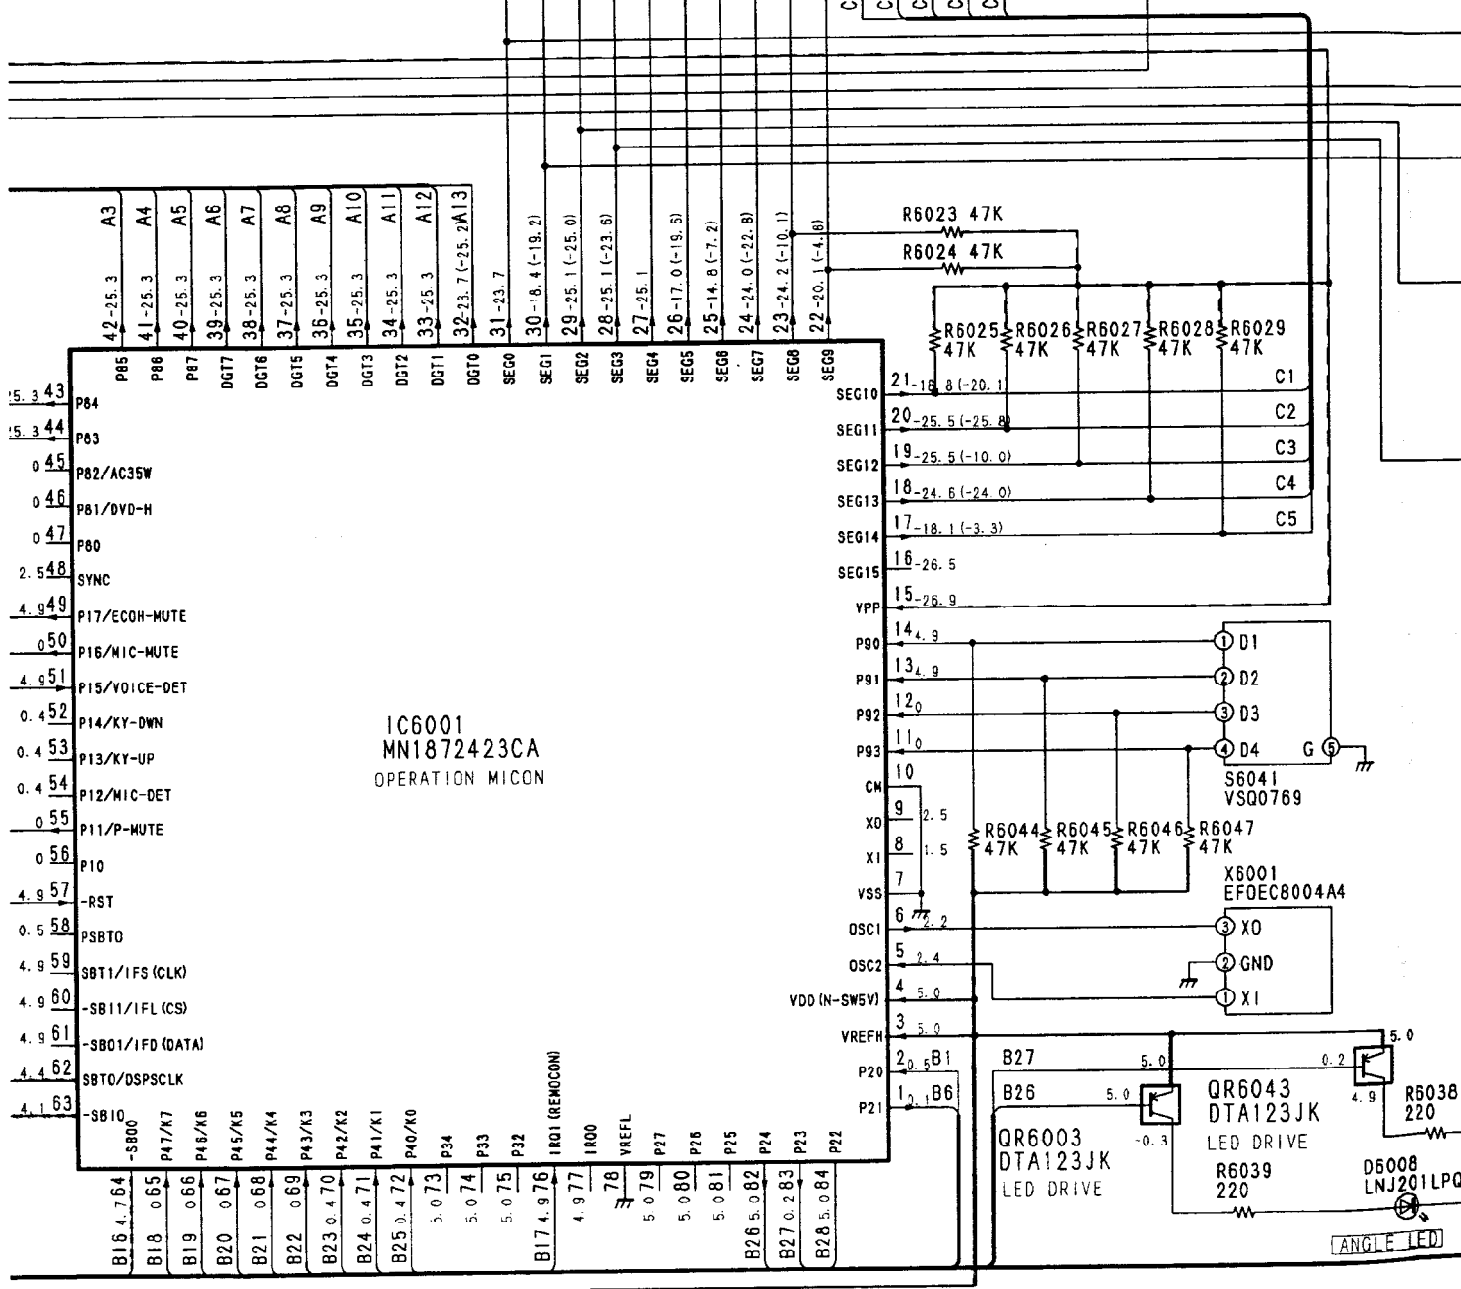


NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE IN THE BRACKETS () ON THIS DIAGRAM IS PLAYBACK MODE V

----- DATA
 ----- AUDIO

OPERATION C. B. A.
 REF. NO. 26000 SERIES

TO
 AV JACK
 P4451
 Page: 3-42
 /D-21

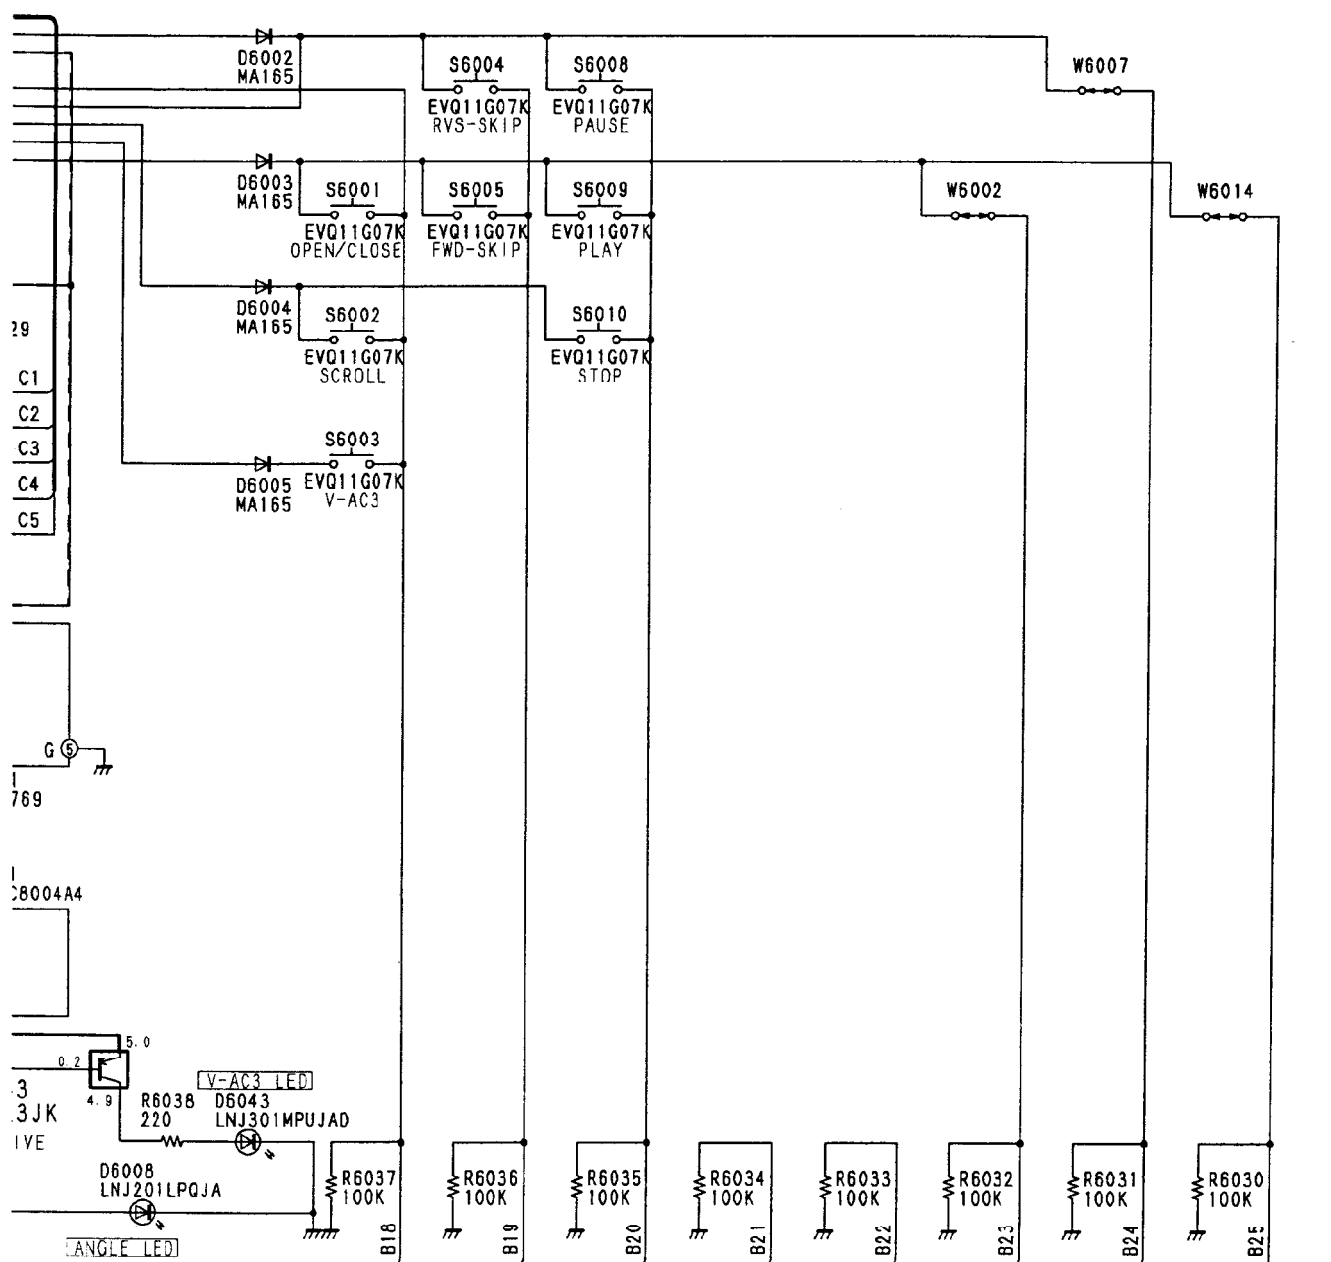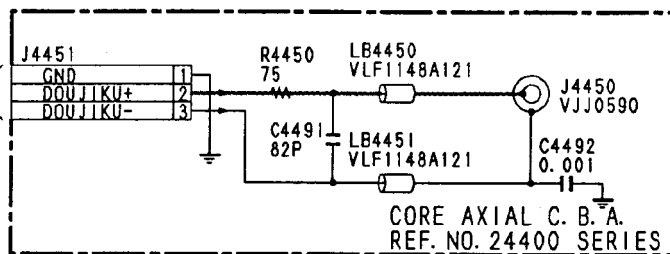

S PLAYBACK MODE WITH DVD TEST DISC (TITLE 12). AND THE DC VOLTAGE OUT OF BRACKETS IS STOP MODE.

4 15 16 17 18

F

E

D

C

B

A

1

2

3

4

5

TO MAIN (4/5)
FP4201
Page: 3-32
/A-18

FP4304

AGND 1
FR 2
AGND 3
F 4
AGND 5
SR 6
AGND 7
SI 8
AGND 9
CNI 10
SW 11
AGND 12
STB 13
DATA 14
CK 15
AC3H 16
ECHO MUX 17
DAC MUX 18
M/C 19
M/C MUX 20
ECHO 21

A1
A2
A6
A7

FP4304-2.4
0.6Vp-p (0.5msec./div.)

EARTH SPRING

C4355 0.1
C4356 0
C4357 0.1
C4358 0.1

IC4303
NJM4580M


IC4302
NJM4580M

R4324 7.5K
R4325 10K
R4317 7.5K
R4302 100
R4314 100K
R4319 7.5K
R4321 7.5K
R4327 10K
R4322 7.5K
R4323 10K
R4320 7.5K
R4318 7.5K
R4303 100
R4313 100K
R4304 100
R4312 100K
R4316 7.5K
R4307 1000P
R4326 10K


C4303 16V47
C4305 6.3V47
C4302 16V10
C4310 1000P
C4312 100P
C4313 100P
C4311 100P
C4308 1000P
C4314 100P
C4309 1000P
C4320 0.1
C4331 16V47

VEE
IN1+
IN1-
V01
IN2+
IN2-
V02
VCC

-9.1
0
0
8.9
9.1
0
0
8.9

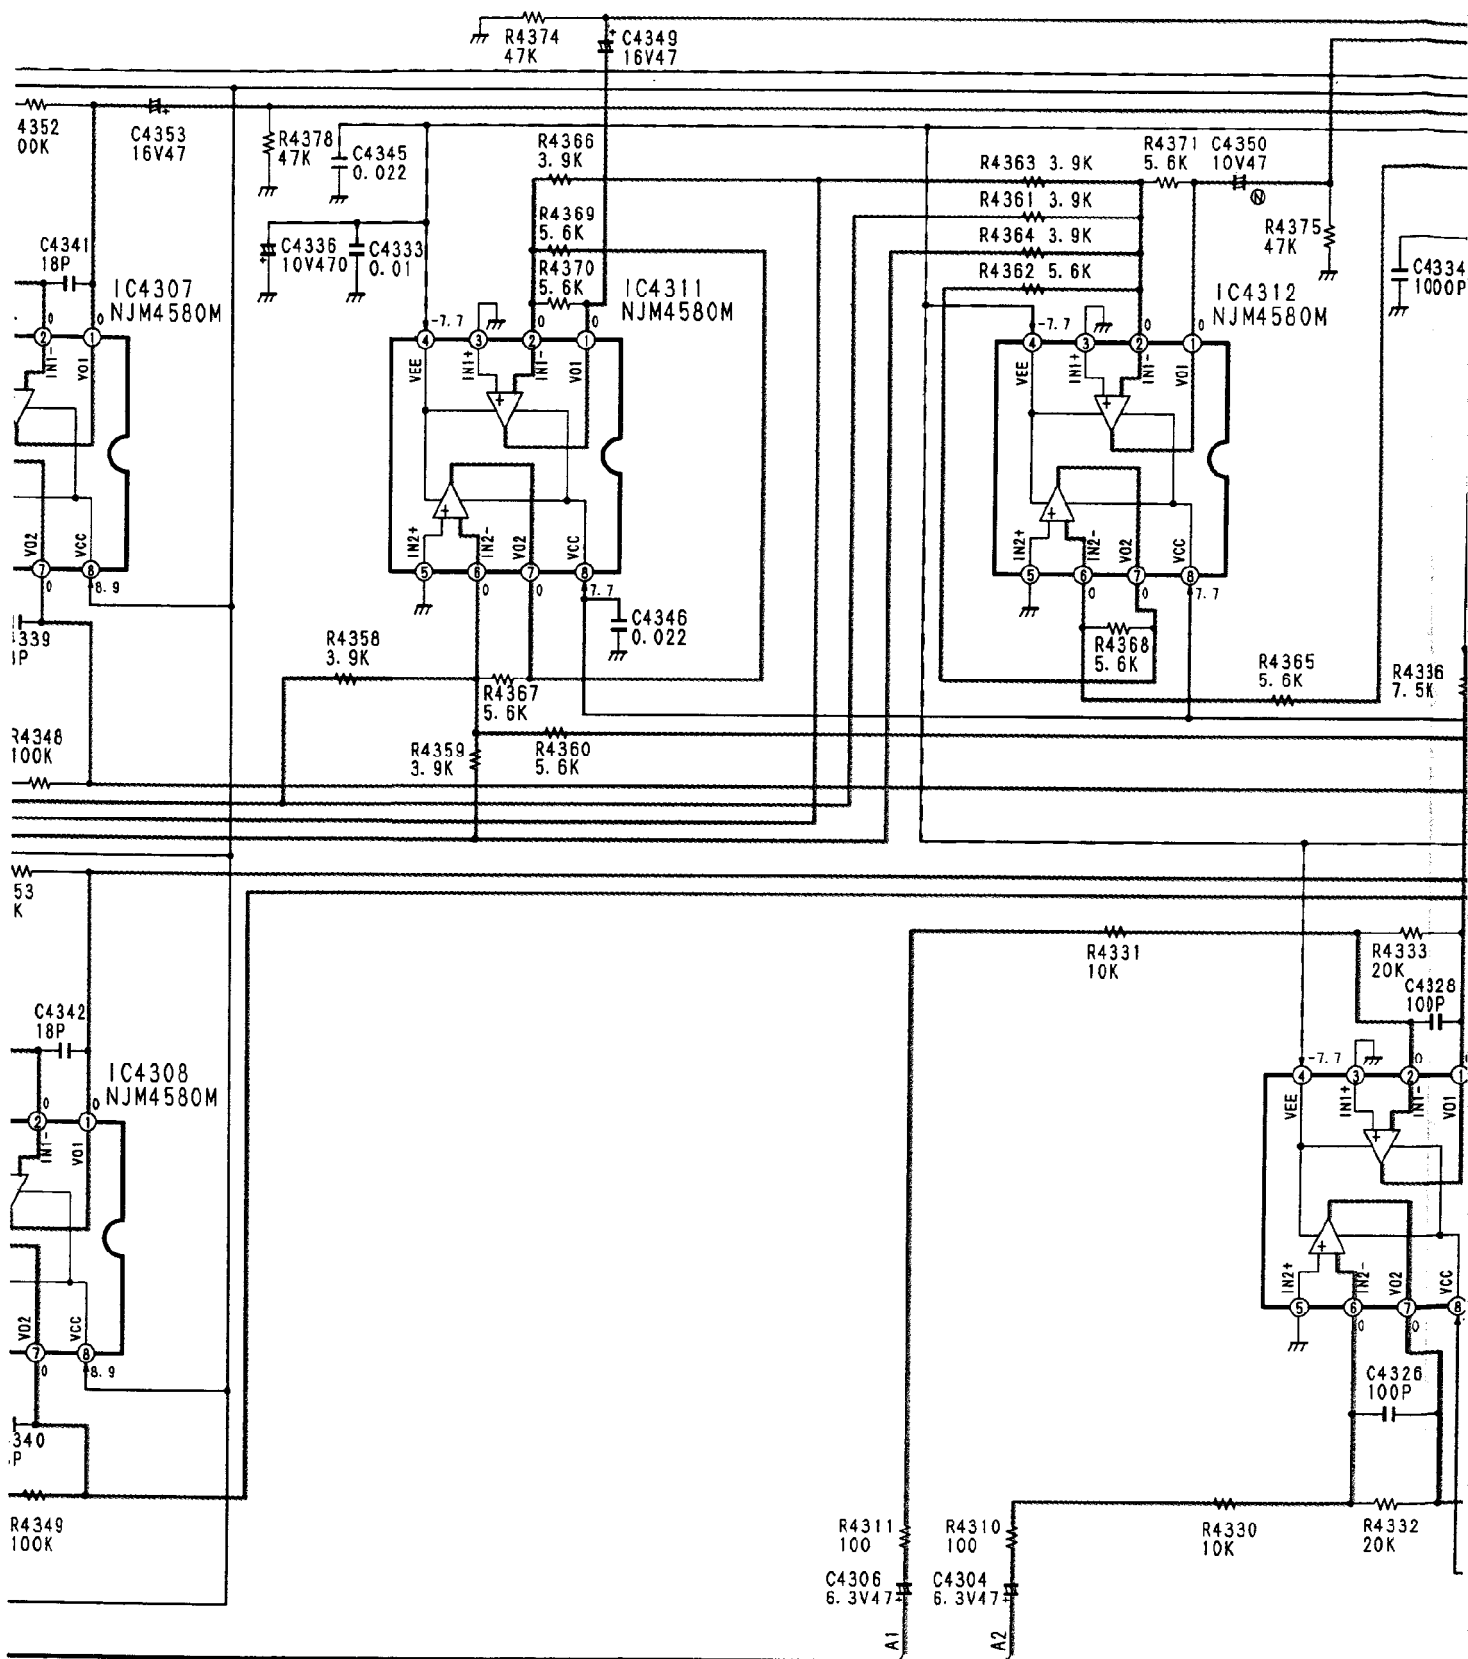

AUDIO

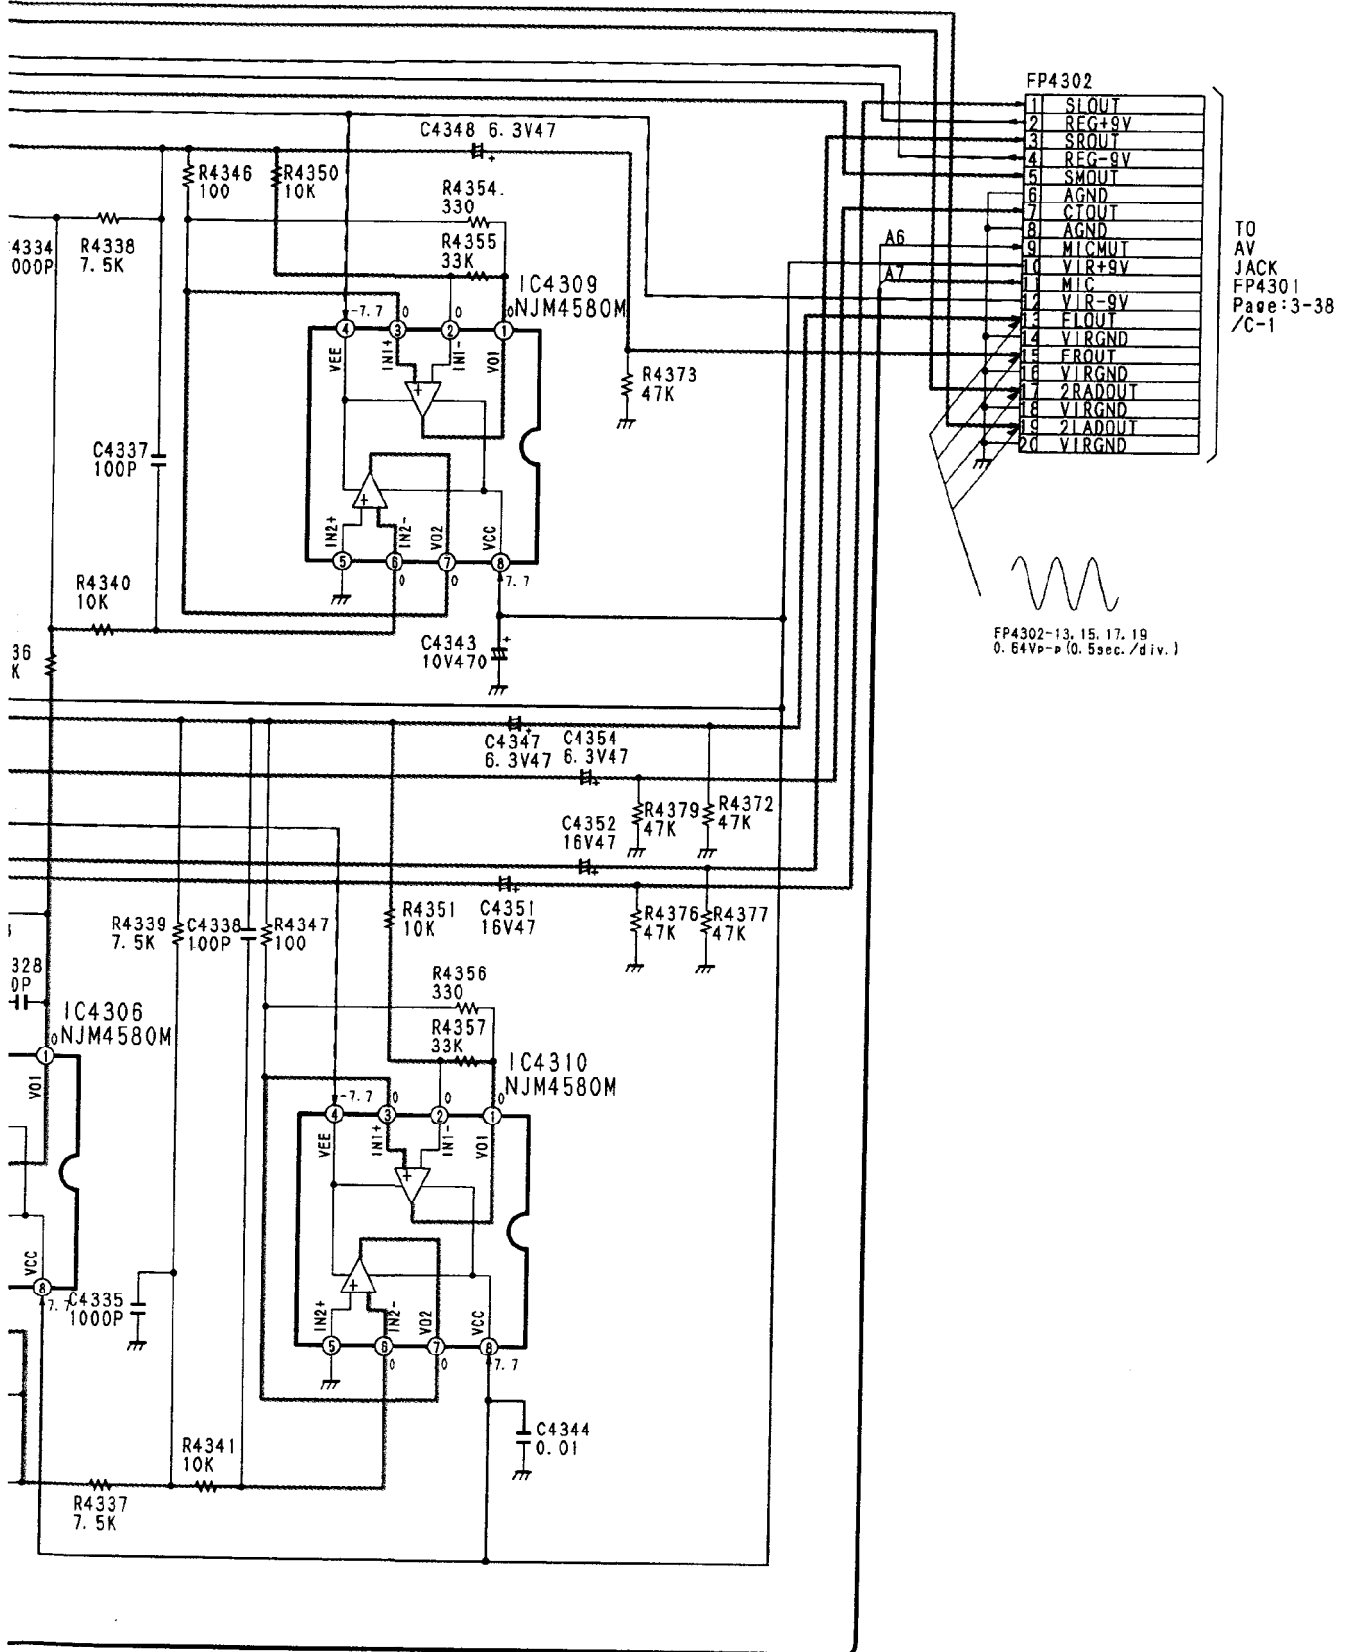


URGENT MODE OF THE DC VOLTAGE IN THE BRACKETS () ON THIS DIAGRAM IS PLAYBACK MODE
TEST DISC (TITLE 12) AND THE DC VOLTAGE OUT OF BRACKETS IS STOP MODE.

A ————— E ————— D ————— C ————— F —————


CAUTION


IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED WITH THE MARK  HAVE
WHEN REPLACING ANY OF THESE COMPONENTS. USE

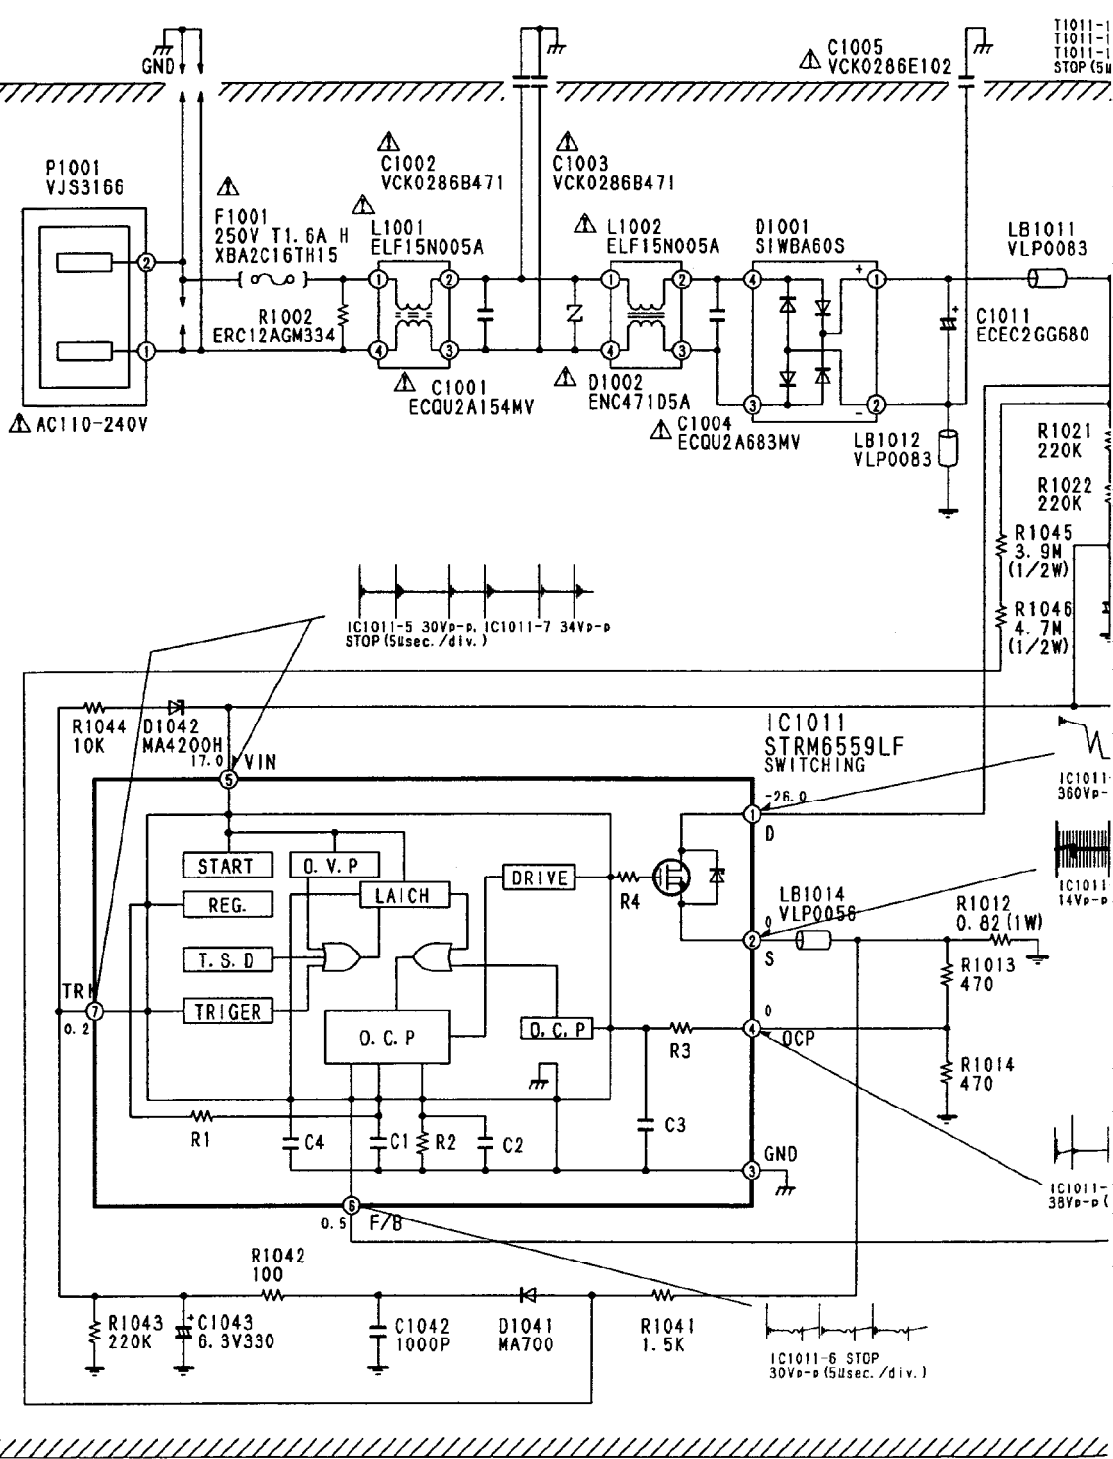

BER IS SHOWN
REPAIRD.
ACK MODE

IK Δ HAVE THE SPECIAL CHARACTERISTICS FOR SAFETY.
MENTS. USE ONLY THE SAME TYPE.

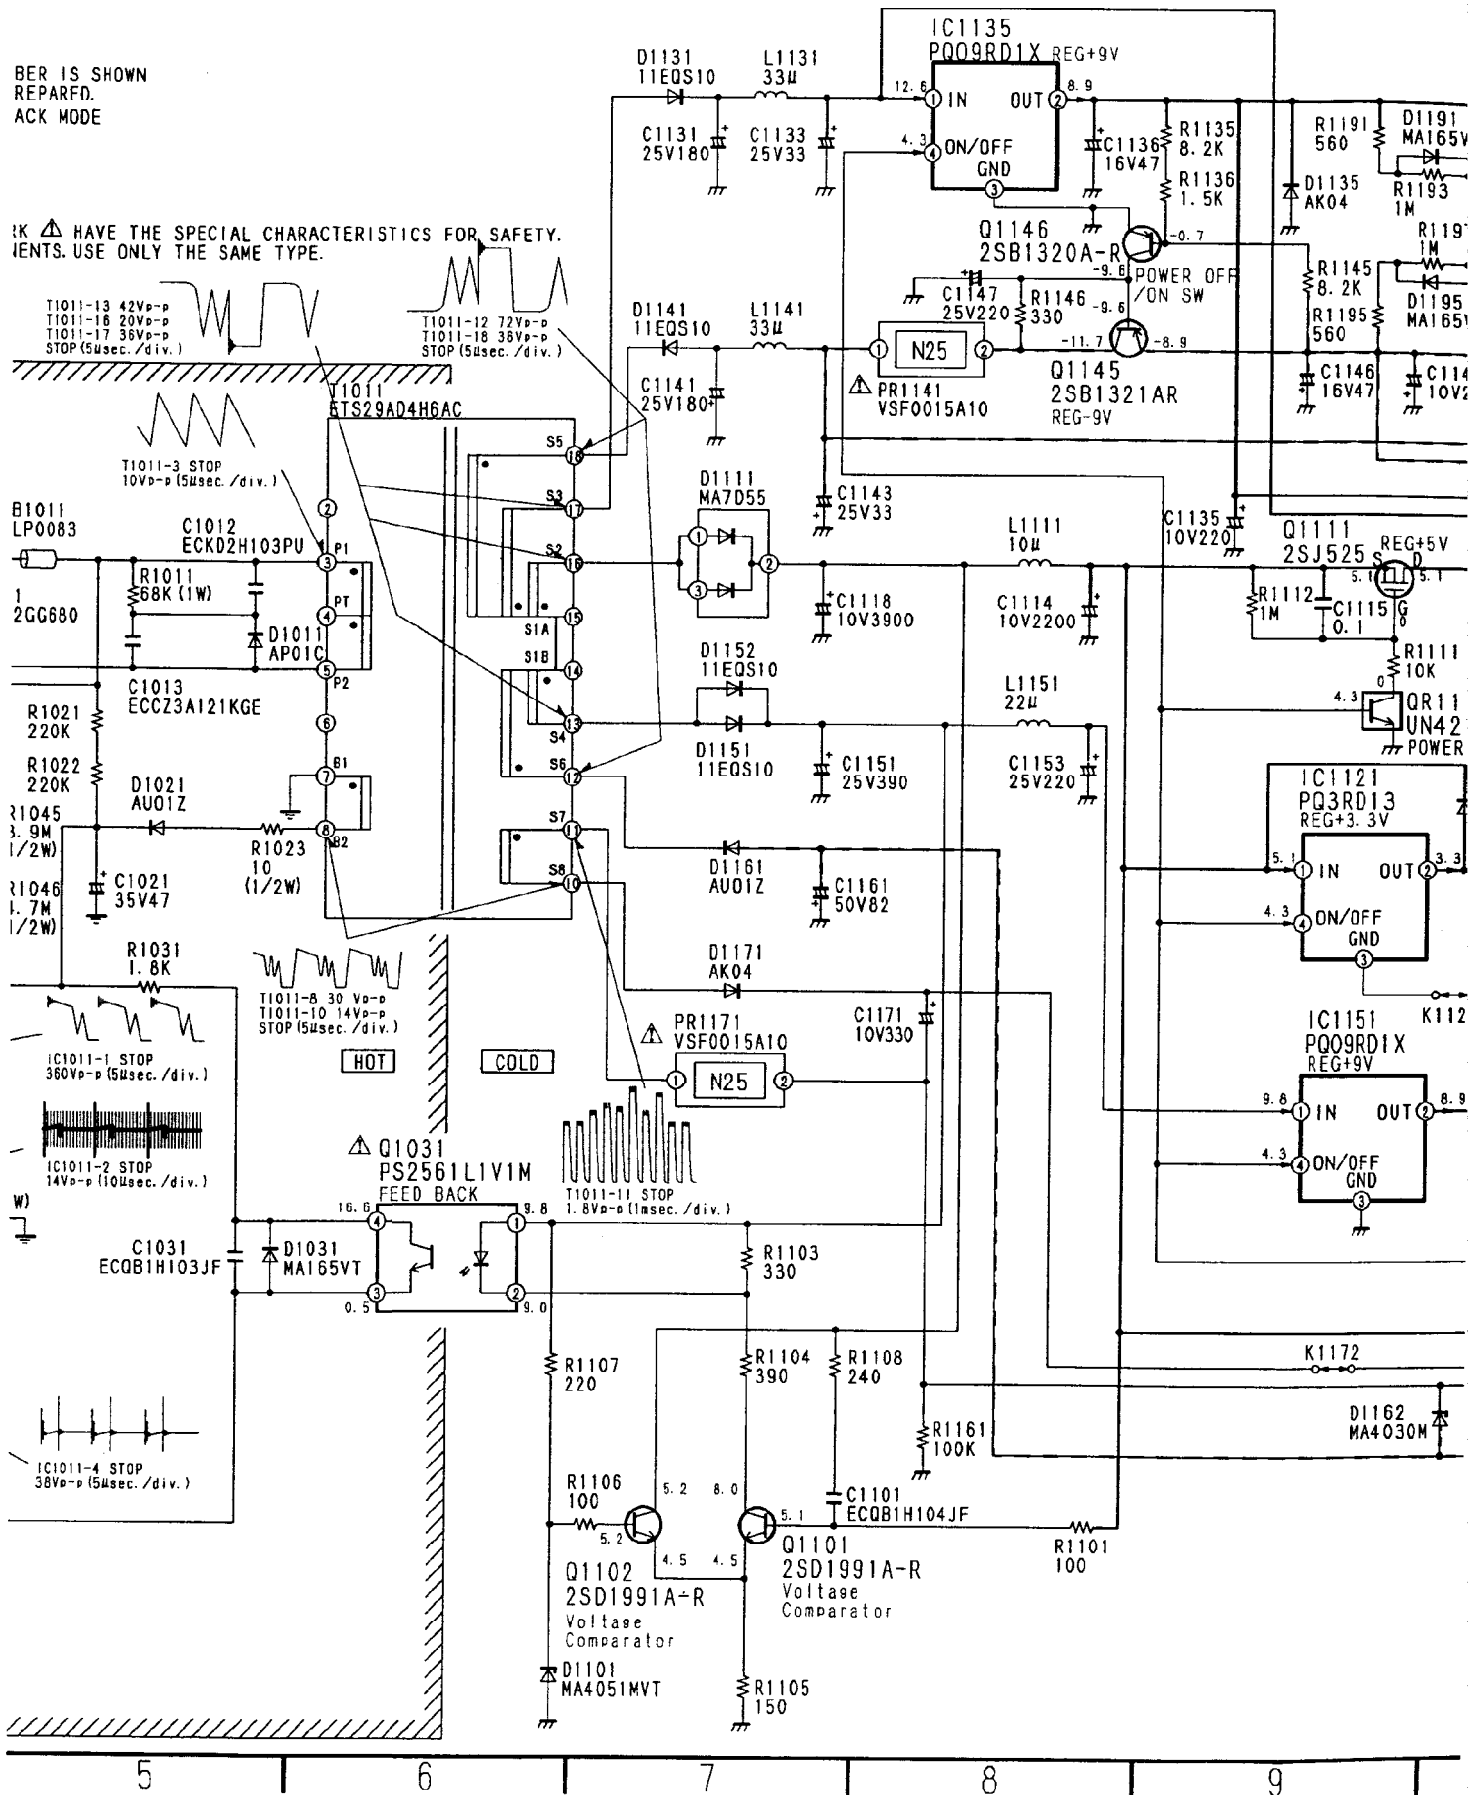


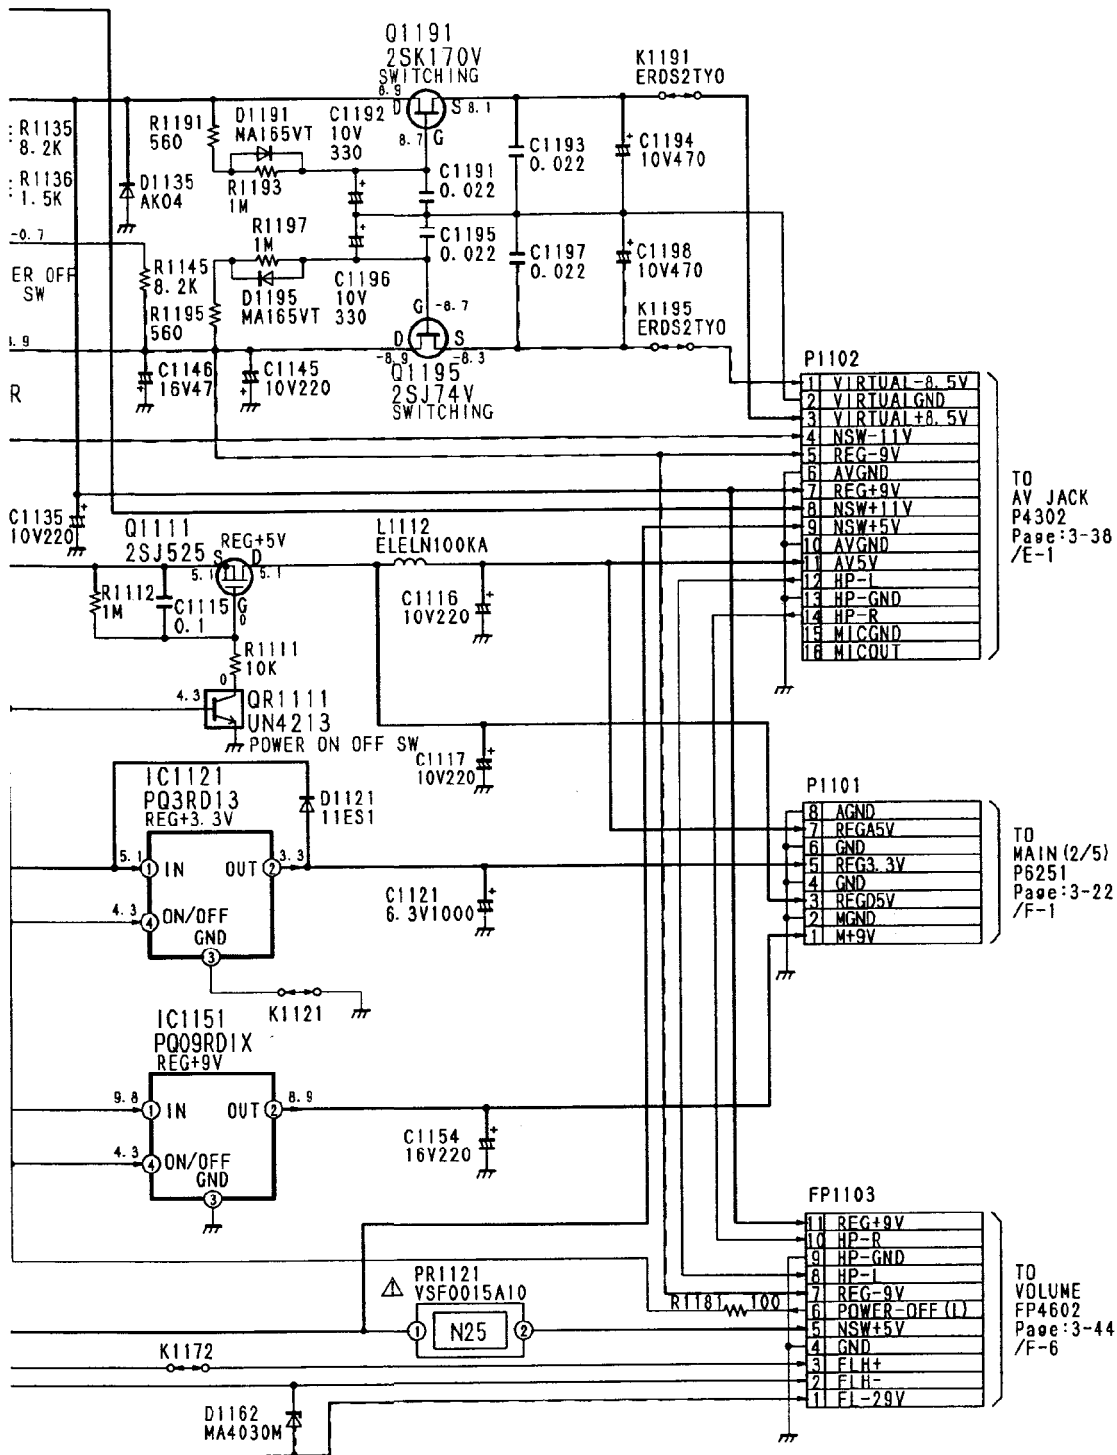


REF. NO. 21000 SERIES

3-15. INTERCONNECTION SCHEMATIC DIAGRAM

INTERCONNECTION SCHEMATIC DIAGRAM

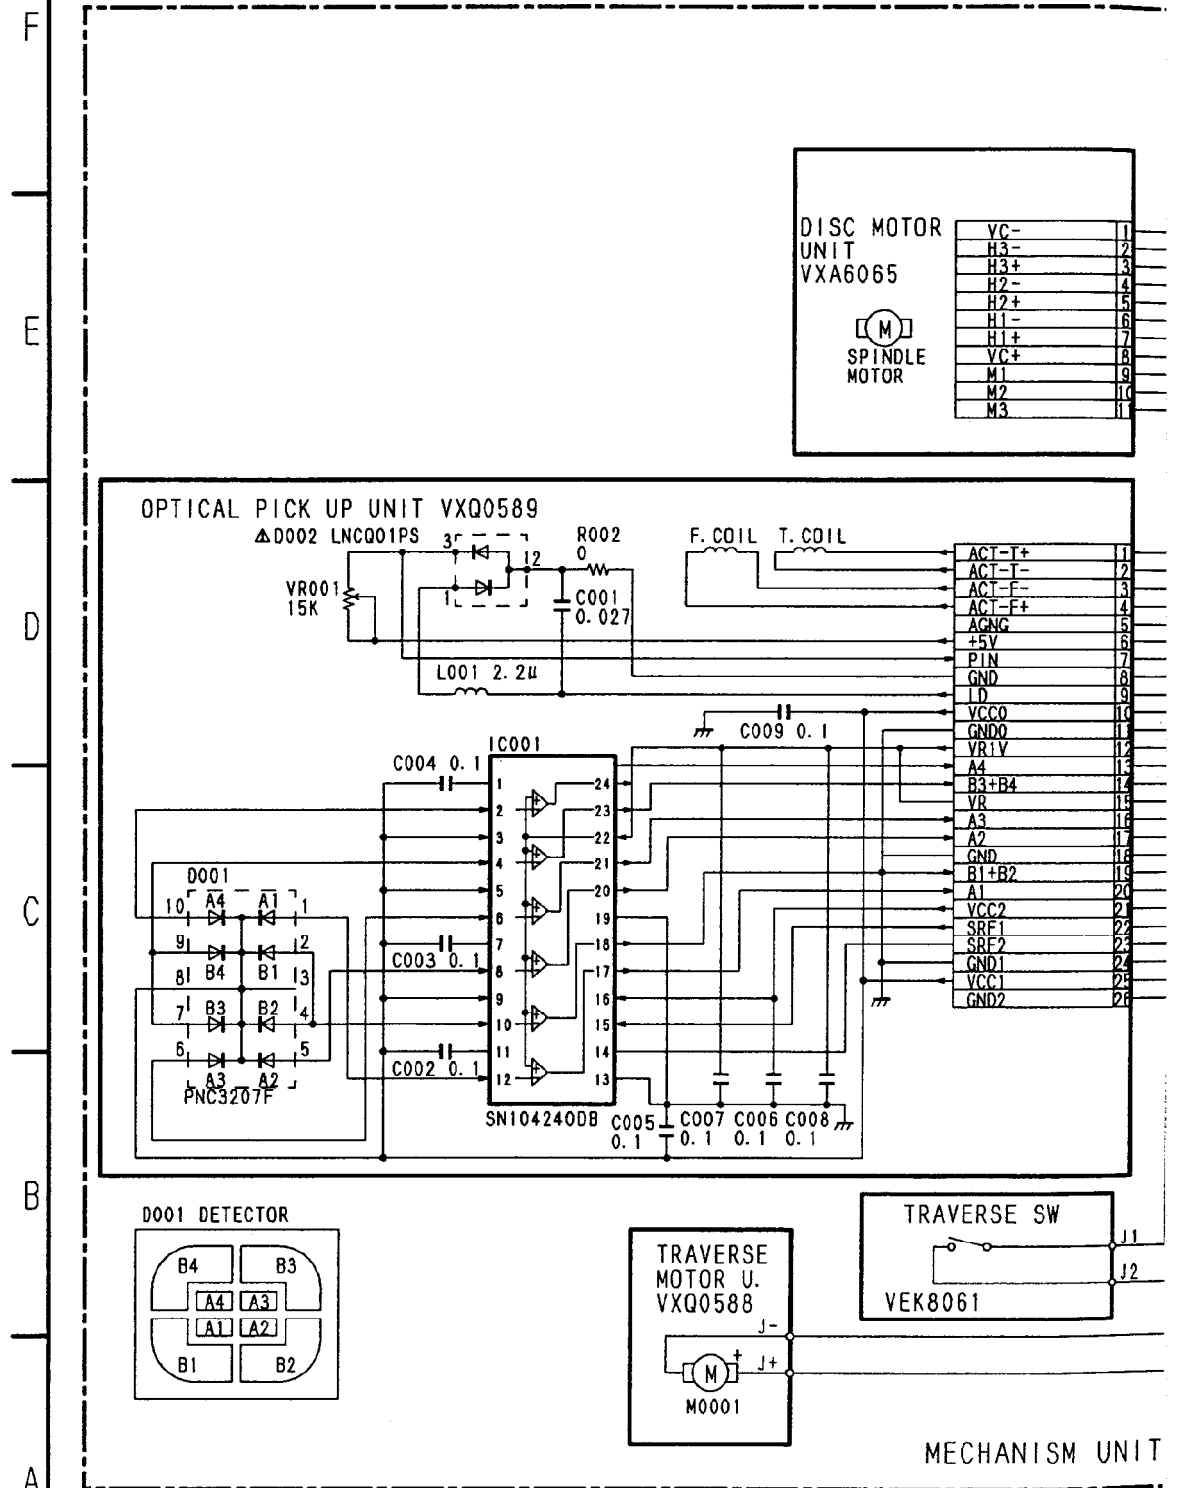


IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED WITH THE MARK Δ HAVE THE SPECIAL CHARACTERISTIC FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS, USE ONLY THE SAME TYPE.
NOTE: DO NOT USE THE PART NUMBER SHOWN ON THIS DRAWING FOR ORDERING. THE CORRECT PART NUMBER IS IN THE PARTS LIST, AND ANY MAY BE SLIGHTLY DIFFERENT OR AMENDED SINCE THIS DRAWING WAS

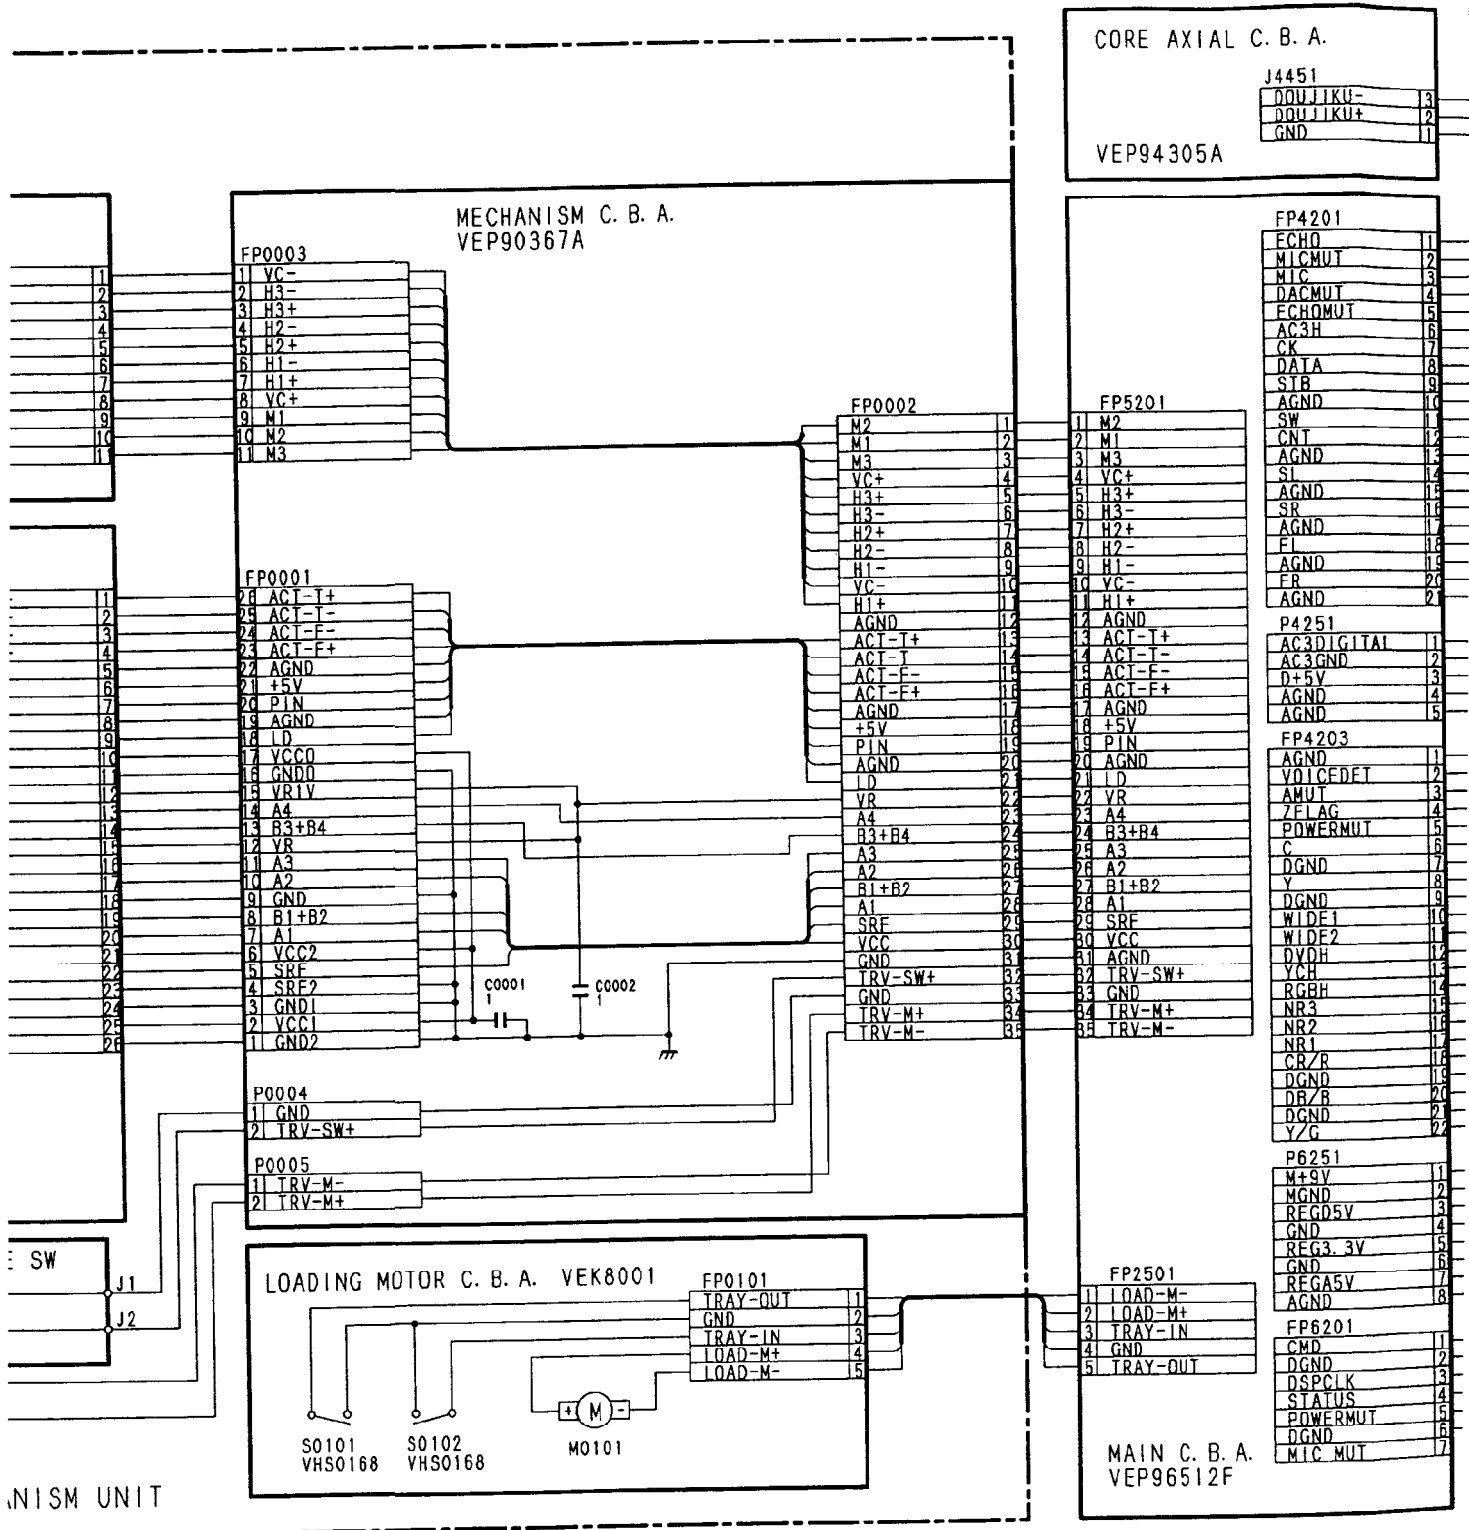


SAFETY.

RECT PART NUMBER IS SHOWN
THIS DRAWING WAS PREPARED.

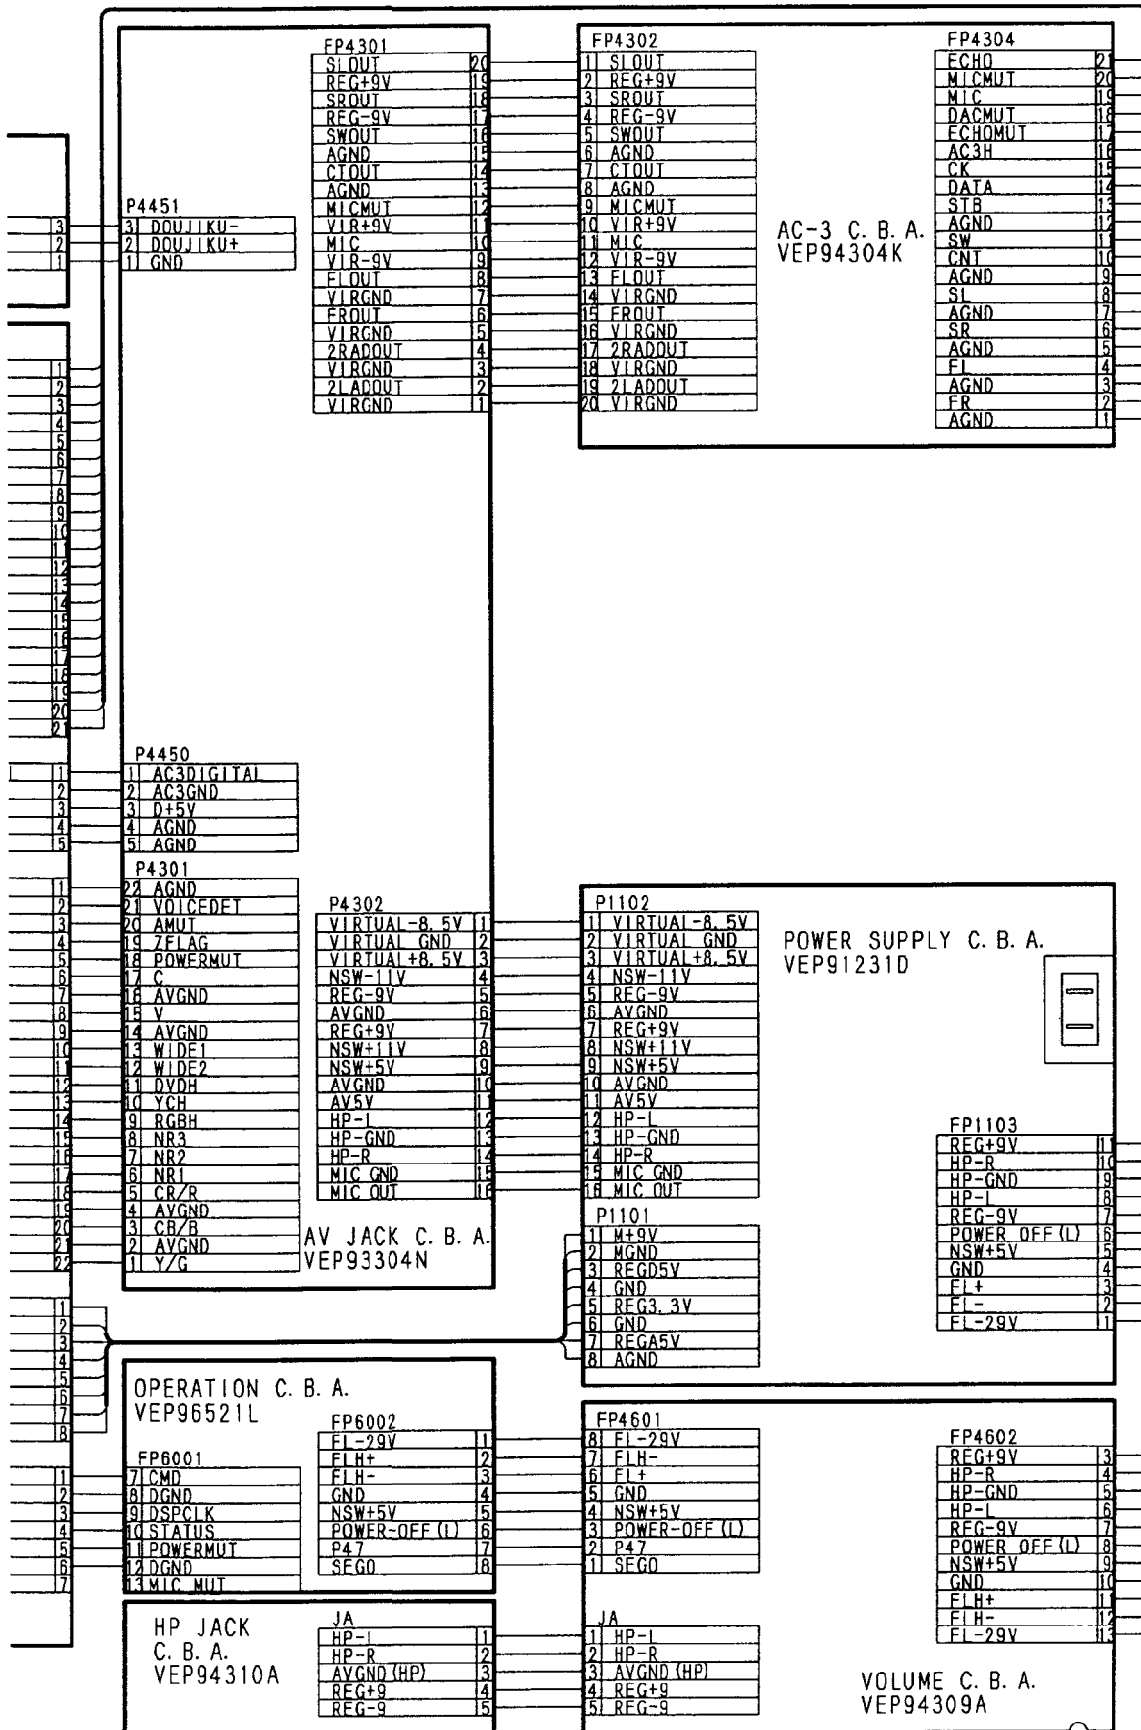


3-16. MAIN C.B.A. (VEP96512F)


MAIN C.B.A. (1/2)

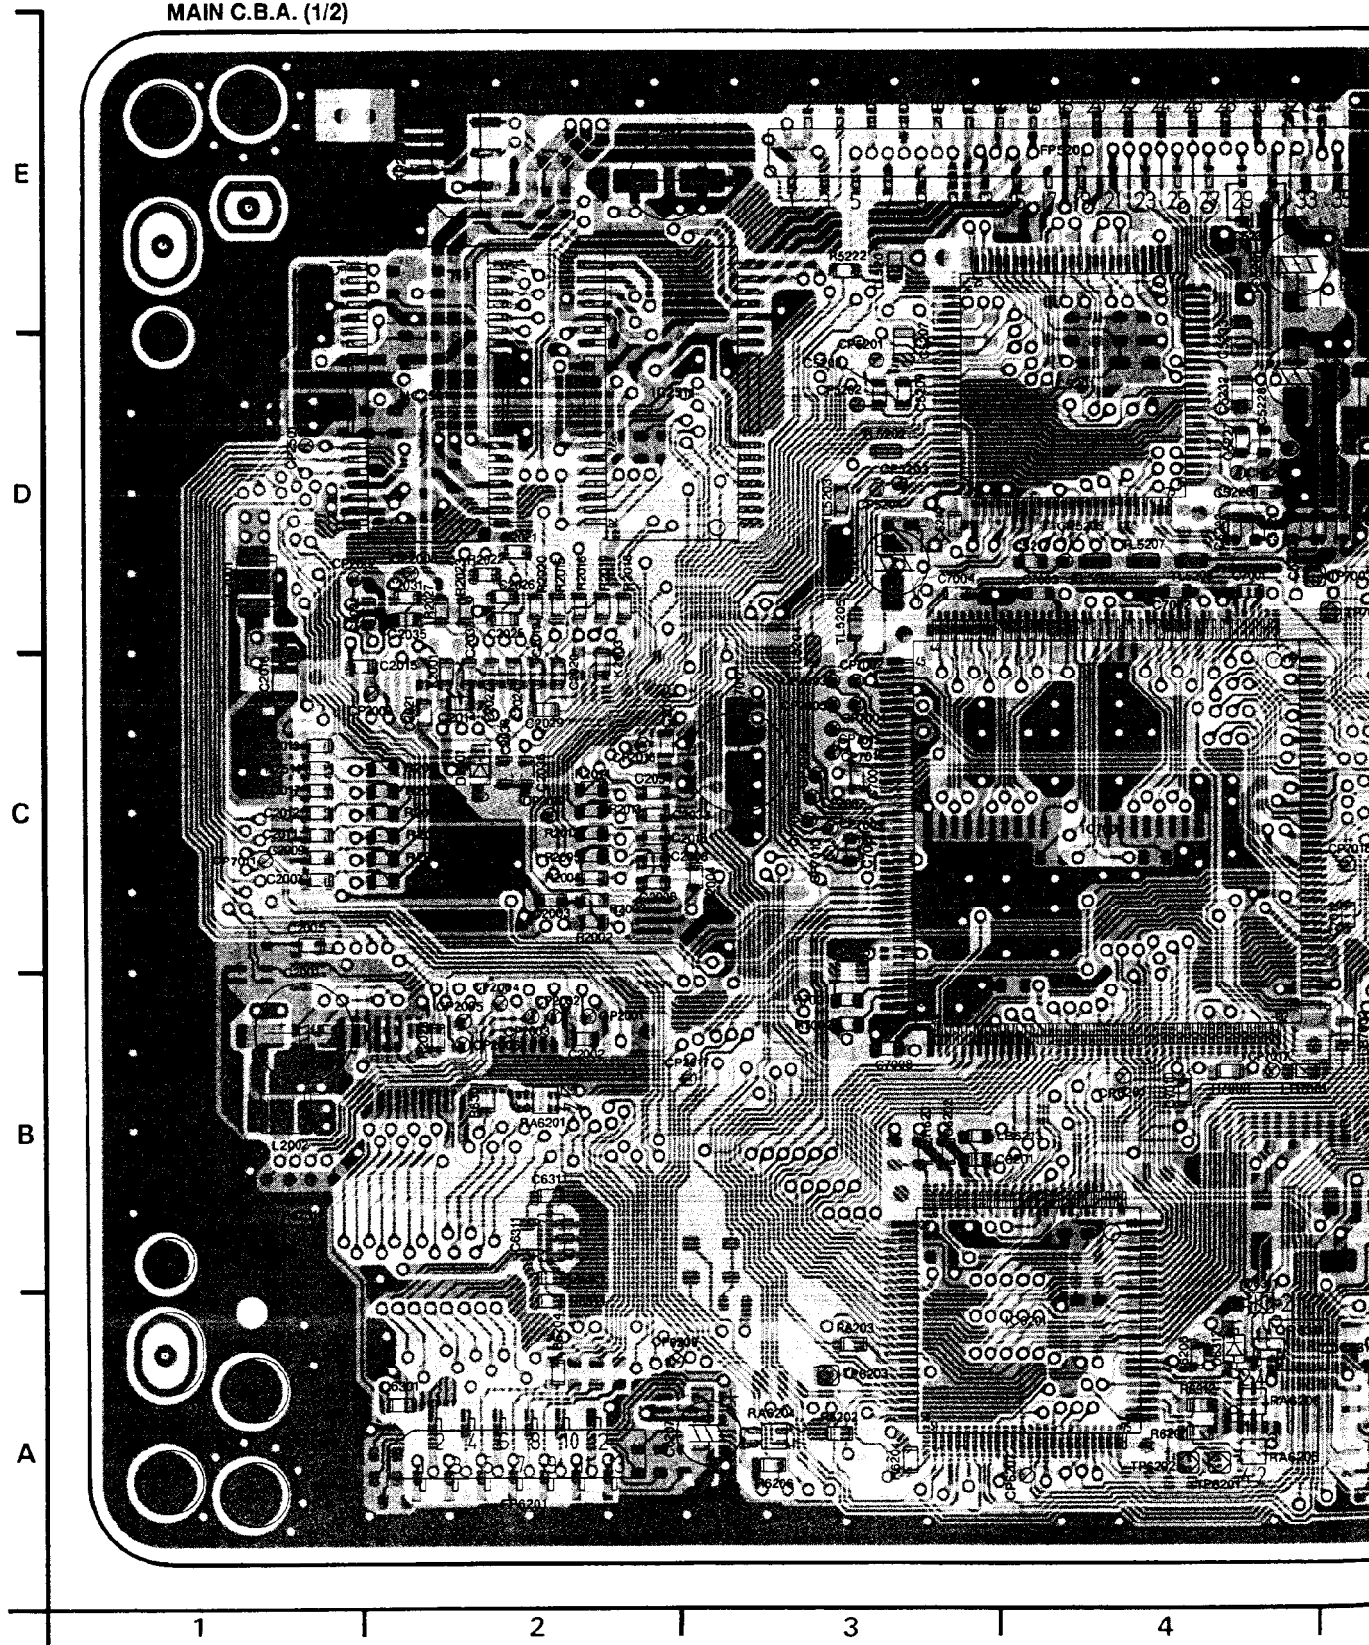

MAIN C

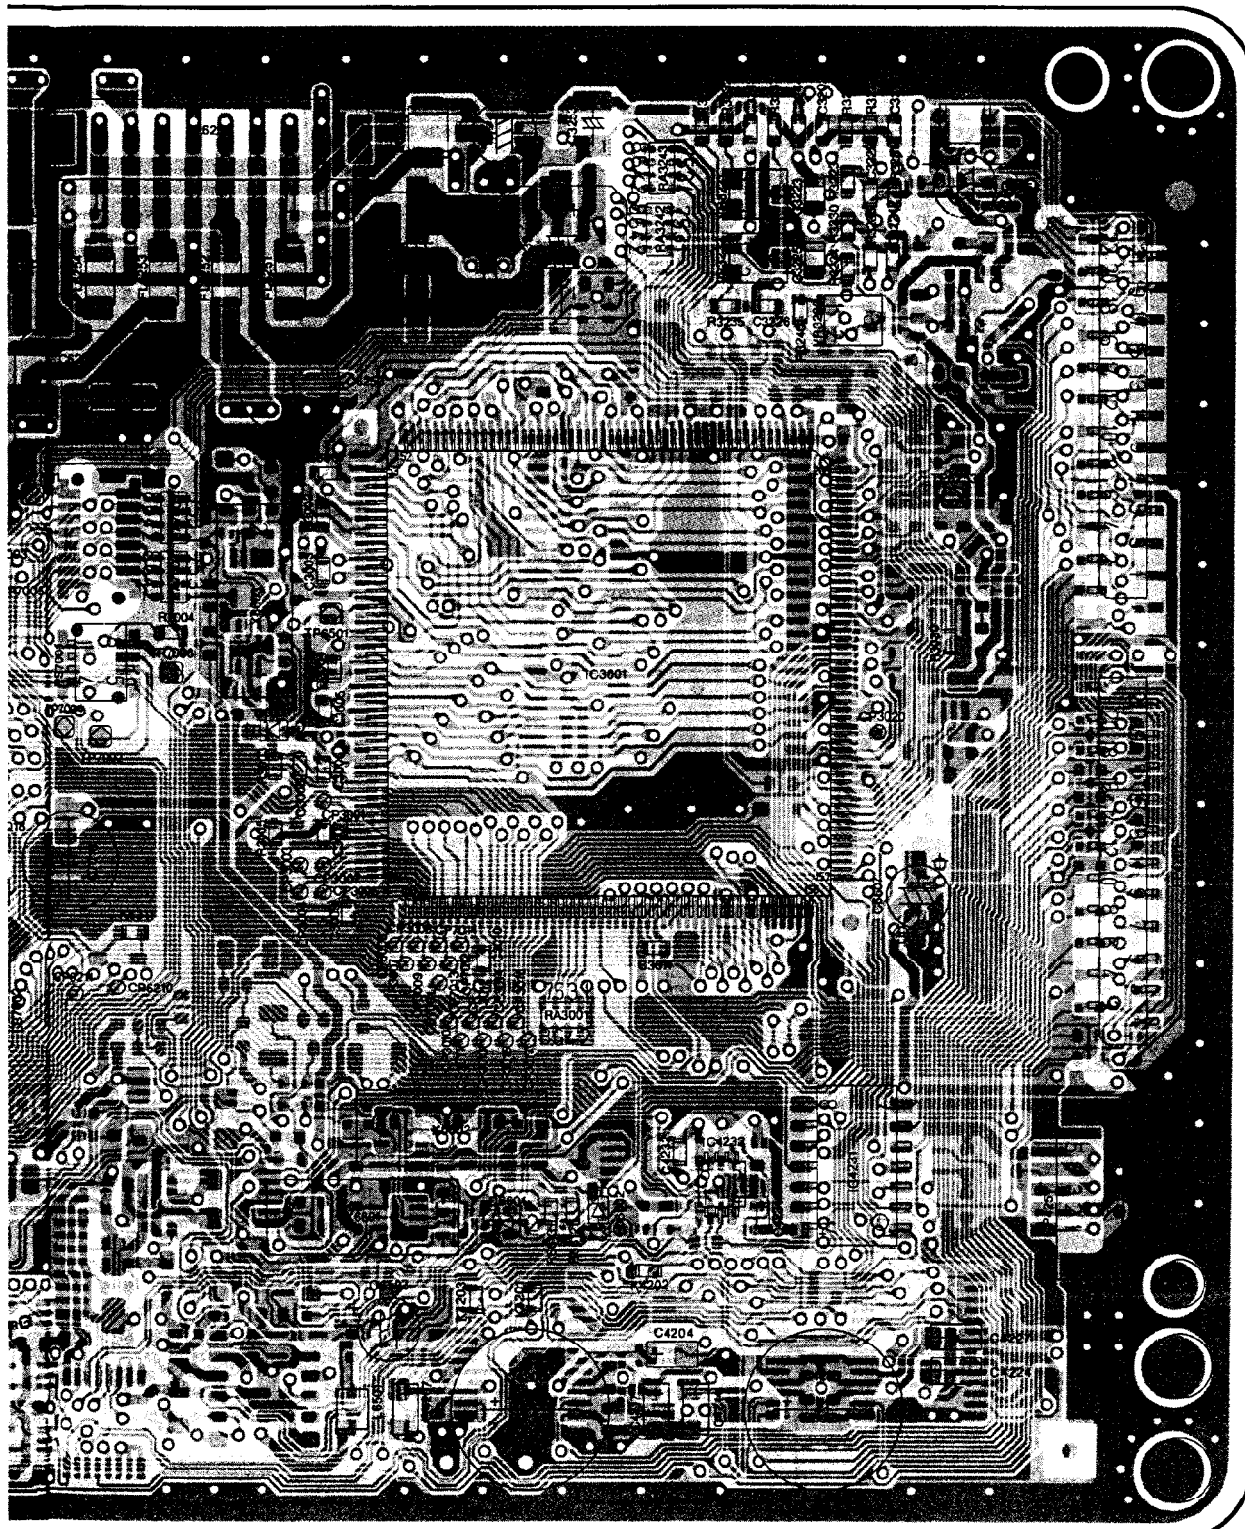

(COMPONENT SIDE)

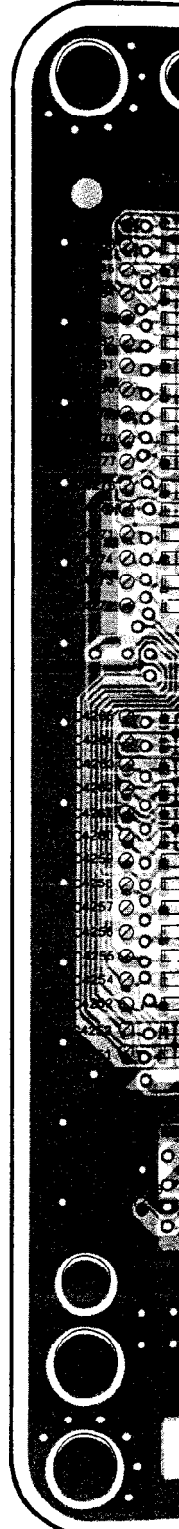

(FOIL SIDE)

5


6

7

8

9

MAIN C.B.A. (2/2)

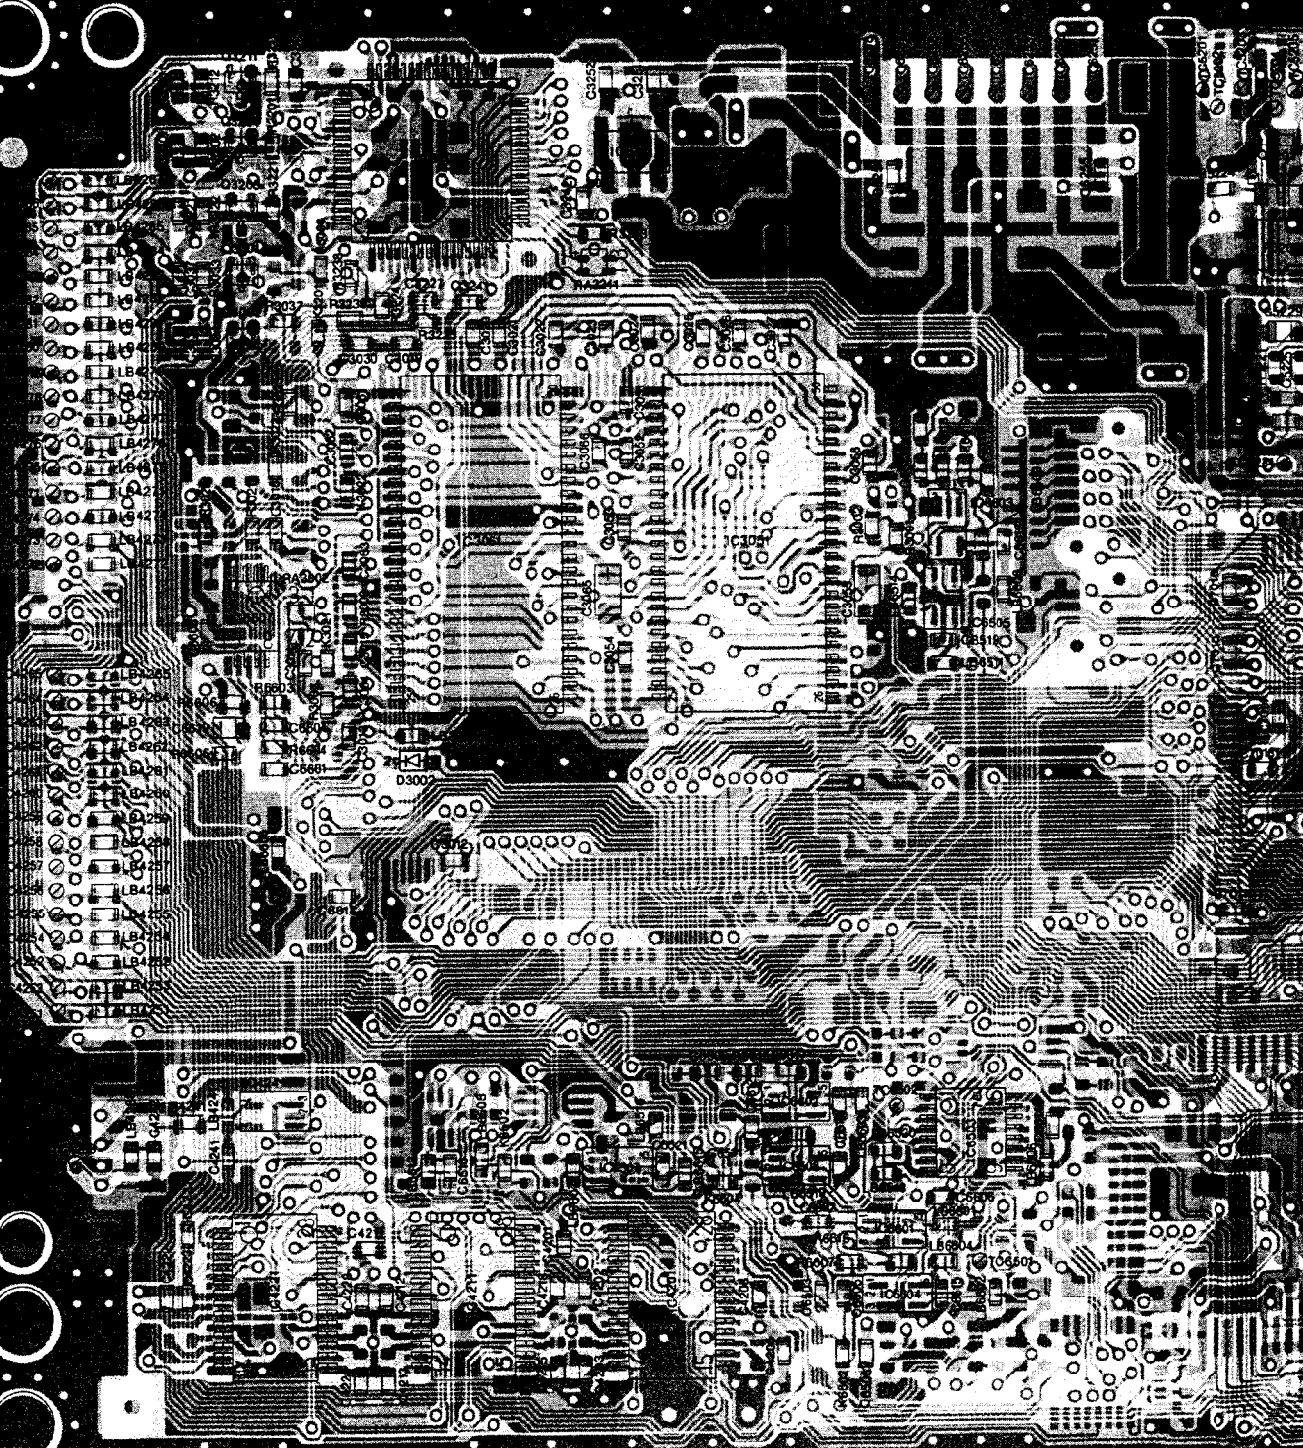


(FOIL SIDE)

9

10

11

12

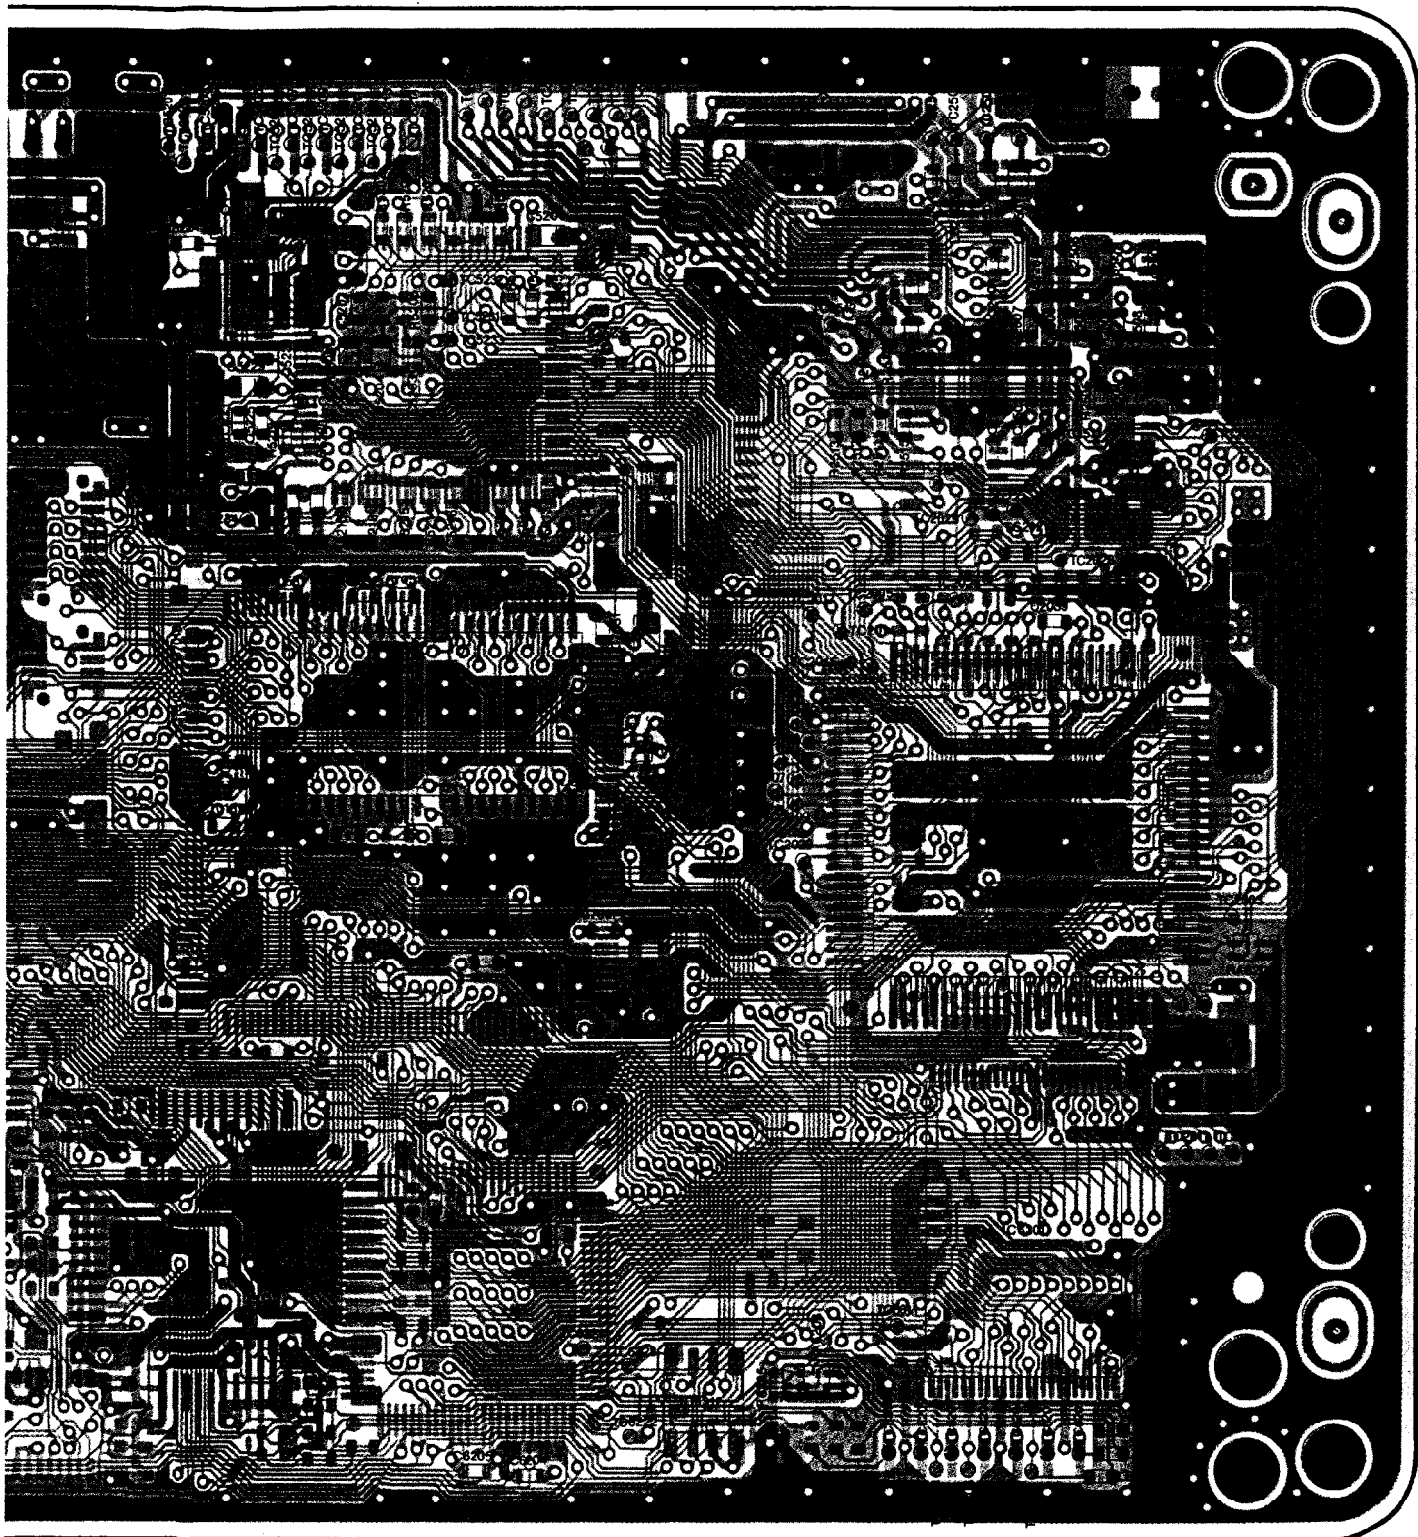


13

14

15

16

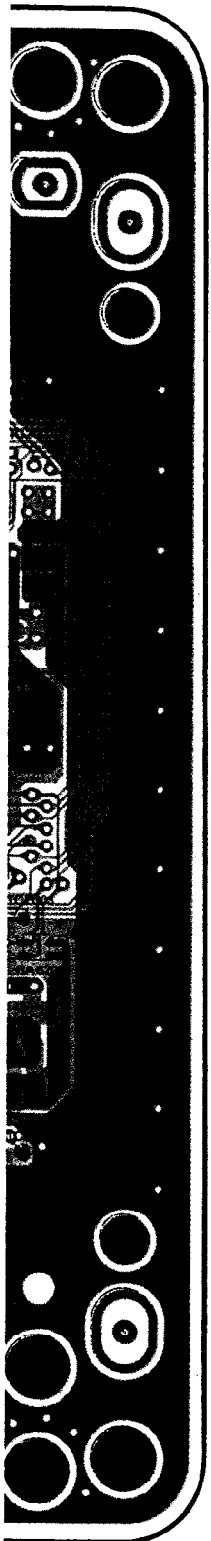

MAIN C.B.A.											
Transistors			TC4256	B-9	Ⓢ	TC6256	E-12	Ⓢ	CP6201	B-4	Ⓢ
Q3001	D-10	Ⓢ	TC4257	B-9	Ⓢ	TC6257	E-12	Ⓢ	CP6207	A-4	Ⓢ
Q3002	D-10	Ⓢ	TC4258	B-9	Ⓢ	TC6258	E-12	Ⓢ	CP6209	A-2	Ⓢ
Q3201	E-10	Ⓢ	TC4259	B-9	Ⓢ	TC6261	B-16	Ⓢ	CP6210	C-5	Ⓢ
Q3203	E-10	Ⓢ	TC4260	B-9	Ⓢ	TC6262	B-9	Ⓢ	CP6211	C-5	Ⓢ
Q3211	E-10	Ⓢ	TC4261	B-9	Ⓢ	TC6263	E-9	Ⓢ	CP7001	B-6	Ⓢ
Q5201	E-13	Ⓢ	TC4262	B-9	Ⓢ	TC6264	D-16	Ⓢ	CP7002	C-3	Ⓢ
Transistor-Resistor			TC4263	B-9	Ⓢ	TC6265	E-11	Ⓢ	CP7003	C-3	Ⓢ
QR6311	A-4	Ⓢ	TC4264	B-9	Ⓢ	TC6501	A-12	Ⓢ	CP7004	C-3	Ⓢ
Integrated Circuits			TC4265	B-9	Ⓢ	TC6502	B-12	Ⓢ	CP7005	C-3	Ⓢ
IC2001	C-15	Ⓢ	TC4271	D-9	Ⓢ	TL5201	E-3	Ⓢ	CP7006	C-3	Ⓢ
IC2501	D-2	Ⓢ	TC4272	C-9	Ⓢ	TL5202	D-3	Ⓢ	CP7007	C-3	Ⓢ
IC2511	D-2	Ⓢ	TC4273	D-9	Ⓢ	TL5203	D-3	Ⓢ	CP7008	C-3	Ⓢ
IC3001	C-6	Ⓢ	TC4274	D-9	Ⓢ	TL5204	C-3	Ⓢ	CP7009	C-3	Ⓢ
IC3051	D-11	Ⓢ	TC4275	D-9	Ⓢ	TL5205	D-3	Ⓢ	CP7010	C-3	Ⓢ
IC3061	D-10	Ⓢ	TC4276	D-9	Ⓢ	TL5206	D-4	Ⓢ	CP7011	C-1	Ⓢ
IC3201	E-10	Ⓢ	TC4277	D-9	Ⓢ	TL5207	D-4	Ⓢ	CP7012	B-6	Ⓢ
IC3251	E-11	Ⓢ	TC4278	D-9	Ⓢ	TL5208	D-4	Ⓢ	CP7013	B-6	Ⓢ
IC4201	A-11	Ⓢ	TC4279	D-9	Ⓢ	TP6201	A-4	Ⓢ	CP7014	B-6	Ⓢ
IC4211	A-10	Ⓢ	TC4280	D-9	Ⓢ	TP6202	A-4	Ⓢ	CP7015	C-3	Ⓢ
IC4221	A-10	Ⓢ	TC4281	D-9	Ⓢ	TP6203	A-3	Ⓢ	CP7016	C-3	Ⓢ
IC4231	B-7	Ⓢ	TC4282	D-9	Ⓢ	TP6251	B-1	Ⓢ	Diodes		
IC4232	B-7	Ⓢ	TC4283	D-9	Ⓢ	TP6252	E-8	Ⓢ	D2001	C-2	Ⓢ
IC4241	B-10	Ⓢ	TC4284	D-9	Ⓢ	TP6253	D-8	Ⓢ	D3001	C-5	Ⓢ
IC5201	D-4	Ⓢ	TC4285	E-9	Ⓢ	TP6501	C-6	Ⓢ	D3002	C-10	Ⓢ
IC6201	A-4	Ⓢ	TC4286	E-9	Ⓢ	TP7001	D-5	Ⓢ	D6311	A-4	Ⓢ
IC6301	B-15	Ⓢ	TC4287	E-9	Ⓢ	TP7002	C-5	Ⓢ	D6312	A-4	Ⓢ
IC6311	B-2	Ⓢ	TC4288	B-9	Ⓢ	TP7004	C-5	Ⓢ	D6601	B-6	Ⓢ
IC6312	A-14	Ⓢ	TC5201	E-13	Ⓢ	TP7006	C-5	Ⓢ	D6602	B-6	Ⓢ
IC6503	B-12	Ⓢ	TC5202	E-13	Ⓢ	Adjustments			Filters		
IC6505	C-12	Ⓢ	TC5203	E-13	Ⓢ	VR3231	E-7	Ⓢ	FL6251	E-5	Ⓢ
IC6507	B-11	Ⓢ	TC5204	E-13	Ⓢ	VR3232	D-7	Ⓢ	FL6252	D-5	Ⓢ
IC6508	B-11	Ⓢ	TC5205	E-13	Ⓢ	VR3233	D-7	Ⓢ	FL6253	D-5	Ⓢ
IC6601	A-12	Ⓢ	TC5206	E-13	Ⓢ	Connectors			FL6254	D-5	Ⓢ
IC6602	B-11	Ⓢ	TC5207	E-13	Ⓢ	FP2501	E-2	Ⓢ	X'tal Oscillators		
IC6603	D-12	Ⓢ	TC5208	E-13	Ⓢ	FP4201	B-8	Ⓢ	X6601	C-5	Ⓢ
IC6604	A-12	Ⓢ	TC5209	E-13	Ⓢ	FP4203	D-8	Ⓢ	X6602	B-6	Ⓢ
IC6607	C-10	Ⓢ	TC5210	E-13	Ⓢ	FP5201	E-4	Ⓢ	X6603	C-5	Ⓢ
IC7001	C-4	Ⓢ	TC5211	E-13	Ⓢ	FP6201	A-2	Ⓢ			
IC7051	C-14	Ⓢ	TC5212	E-13	Ⓢ	P4251	B-8	Ⓢ			
Test Points			TC5213	E-13	Ⓢ	P6251	E-5	Ⓢ			
TC2001	B-16	Ⓢ	TC5214	E-13	Ⓢ	Check Points					
TC2002	B-16	Ⓢ	TC5215	E-14	Ⓢ	CP2001	B-2	Ⓢ			
TC2003	B-16	Ⓢ	TC5216	E-14	Ⓢ	CP2002	B-2	Ⓢ			
TC2005	C-15	Ⓢ	TC5217	E-14	Ⓢ	CP2003	B-2	Ⓢ			
TC2006	C-15	Ⓢ	TC5218	E-14	Ⓢ	CP2004	B-2	Ⓢ			
TC2007	C-15	Ⓢ	TC5219	E-14	Ⓢ	CP2005	B-2	Ⓢ			
TC2008	C-15	Ⓢ	TC5220	E-14	Ⓢ	CP2006	B-2	Ⓢ			
TC2009	C-15	Ⓢ	TC5221	E-14	Ⓢ	CP2007	D-1	Ⓢ			
TC2010	B-16	Ⓢ	TC5222	E-14	Ⓢ	CP2008	D-1	Ⓢ			
TC2011	B-16	Ⓢ	TC5223	E-14	Ⓢ	CP2009	C-1	Ⓢ			
TC2012	B-16	Ⓢ	TC5224	E-14	Ⓢ	CP2016	C-2	Ⓢ			
TC2013	B-16	Ⓢ	TC5225	E-14	Ⓢ	CP2017	B-3	Ⓢ			
TC2014	C-15	Ⓢ	TC5226	D-15	Ⓢ	CP2019	C-2	Ⓢ			
TC2015	C-15	Ⓢ	TC5227	E-15	Ⓢ	CP2501	D-1	Ⓢ			
TC2016	C-15	Ⓢ	TC5228	E-15	Ⓢ	CP3001	C-6	Ⓢ			
TC2017	C-15	Ⓢ	TC5229	E-15	Ⓢ	CP3002	C-6	Ⓢ			
TC2018	D-16	Ⓢ	TC5230	E-13	Ⓢ	CP3003	C-6	Ⓢ			
TC2019	C-15	Ⓢ	TC5231	D-14	Ⓢ	CP3004	C-6	Ⓢ			
TC2020	C-15	Ⓢ	TC5232	D-14	Ⓢ	CP3005	C-6	Ⓢ			
TC2021	D-15	Ⓢ	TC5233	D-14	Ⓢ	CP3006	B-6	Ⓢ			
TC2022	D-15	Ⓢ	TC5234	D-13	Ⓢ	CP3007	B-6	Ⓢ			
TC2023	D-16	Ⓢ	TC5235	D-14	Ⓢ	CP3008	B-6	Ⓢ			
TC2024	D-15	Ⓢ	TC5236	D-13	Ⓢ	CP3009	B-6	Ⓢ			
TC2025	D-15	Ⓢ	TC6201	A-16	Ⓢ	CP3010	B-6	Ⓢ			
TC2026	C-15	Ⓢ	TC6202	A-15	Ⓢ	CP3011	B-6	Ⓢ			
TC2027	D-16	Ⓢ	TC6203	A-15	Ⓢ	CP3012	B-6	Ⓢ			
TC2029	C-15	Ⓢ	TC6204	A-15	Ⓢ	CP3013	B-6	Ⓢ			
TC2501	E-15	Ⓢ	TC6205	A-15	Ⓢ	CP3014	B-6	Ⓢ			
TC2502	E-15	Ⓢ	TC6206	A-15	Ⓢ	CP3015	B-6	Ⓢ			
TC2503	E-15	Ⓢ	TC6207	A-15	Ⓢ	CP3016	B-6	Ⓢ			
TC2504	E-15	Ⓢ	TC6208	A-15	Ⓢ	CP3017	B-6	Ⓢ			
TC2511	D-16	Ⓢ	TC6209	A-15	Ⓢ	CP3020	C-7	Ⓢ			
TC2512	D-15	Ⓢ	TC6210	A-15	Ⓢ	CP5201	D-3	Ⓢ			
TC4251	B-9	Ⓢ	TC6211	A-15	Ⓢ	CP5202	D-3	Ⓢ			
TC4252	B-9	Ⓢ	TC6221	A-14	Ⓢ	CP5203	D-3	Ⓢ			
TC4253	B-9	Ⓢ	TC6222	A-14	Ⓢ	CP5204	D-3	Ⓢ			
TC4254	B-9	Ⓢ	TC6223	A-14	Ⓢ	CP5205	D-4	Ⓢ			
TC4255	B-9	Ⓢ	TC6251	E-12	Ⓢ	CP5206	D-4	Ⓢ			
			TC6252	E-12	Ⓢ	CP5207	D-4	Ⓢ			
			TC6253	E-12	Ⓢ						
			TC6254	E-12	Ⓢ						
			TC6255	E-12	Ⓢ						


ADDRESS INFORMATION
Ⓢ ... COMPONENT SIDE
Ⓢ ... FOIL SIDE

3-17. POWER SUPPLY C.B.A. (VEP91231D)

CAUTION


THE RED MARK INDICATES THE PRIMARY CIRCUIT TO DISTINGUISH THE PRIMARY FROM THE SECONDARY CIRCUIT.
PAY ATTENTION NOT TO RECEIVE AN ELECTRIC SHOCK DURING REPAIR AND SERVICE OF THE PRODUCTS.

1. Components identified with the mark  have the special characteristics for safety. When replacing any of these components, use only the same type.
2.  High voltage is applied here. Pay extreme attention, when replacing.
3. When servicing, remove the power cord from the power outlet.
4. When replacing any components, confirm the correct part number with the parts list.

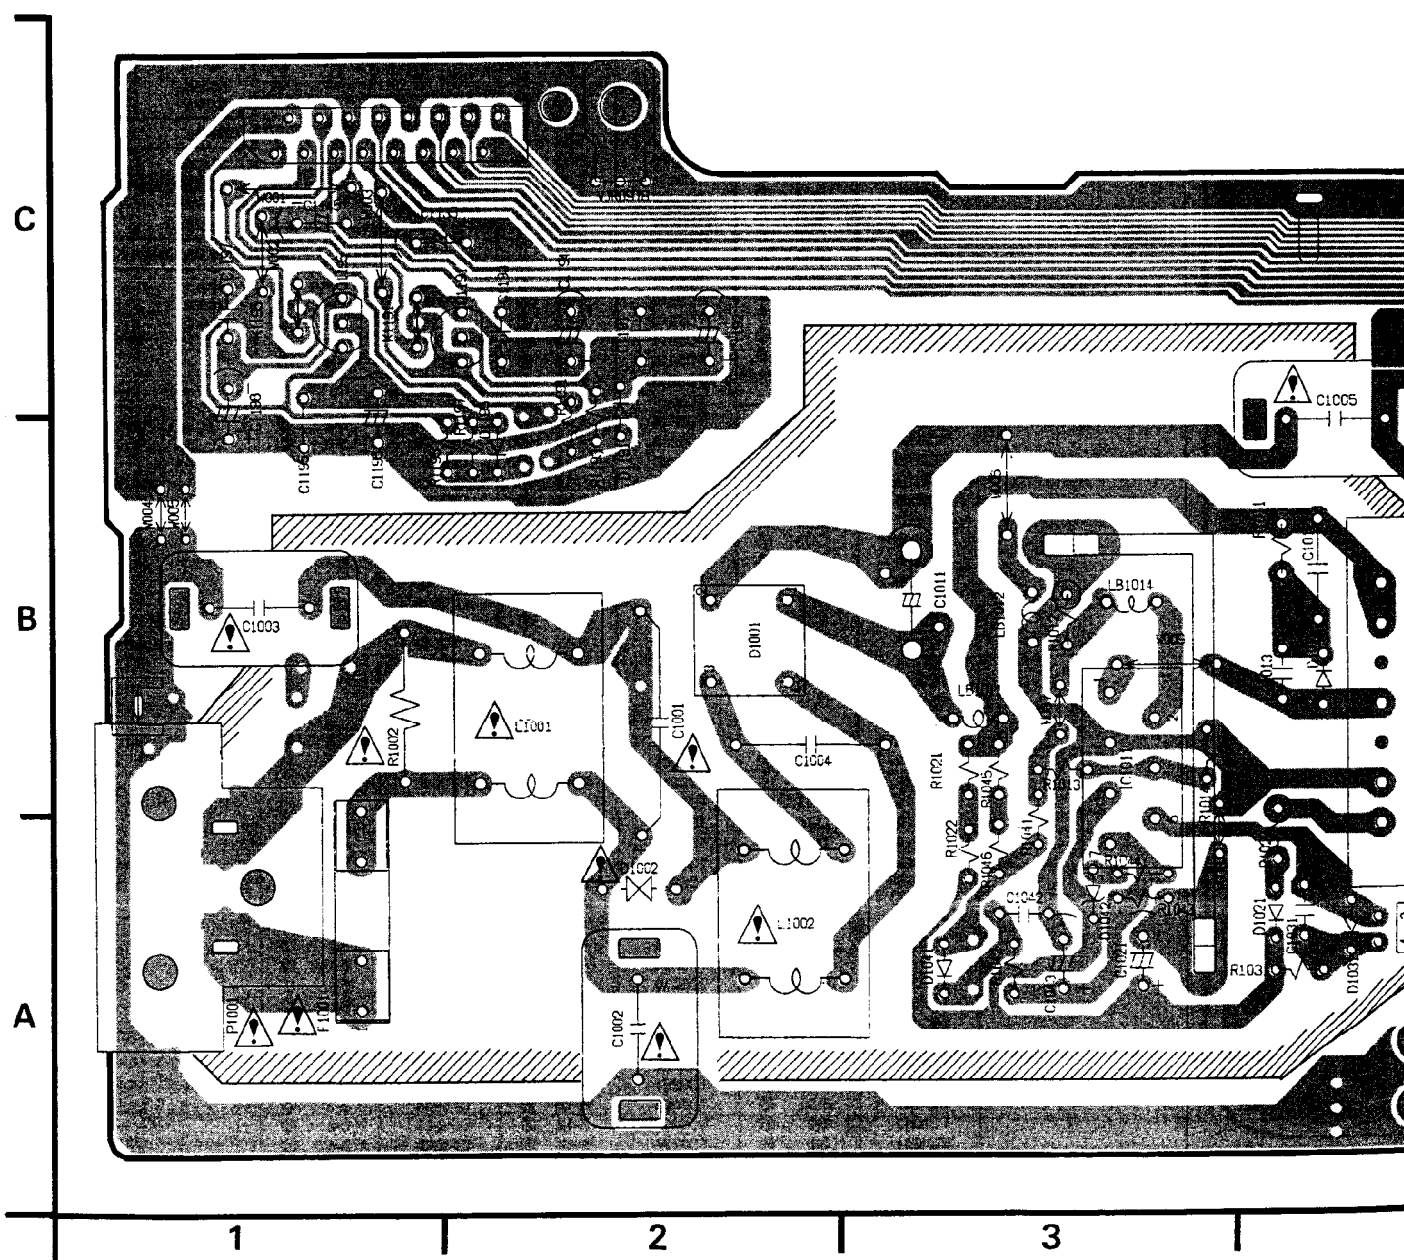

POWER SUPPLY C.B.A.					
Transistors		P1101	C-6	D1162	A-6
Q1031	A-4	P1102	C-1	D1171	A-5
Q1101	A-4	FP1103	B-6	D1191	B-2
Q1102	A-5	Diodes		D1195	C-2
Q1111	B-6	D1001	B-2	Fuse	
Q1145	C-4	D1002	A-2	F1001	A-1
Q1146	C-5	D1011	B-4	Protectors	
Q1191	C-2	D1021	A-4	PR1121	B-6
Q1195	C-1	D1031	A-4	PR1141	C-5
Transistor-Resistor		D1041	A-3	PR1171	A-5
QR1111	B-6	D1042	A-3	Transformer	
Integrated Circuits		D1101	A-5	T1011	B-4
IC1011	B-3	D1111	B-5		
IC1121	A-6	D1121	B-6		
IC1135	B-5	D1131	B-5		
IC1151	B-6	D1135	C-5		
Connectors		D1141	B-4		
P1001	A-1	D1151	B-5		
		D1152	B-5		
		D1161	B-5		

ADDRESS INFORMATION

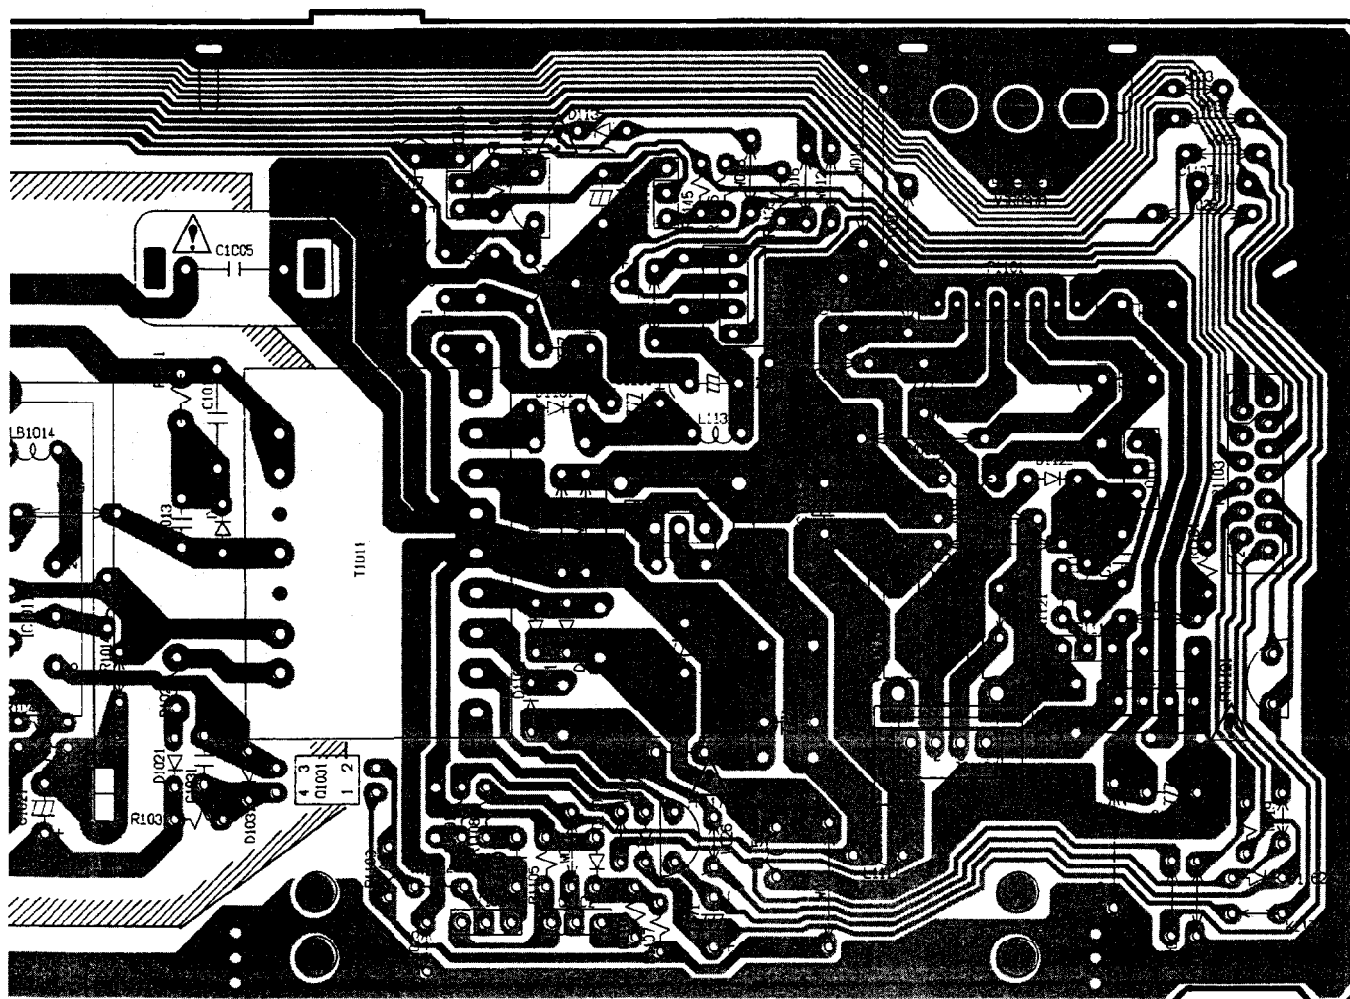



4

5

6

A-6
A-5
B-2
C-2
A-1
B-6
C-5
A-5
B-4

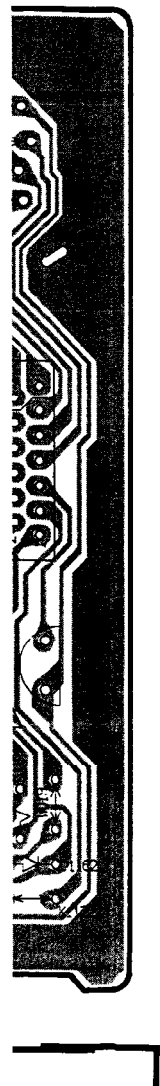

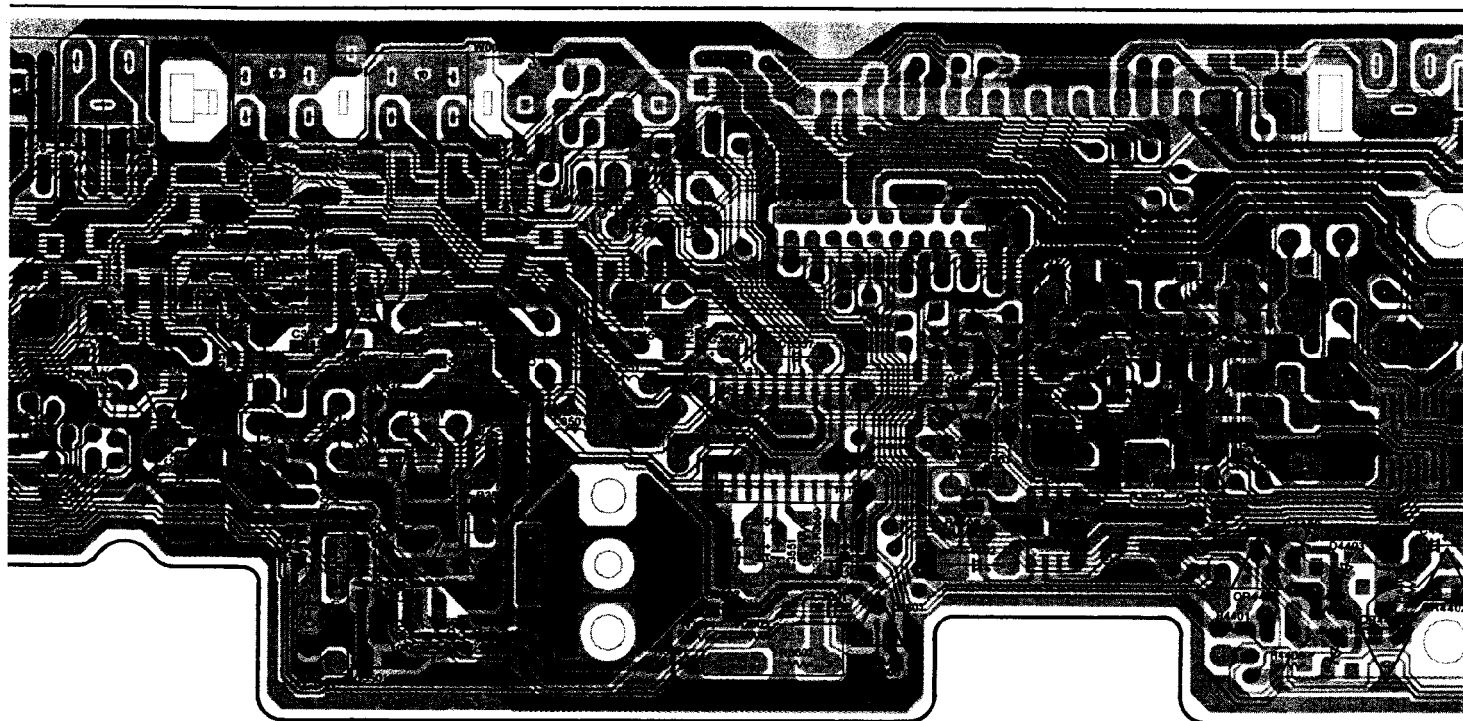


4

5

6

7

8

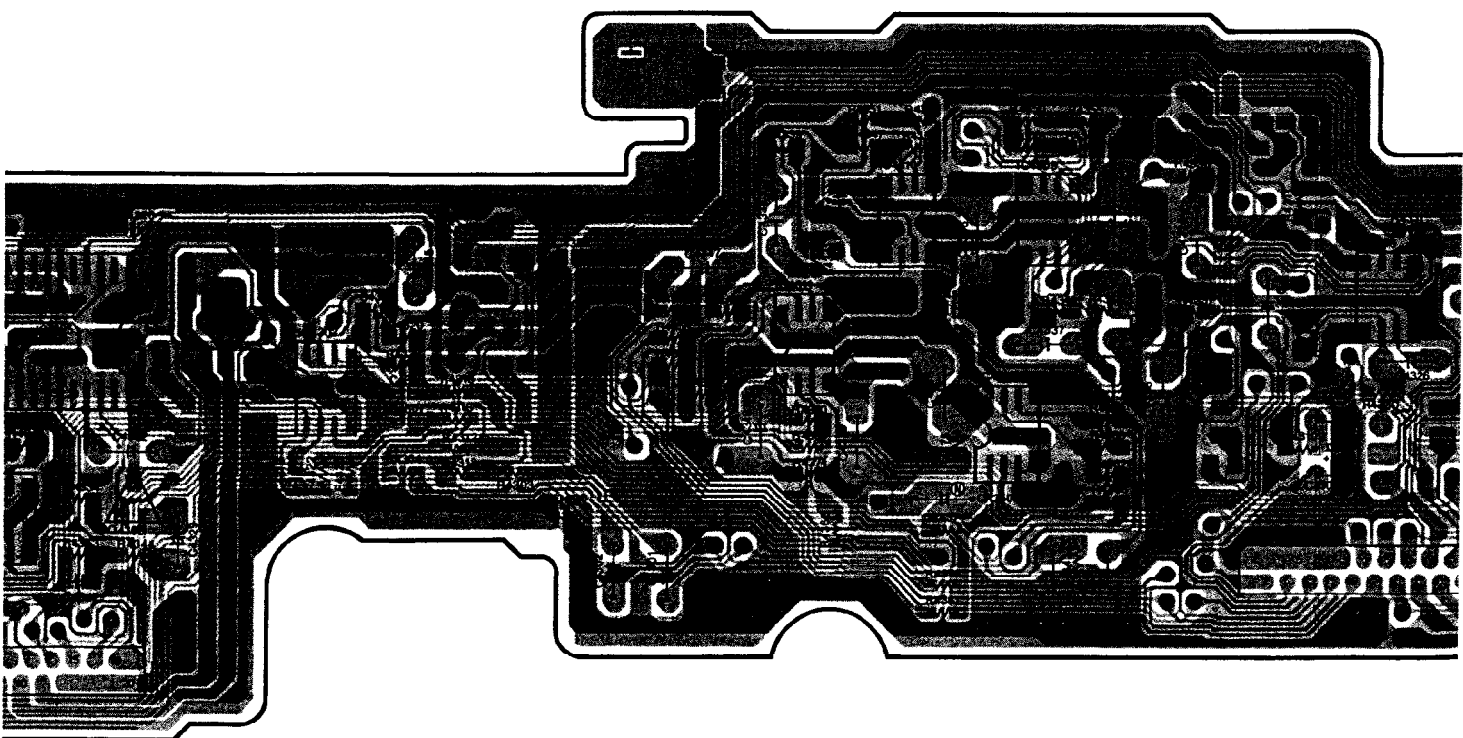


4

5

6

7

8

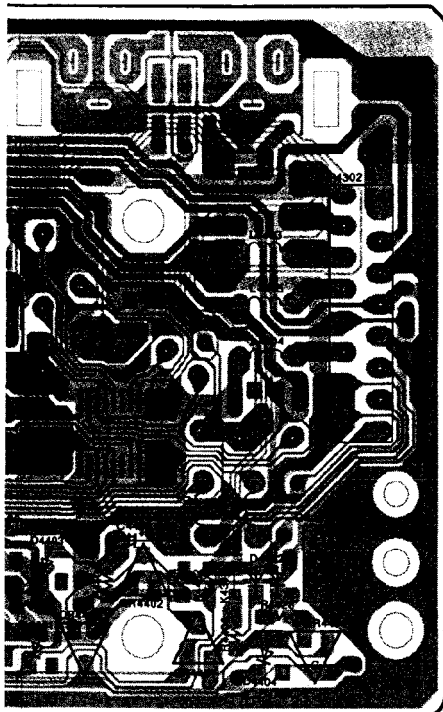


REF. NO. 20000 SERIES

9

AV (REAR) JACK C.B.A.					
Transistors		Transistor-Resistors		Jacks	
Q3501	A-5	QR3501	B-4	J3551	
Q3503	A-5	QR3531	B-4	J4301	C-5
Q3504	B-5	QR3532	B-5	J4302	C-3
Q3530	B-4	QR4400	A-8		C-2
Q3531	B-5	QR4401	A-9	Filters	
Q3534	B-5	QR4402	A-9	FL350	
Q3601	A-7	QR4403	A-9	FL3601	A-5
Q3650	B-8	QR4404	A-9	FL3651	A-6
Q3660	B-8	Integrated Circuits		FL3660	B-8
Q3670	B-8				B-8
Q4405	B-3	Connectors		Diodes	
Q4406	B-3	IC3531	B-6	D3501	
Q4407	C-2	IC4450	B-1	D4400	B-5
Q4408	B-2	IC4452	C-1	D4401	A-8
Q4409	B-3	IC4501	A-7	D4402	A-8
Q4410	B-2			D4403	A-9
Q4411	C-4	FP4301	B-7	D4404	A-8
Q4412	C-3	P4301	B-3		A-9
Q4501	B-7	P4302	B-9		
Q4502	B-7	P4450	B-1		
		P4451	A-1		

ADDRESS INFORMATION

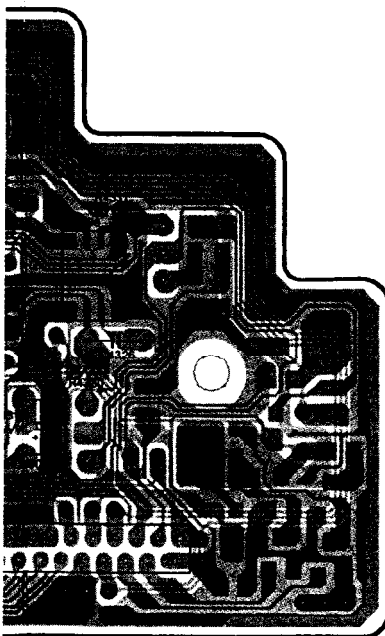

REF. NO. 20000 SERIES


AC-3 C.B.A.			
Transistors		Integrated Circuits	
Q24307	A-1	IC24306	B-8
Q24308	A-4	IC24307	A-2
Q24309	B-3	IC24308	B-3
Q24310	A-3	IC24309	B-7
		IC24310	B-6
		IC24311	B-6
		IC24312	B-7
Integrated Circuits		Connectors	
IC24302	B-4	FP24302	A-3
IC24303	B-1	FP24304	A-8
IC24304	B-2		
IC24305	B-4		

ADDRESS INFORMATION

8

9

3-20. OPERATION C.B.A. (VEP96521L), VOLUME C.B.A.(VEP94309A) , HP

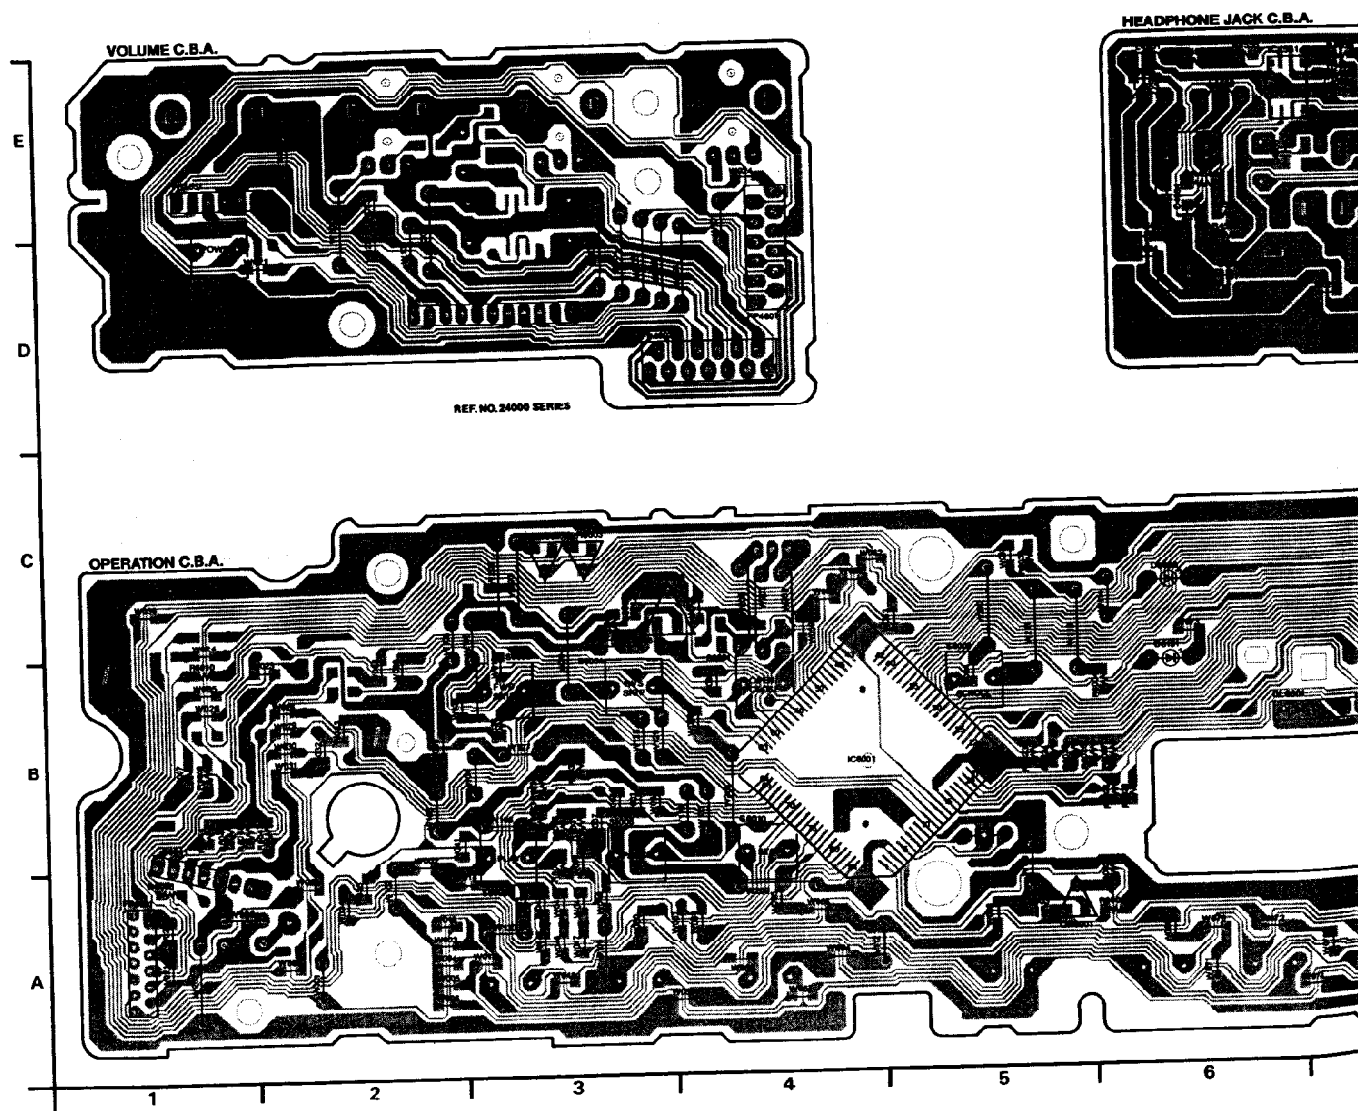


A) , HP JACK C.B.A. (VEP94310A) AND COAXIAL C.B.A. (VEP94305A)

OPERATION C.B.A.					
Transistor-Resistors			Connectors		
QR6001	A-5		FP6001	A-1	
QR6002	C-3		FP6002	C-12	
QR6003	C-3		X'tal Oscillator		
QR6043	C-9		X6001	B-5	
Integrated Circuits			Diodes		
IC6001	B-4		D6002	B-12	
IC6002	B-11		D6003	B-12	
IC6003	C-3		D6004	B-12	
			D6005	B-12	
			D6008	C-6	
			D6043	C-12	
			D6191	B-6	
Switches					
S6001	B-4				
S6002	C-5				
S6003	B-12				
S6004	B-3				
S6005	B-3				
S6008	B-3				
S6009	A-3				
S6010	B-4				
S6041	B-1				



ADDRESS INFORMATION

CK C.B.A.

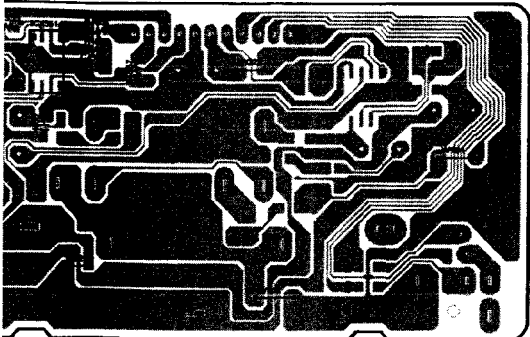

REF. NO. 24000 SERIES

COAXIAL C.B.A.

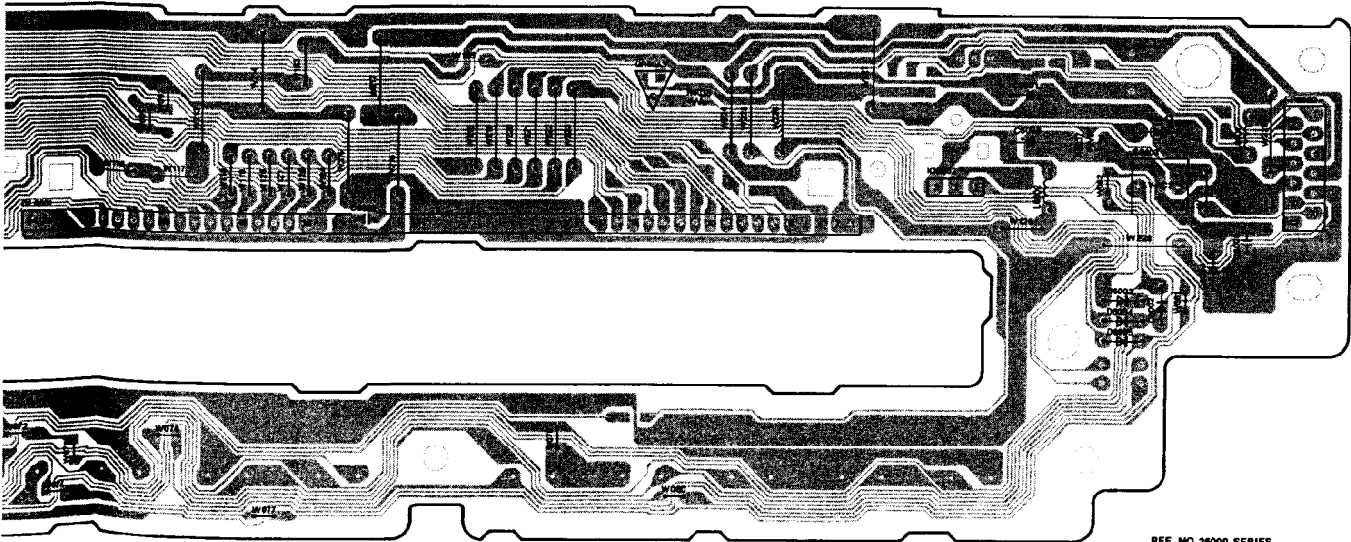

REF. NO. 26000 SERIES

7

8


9

10

11


12

**3-21. MECHANISM I/F C.B.A. (VEP90367A), TRAVERSE MOTOR U. (VX1)
AND TIP SW U. (VEK8061)**

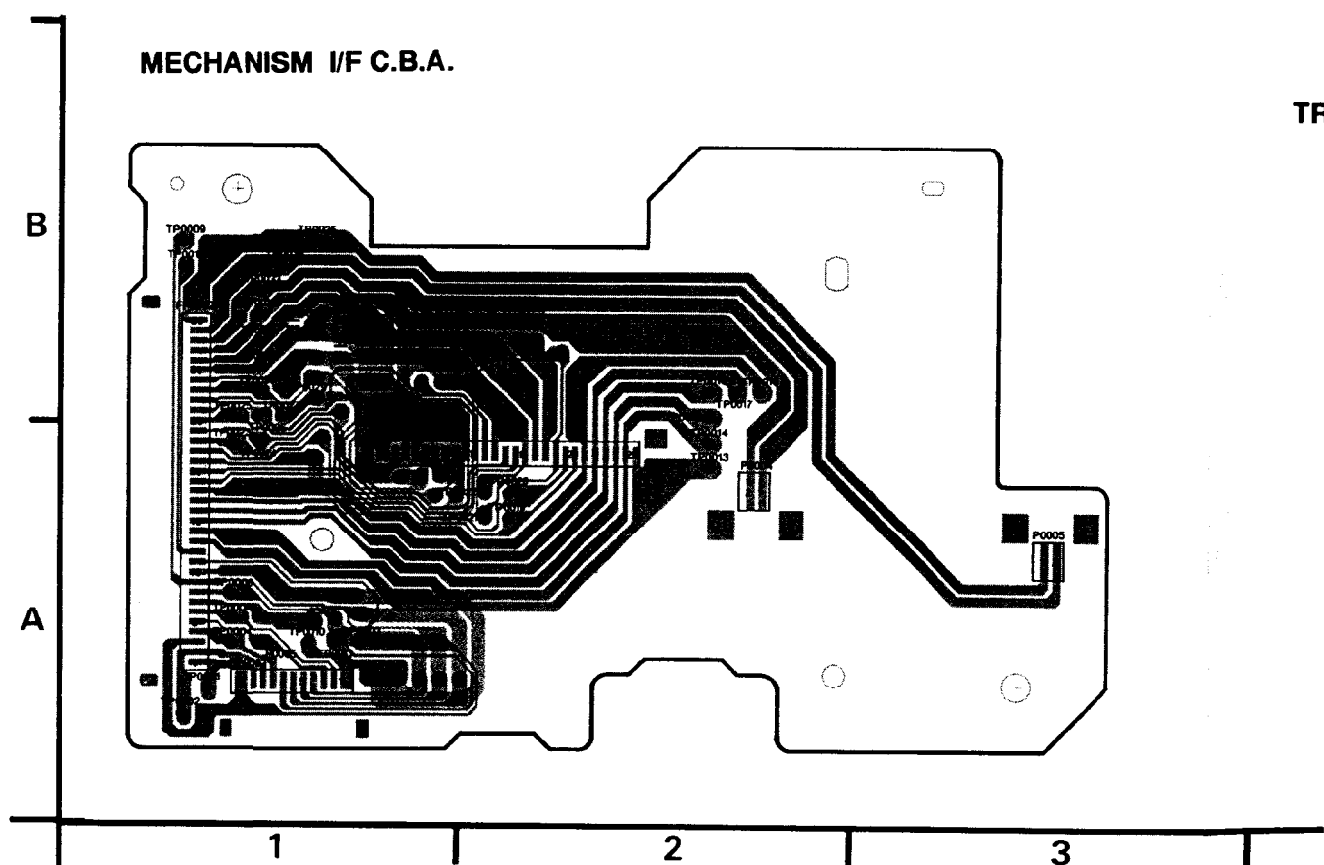

TOR U. (VXQ0588), LOADING MOTOR C.B.A. (VEK8001)


TRAVERSE MOTOR UNIT

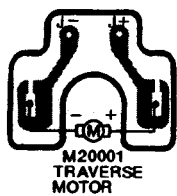

TIP SWITCH UNIT



LOADING MOTOR C.B.A.

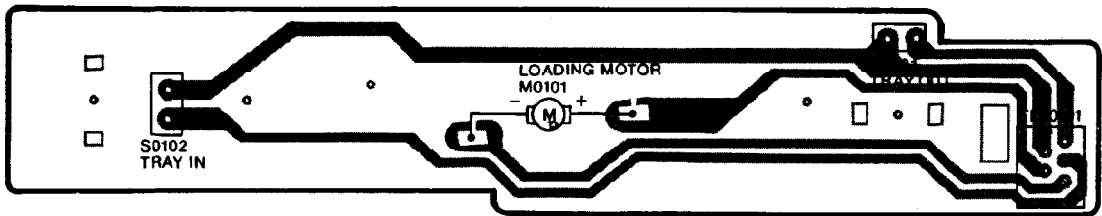

4

5

6

4-1-1. Packing & Accessories Section Exploded View




Components identified with the mark have the special characteristics for safety. When replacing any of these components, use only the same type.

[illegible]

4-2. Casing Parts & Mechanism Section

4-2-1. Casing Parts & Mechanism Section Exploded View

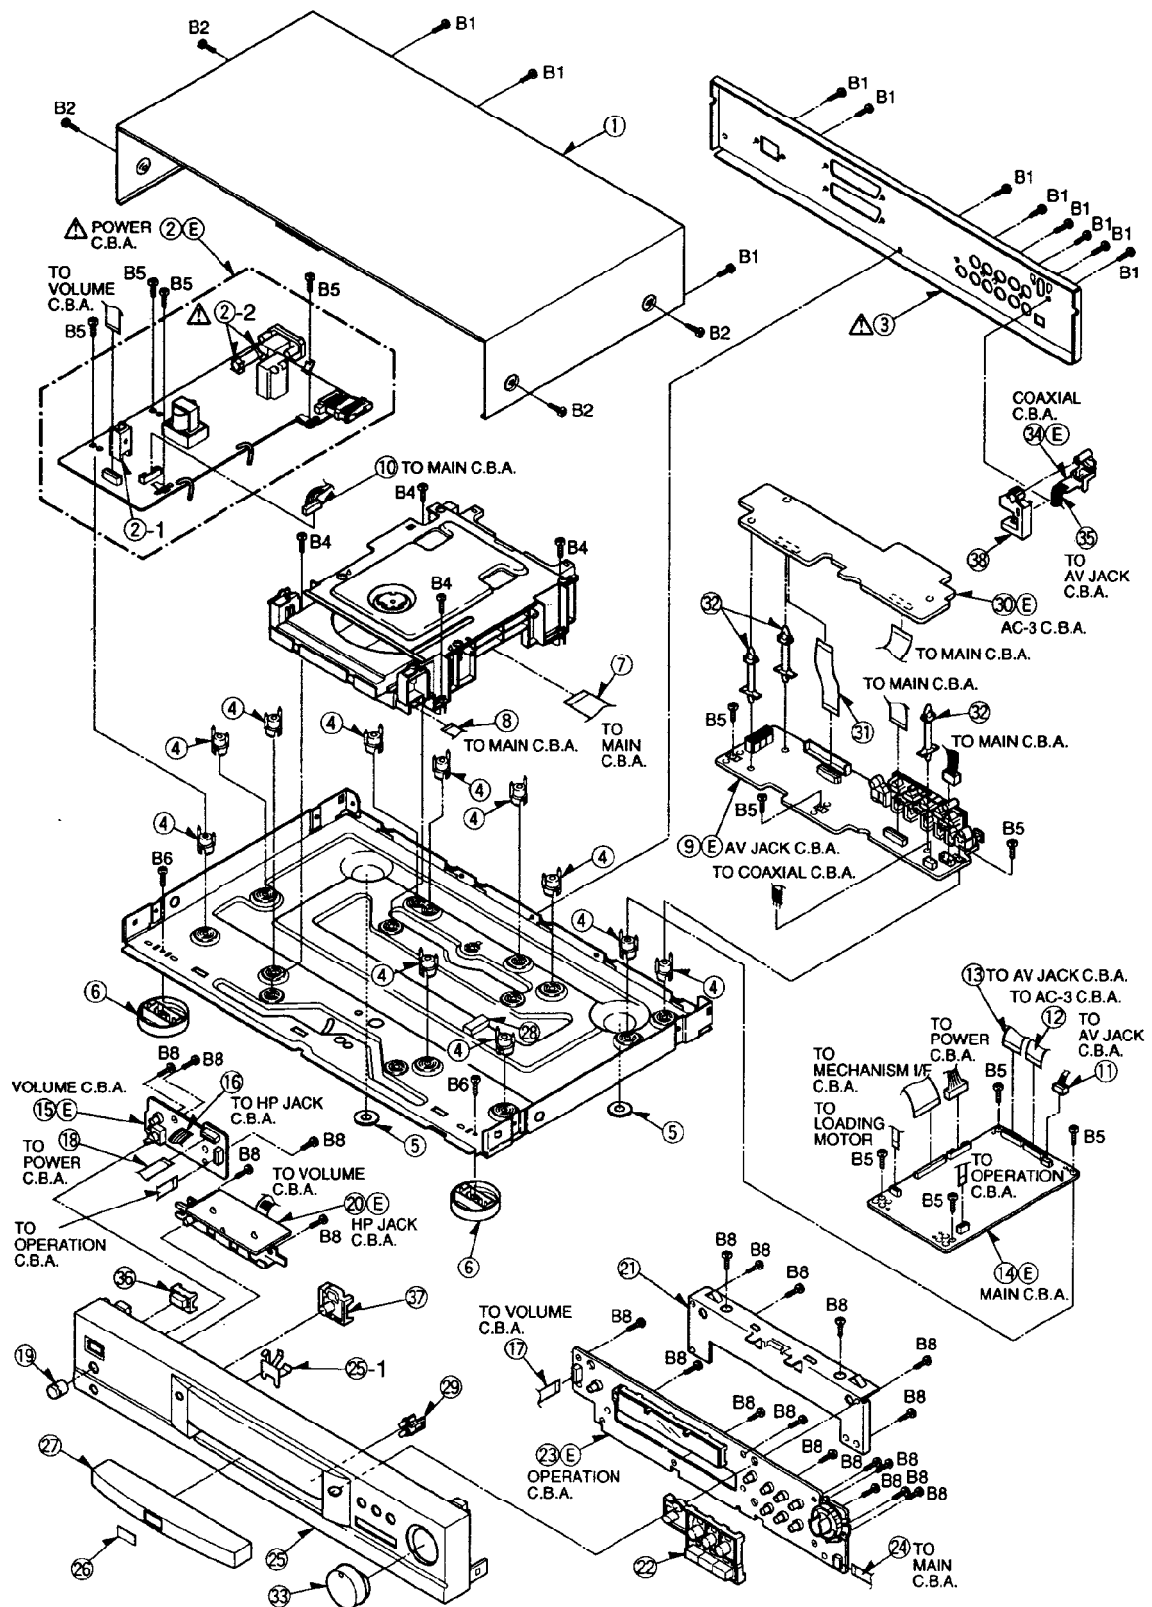

4-2-2. Casing Parts & Mechanism Section

Parts List

Note: 1. *Be sure to make your orders of replacement parts according to this list

2. IMPORTANT SAFETY NOTICE

Components identified with the mark  have the special characteristics for safety. When replacing any of these components, use only the same type.

[illegible]

4-3. Loading Mechanism Section

4-3-1. Loading Mechanism Section


Note: 1. *Be sure to make your orders of replacement parts according to this list.

2. IMPORTANT SAFETY NOTICE

Components identified with the mark  have the special characteristics for safety. When replacing any of these components, use only the same type.


[illegible]

4-3-2. Loading Mechanism Section Exploded View

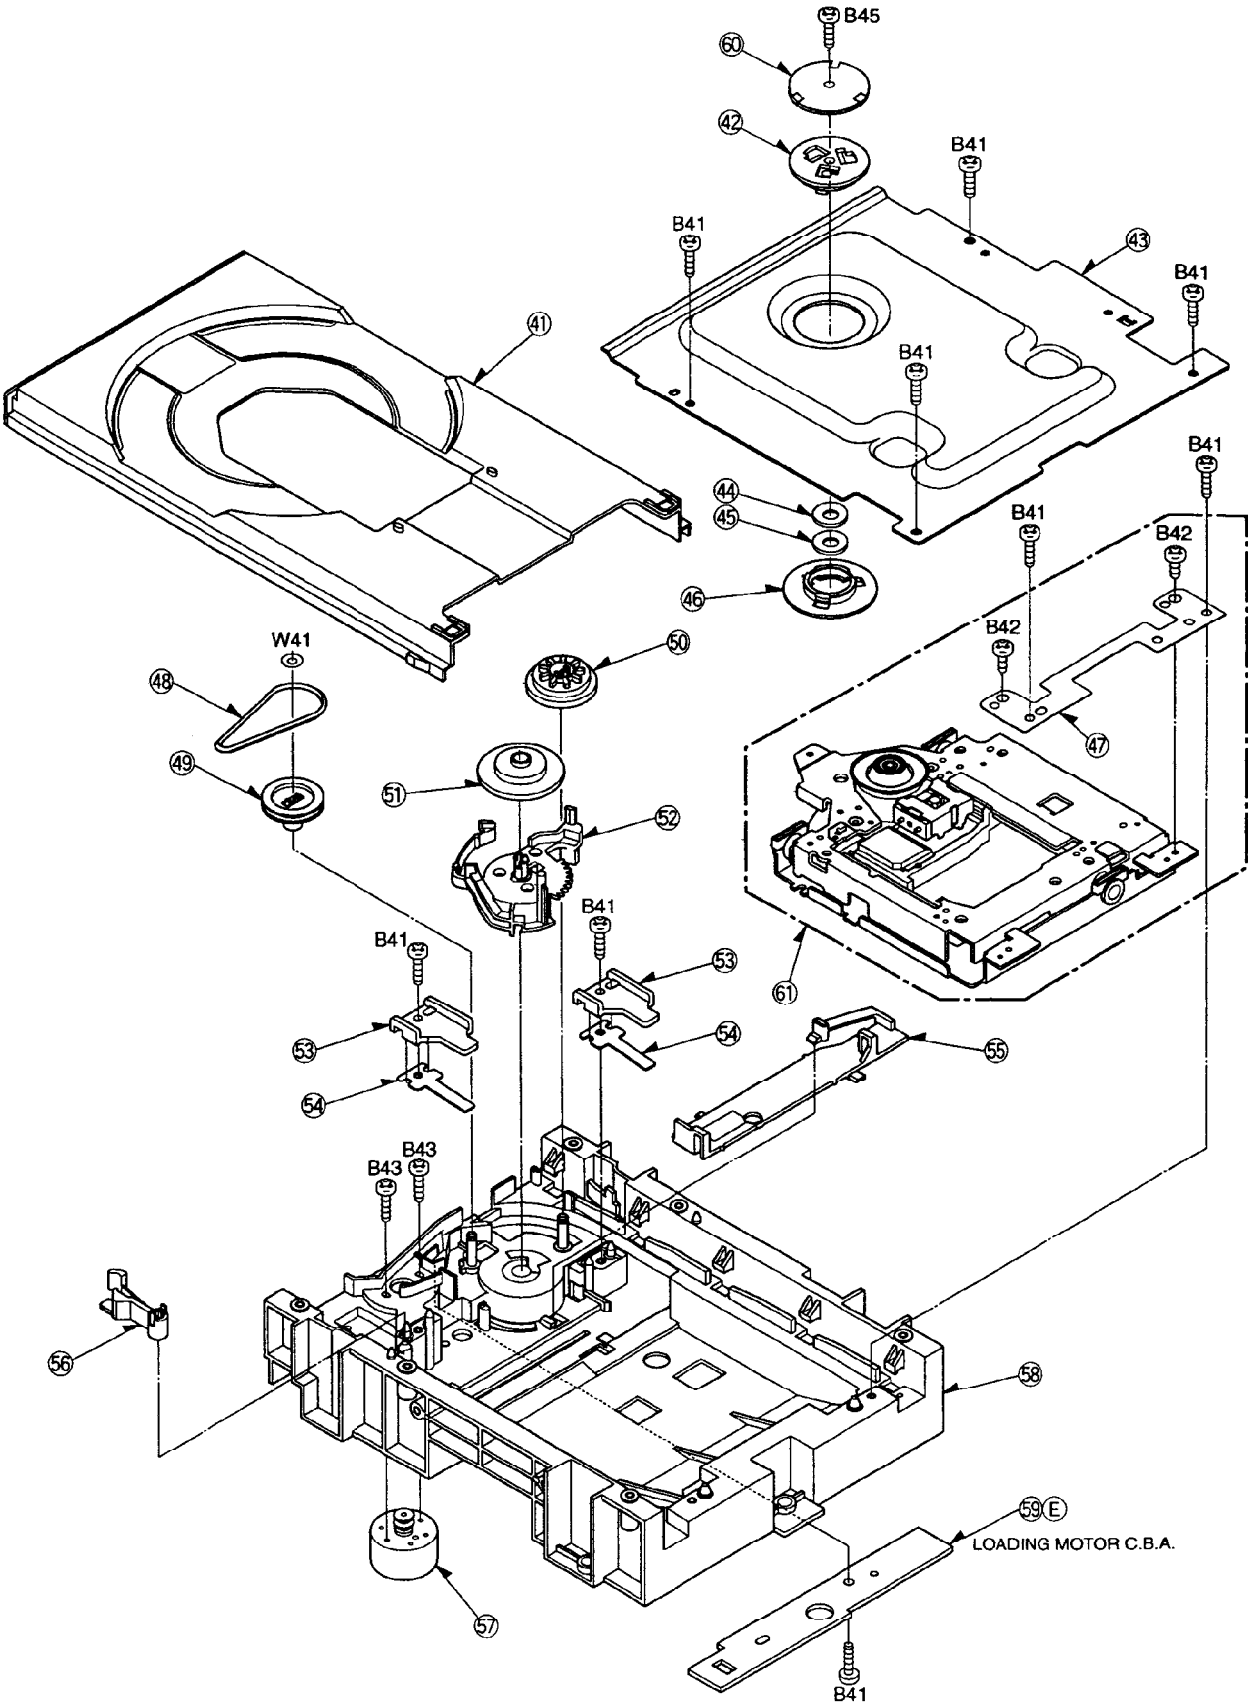

4-4. Traverse Section

4-4-1. Traverse Section Exploded View

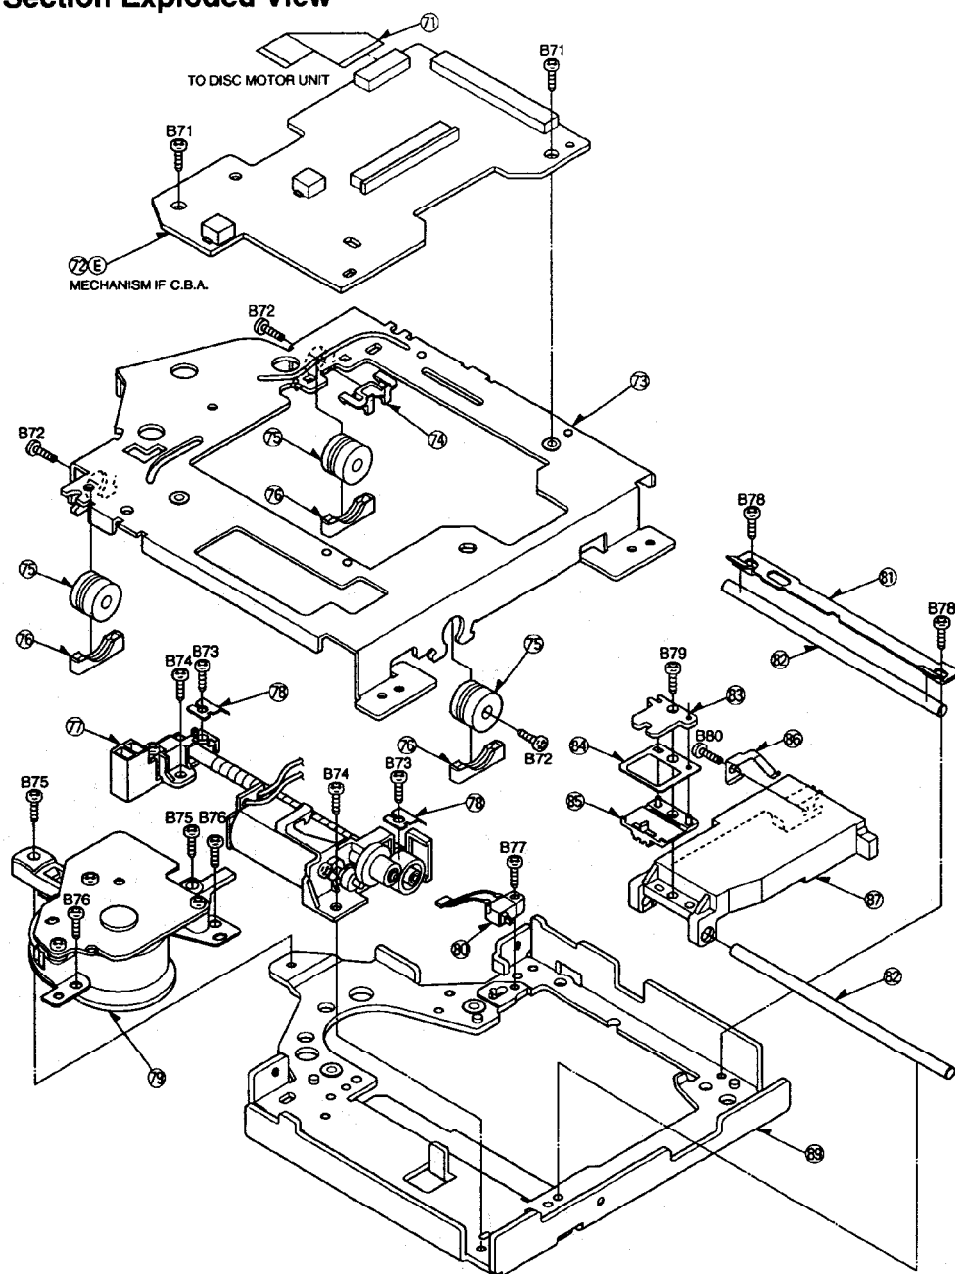

4-4-2. Traverse Section Parts List

Note: 1. *Be sure to make your orders of replacement parts according to this list.
2. IMPORTANT SAFETY NOTICE
Components identified with the mark Δ have the special characteristics for safety. When replacing any of these components, use only the same type.

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
71	(4) VWJ1116	11-PIN FLEXIBLE CABLE	1	(DISC MOTOR-FP0003)
72	(4) VEP90367A	MECHANISM IF C.B.A.	1	(RTL)
73	(4) VXA5786	D CHASSIS UNIT (1)	1	
74	(4) VMD2682	SWITCH CLAMPER	1	
75	(4) VMG1001	DAMPER	3	
76	(4) VMD2675	DAMPER HOLDER	3	
77	(4) VX00588	TRAVERSE MOTOR UNIT	1	
78	(4) VMC1262	MAIN SHAFT HOLDER	2	
79	(4) VXA6065	DISC MOTOR UNIT	1	
80	(4) VEK8061	TIP SWITCH UNIT	1	
81	(4) VMC1260	SUB SHAFT HOLDER	1	

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
82	(4) VMS6098	GUIDE SHAFT	2	
83	(4) VMA9532	NUT STOPPER	1	
84	(4) VMC1263	NUT HOLD SPRING	1	
85	(4) VMD2637	SCREW NUT	1	
86	(4) VMC1265	PU OVER PRESSURE SPRING	1	
87	(4) VED0378	OPTICAL PICK-UP UNIT	1	
89	(4) VMK0433	H CHASSIS	1	
B71	(4) XTB26+5F	SCREW	2	
B72	(4) VHD1032	SCREW	3	
B73	(4) XYC2+JF10	SCREW	2	
B74	(4) XYN2+J4	SCREW	2	
B75	(4) XVE26B10FP	SCREW	2	
B76	(4) XYC2+JF5	SCREW	2	
B77	(4) XYN2+J8	SCREW	1	
B78	(4) XSN2+3	SCREW	2	
B79	(4) XON17+C5	SCREW	1	
B80	(4) VHD1057	SCREW	1	

4-5. Electrical Replacement Parts List

Note: 1. Be sure to make your orders of replacement parts according to this list.
 2. IMPORTANT SAFETY NOTICE: Components identified with the mark Δ have the special characteristics for safety. When replacing any of these components, use only the same type.
 3. Unless otherwise specified,
 All resistors are in OHMS, K=1,000 OHMS. All capacitors are in MICROFARADS (uf), P=ufF.
 4. The P.C. Board units marked with "■" show below the main assembled parts.
 5. The marking (RTL) indicates the retention time is limited for this item.
 After the discontinuation of this assembly in production, it will no longer be available.

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
	VEP96512F	MAIN C.B.A.	1	(RTL)
	VEP96521L	OPERATION C.B.A.	1	(RTL)
Δ ■	VEP91231D	POWER SUPPLY C.B.A.	1	(RTL)
■	VEP94310A	HEADPHONE JACK C.B.A.	1	(RTL)
■	VEP93304N	AV JACK C.B.A.	1	(RTL)
■	VEP94309A	VOLUME C.B.A.	1	(RTL)
■	VEP94304K	AC-3 C.B.A.	1	(RTL)
■	VEP94305A	COAXIAL C.B.A.	1	(RTL)
■	EP90367A	MECHANISM VFC C.B.A.	1	(RTL)
■	VEK8001	LOADING MOTOR C.B.A.	1	(RTL)
■	VEP96512F	MAIN C.B.A.		(RTL)
C22001	EEVHBQJ101	E.CAPACITOR 6.3V 100U	1	
C22002	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C22003	ECUX1C104KBV	C.CAPACITOR CH 16V 0.1U	1	
C22004.05	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	2	
C22006	ECUX1H103KBV	C.CAPACITOR CH 50V 0.01U	1	
C22007	ECUX1C104KBV	C.CAPACITOR CH 16V 0.1U	1	
C22008	ECUX1H222KBV	C.CAPACITOR CH 50V 2200P	1	
C22009	ECUX1C104KBV	C.CAPACITOR CH 16V 0.1U	1	
C22010	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C22011-13	ECUX1C104KBV	C.CAPACITOR CH 16V 0.1U	3	
C22014.15	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	2	
C22016	ECUM1A335KBV	C.CAPACITOR CH 10V 3.3U	1	
C22017	ECUX1H103KBV	C.CAPACITOR CH 50V 0.01U	1	
C22018	ECUX1H122KBV	C.CAPACITOR CH 50V 1200P	1	
C22019	ECUX1H562KBV	C.CAPACITOR CH 50V 5600P	1	
C22020	ECUX1H392KBV	C.CAPACITOR CH 50V 3900P	1	
C22021	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C22024	ECUX1H122KBV	C.CAPACITOR CH 50V 1200P	1	
C22025	ECUX1H562KBV	C.CAPACITOR CH 50V 5600P	1	
C22026	ECUX1H122KBV	C.CAPACITOR CH 50V 1200P	1	
C22027	ECUX1H562KBV	C.CAPACITOR CH 50V 5600P	1	
C22029	ECUX1H392KBV	C.CAPACITOR CH 50V 3900P	1	
C22031.32	ECUX1H102KBV	C.CAPACITOR CH 50V 1000P	2	
C22033.34	ECUX1H122KBV	C.CAPACITOR CH 50V 1200P	2	
C22035	ECUX1H182KBV	C.CAPACITOR CH 50V 1800P	1	
C22036-38	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	3	
C22039	ECUX1H1000CV	C.CAPACITOR CH 50V 10P	1	
C22040	ECUX1H562KBV	C.CAPACITOR CH 50V 5600P	1	
C22501-03	ECUX1C104KBV	C.CAPACITOR CH 16V 0.1U	3	
C22504	ECUX1H103KBV	C.CAPACITOR CH 50V 0.01U	1	
C22505.06	ECUX1C104KBV	C.CAPACITOR CH 16V 0.1U	2	
C22507-09	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	3	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C22511	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C22512	EEVHB1C220	E.CAPACITOR 16V 22U	1	
C23001-16	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	16	
C23019-27	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	9	
C23026	ECEVQJA331	E.CAPACITOR CH 6.3V 330U	1	
C23030	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C23037.38	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	2	
C23039	ECEVQJA331	E.CAPACITOR CH 6.3V 330U	1	
C23051-54	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	4	
C23055	ECST1AY106Z	T.CAPACITOR CH 10V 10U	1	
C23056	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C23061-64	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	4	
C23065	ECST1AY106Z	T.CAPACITOR CH 10V 10U	1	
C23066	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C23201	ECUX1H103ZFV	C.CAPACITOR CH 50V 0.01U	1	
C23202	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C23211	ECUX1H103ZFV	C.CAPACITOR CH 50V 0.01U	1	
C23212	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C23221	ECUX1H103ZFV	C.CAPACITOR CH 50V 0.01U	1	
C23222	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C23223	ECUM1A105KBN	C.CAPACITOR CH 10V 1U	1	
C23224	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C23225	ECUM1A105KBN	C.CAPACITOR CH 10V 1U	1	
C23226.27	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	2	
C23241-45	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	5	
C23251.52	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	2	
C23253	ECST1CX106	T.CAPACITOR CH 16V 10U	1	
C23254	EEVHBQJ330	E.CAPACITOR 6.3V 33U	1	
C24201-03	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	3	
C24204	ECST1AY106Z	T.CAPACITOR CH 10V 10U	1	
C24205	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C24206	EEVFCQJ152XP	E.CAPACITOR 6.3V 1500U	1	
C24207	ECST1AY106Z	T.CAPACITOR CH 10V 10U	1	
C24208	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C24211-13	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	3	
C24214	ECST1AY106Z	T.CAPACITOR CH 10V 10U	1	
C24215	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C24216	ECEVQJA331	E.CAPACITOR CH 6.3V 330U	1	
C24217	ECST1AY106Z	T.CAPACITOR CH 10V 10U	1	
C24218	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C24221-23	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	3	
C24224	ECST1AY106Z	T.CAPACITOR CH 10V 10U	1	
C24225	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C24227	ECST1AY106Z	T.CAPACITOR CH 10V 10U	1	
C24228	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C24231.32	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	2	
C24241	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C24242	ECUX1H390JCV	C.CAPACITOR CH 50V 39P	1	
C24653	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C25201	EEVHBQJ220	E.CAPACITOR 6.3V 22U	1	
C25202	ECUX1H560JCV	C.CAPACITOR CH 50V 56P	1	
C25203.04	ECUM1A105KBN	C.CAPACITOR CH 10V 1U	2	
C25205	ECUM1A184KBV	C.CAPACITOR CH 10V 0.18U	1	
C25206.07	ECUM1A105KBN	C.CAPACITOR CH 10V 1U	2	
C25208.09	ECUX1H102KBV	C.CAPACITOR CH 50V 1000P	2	
C25210	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C25211	EEVHBQJ330	E.CAPACITOR 6.3V 33U	1	
C25212.13	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	2	
C25214	ECUX1H682KBV	C.CAPACITOR CH 50V 6800P	1	
C25215	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C25216	ECUX1H331JCV	C.CAPACITOR CH 50V 330P	1	
C25217	ECUX1A224KBV	C.CAPACITOR CH 10V 0.22U	1	
C25218	ECUM1A105KBN	C.CAPACITOR CH 10V 1U	1	
C25219.20	ECUX1H221JCV	C.CAPACITOR CH 50V 220P	2	
C25221	ECUX1C104KBV	C.CAPACITOR CH 16V 0.1U	1	
C25222	ECUX1A224KBV	C.CAPACITOR CH 10V 0.22U	1	
C25223	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C25224	EEVHBQJ330	E.CAPACITOR 6.3V 33U	1	
C25225-28	ECUX1C104KBV	C.CAPACITOR CH 16V 0.1U	4	
C25229	ECUM1A105KBN	C.CAPACITOR CH 10V 1U	1	
C25230	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C25231	ECUM1A105KBN	C.CAPACITOR CH 10V 1U	1	
C25232.33	ECUM1A684KBN	C.CAPACITOR CH 10V 0.68U	2	
C25234	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C25235	ECUX1C104KBV	C.CAPACITOR CH 16V 0.1U	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C26201-06	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	6	
C26207	EEVHBQJ330	E.CAPACITOR 6.3V 33U	1	
C26251	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C26252	EEVHBQJ330	E.CAPACITOR 6.3V 33U	1	
C26253	EEVHBQJ101	E.CAPACITOR 6.3V 100U	1	
C26254	ECEV0JA331	E.CAPACITOR CH 6.3V 330U	1	
C26255	ECUX1H103ZFV	C.CAPACITOR CH 50V 0.01U	1	
C26301	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C26311	ECUX1H101JCV	C.CAPACITOR CH 50V 100P	1	
C26312	ECUX1C104KBV	C.CAPACITOR CH 16V 0.1U	1	
C26321	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C26502	EEVHBQJ330	E.CAPACITOR 6.3V 33U	1	
C26503	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C26506	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C26511	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C26514	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C26516	ECUX1C104KBV	C.CAPACITOR CH 16V 0.1U	1	
C26519	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C26521	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C26601	ECUX1H103KBV	C.CAPACITOR CH 50V 0.01U	1	
C26602	ECUX1H102JCV	C.CAPACITOR CH 50V 1000P	1	
C26604	ECUX1C104KBV	C.CAPACITOR CH 16V 0.1U	1	
C26605	ECUX1H0800CV	C.CAPACITOR CH 50V 8P	1	
C26606	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C26607	EEVHBQJ330	E.CAPACITOR 6.3V 33U	1	
C26608	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C26609	ECUX1H102JCV	C.CAPACITOR CH 50V 1000P	1	
C26612	ECUX1H120JCV	C.CAPACITOR CH 50V 12P	1	
C26613	ECUX1H150JCV	C.CAPACITOR CH 50V 15P	1	
C26614-16	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	3	
C26617	ECUX1H150JCV	C.CAPACITOR CH 50V 15P	1	
C26618	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C26619	ECUM1A105KBN	C.CAPACITOR CH 10V 1U	1	
C27001-16	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	16	
C27017,18	EEVHBQJ101	E.CAPACITOR 6.3V 100U	2	
C27021	ECUX1H102KBV	C.CAPACITOR CH 50V 1000P	1	
C27025	ECUM1A105KBN	C.CAPACITOR CH 10V 1U	1	
C27051	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
C27052	ECST1AY68Z	T.CAPACITOR CH 10V 6.8U	1	
C27053	ECUX1C104ZFV	C.CAPACITOR CH 16V 0.1U	1	
D22001	MA111	DIODE	1	
D23001	MA8030-H	DIODE	1	
D23002	MA111	DIODE	1	
D26311,12	MA728	DIODE	2	
D26601.02	MA304	DIODE	2	
FL26251-54	ELKE103FA	FILTER	4	
FP22501	VJS3913A005	CONNECTOR (FEMALE) 5P	1	
FP24201	VJS3911C021	CONNECTOR (FEMALE) 21P	1	
FP24203	VJS3911C022	CONNECTOR (FEMALE) 22P	1	
FP25201	VJS3913A035	CONNECTOR (FEMALE) 35P	1	
FP26201	VJS3913A007	CONNECTOR (FEMALE) 7P	1	
IC22001	MN67702VRZC	IC	1	
IC22501	BA6849FP	IC	1	
IC22511	AN8813NSBS	IC	1	
IC23001	MN67750EXA	IC	1	
IC23051	MINX7160A	IC	1	
IC23061	HM5241605T12	IC	1	
IC23201	MC44724AVFU	IC	1	
IC23251	AN78L05M	IC	1	
IC24201	PCM1716E	IC	1	
IC24211	PCM1716E	IC	1	
IC24221	PCM1716E	IC	1	
IC24231	NJU3711M	IC	1	
IC24232	TC7W32FU	IC	1	
IC24241	TC7ST04FU	IC	1	
IC25201	AN8825NPHQ-V	IC	1	
IC26201	MN102L250N2J	IC	1	
IC26301	TC58F400FTA	IC	1	
IC26311	PST5960NR	IC	1	
IC26312	X25C025T2	IC	1	
IC26503	TCVHC157FTEL	IC	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
IC26505	TC7SHU04FU	IC	1	
IC26507.08	TC7SHU04FU	IC	2	
IC26601-04	TC7SHU04FU	IC	4	
IC26607	NUM2115V	IC	1	
IC27001	MN103005AN2G	IC	1	
IC27051	M4V4265CT7ST	IC	1	
K22001	ERJ3GEY0R00	M.RESISTOR CH 1/16W 0	1	
K22003	ERJ3GEY0R00	M.RESISTOR CH 1/16W 0	1	
K23021.22	ERJ3GEY0R00	M.RESISTOR CH 1/16W 0	2	
K23201	ERJ3GEY0R00	M.RESISTOR CH 1/16W 0	1	
K24201-03	ERJ3GEY0R00	M.RESISTOR CH 1/16W 0	3	
K26311	ERJ3GEY0R00	M.RESISTOR CH 1/16W 0	1	
K26502	ERJ3GEY0R00	M.RESISTOR CH 1/16W 0	1	
K26602	ERJ3GEY0R00	M.RESISTOR CH 1/16W 0	1	
K26604.05	ERJ3GEY0R00	M.RESISTOR CH 1/16W 0	2	
L22001.02 V	LQ0779K100	COIL 10UH	2	
L23251	VLQ0779K100	COIL 10UH	1	
L25201	VLQ0779K100	COIL 10UH	1	
L26251	VLQ0779K100	COIL 10UH	1	
L26501	VLQ0426J220	COIL 22UH	1	
LB22501.02	JAL8K2HS470T	COIL	2	
LB22503.04	VLP0323A601T	CHIP SOLID INDUCTOR	2	
LB23001	VLP0155	COIL	1	
LB24241	VLP0323A601T	CHIP SOLID INDUCTOR	1	
LB24251-65	VLP0323A601T	CHIP SOLID INDUCTOR	15	
LB24271-88	VLP0323A601T	CHIP SOLID INDUCTOR	18	
LB26201-04	VLP0140	COIL	4	
LB26213	VLP0155	COIL	1	
LB26505	VLP0155	COIL	1	
LB26506	VLP0323A601T	CHIP SOLID INDUCTOR	1	
LB26511	VLP0323A601T	CHIP SOLID INDUCTOR	1	
LB26513-15	VLP0155	COIL	3	
LB26516	VLP0323A601T	CHIP SOLID INDUCTOR	1	
LB26518	VLP0155	COIL	1	
LB26519	VLP0323A601T	CHIP SOLID INDUCTOR	1	
LB26520	VLP0155	COIL	1	
LB26601	VLP0323A601T	CHIP SOLID INDUCTOR	1	
LB26602	VLP0155	COIL	1	
LB26603.04	VLP0323A601T	CHIP SOLID INDUCTOR	2	
LB26606	VLP0323A601T	CHIP SOLID INDUCTOR	1	
LB26607	VLP0155	COIL	1	
LB26608	VLP0323A601T	CHIP SOLID INDUCTOR	1	
LB26609	VLP0155	COIL	1	
LB27001.02	VLP0155	COIL	2	
P24251	VJP3904A005	CONNECTOR (MALE) 5P	1	
P26251	VJP4027C008	CONNECTOR (MALE) 8P	1	
PS27001	VJS2961A008	CONNECTOR (FEMALE) 8P	1	
Q23001.02	2SB1218A-R	TRANSISTOR	2	
Q23201	2SB1218A-R	TRANSISTOR	1	
Q23203	2SB1218A-R	TRANSISTOR	1	
Q23211	2SB1218A-R	TRANSISTOR	1	
Q25201	2SB1115-T	TRANSISTOR	1	
QR26311	UN5212	TRANSISTOR-RESISTOR	1	
R22002	ERJ3GEYJ223	M.RESISTOR CH 1/16W 22K	1	
R22003	ERJ3GEYJ103	M.RESISTOR CH 1/16W 10K	1	
R22004	ERJ3GEYJ202	M.RESISTOR CH 1/16W 2K	1	
R22005	ERJ3GEYJ101	M.RESISTOR CH 1/16W 100	1	
R22006	ERJ3GEYJ273	M.RESISTOR CH 1/16W 27K	1	
R22007	ERJ3GEYJ822	M.RESISTOR CH 1/16W 8.2K	1	
R22008	ERJ3GEYJ273	M.RESISTOR CH 1/16W 27K	1	
R22009	ERJ3GEYJ183	M.RESISTOR CH 1/16W 18K	1	
R22010	ERJ3GEYJ333	M.RESISTOR CH 1/16W 33K	1	
R22011	ERJ3GEYJ273	M.RESISTOR CH 1/16W 27K	1	
R22012-14	ERJ3GEYJ682	M.RESISTOR CH 1/16W 6.8K	3	
R22015.16	ERJ3GEYJ562	M.RESISTOR CH 1/16W 5.6K	2	
R22018-23	ERJ3GEYJ562	M.RESISTOR CH 1/16W 5.6K	6	
R22027	ERJ3GEYJ562	M.RESISTOR CH 1/16W 5.6K	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R22028	ERJ3GEYJ122	M.RESISTOR CH 1/16W 1.2K	1	
R22029	ERJ3GEYF512	M.RESISTOR CH 1/16W 5.1K	1	
R22501	ERJ3GEYJ271	M.RESISTOR CH 1/16W 270	1	
R22502.03	ERJ3RBD103	M.RESISTOR CH 1/16W 10K	2	
R22504.05	ERJ3RBD223	M.RESISTOR CH 1/16W 22K	2	
R22506	ERJ3GEYJ271	M.RESISTOR CH 1/16W 270	1	
R22507	ERJ14YKR39	M.RESISTOR CH 1/4W 0.39	1	
R22511-13	ERJ3GEY6682	M.RESISTOR CH 1/16W 6.8K	3	
R22514	ERJ3GEYJ563	M.RESISTOR CH 1/16W 56K	1	
R22515	ERJ3RBD123	M.RESISTOR CH 1/16W 12K	1	
R22516.17	ERJ3RBD473	M.RESISTOR CH 1/16W 47K	2	
R22518	ERJ3RBD123	M.RESISTOR CH 1/16W 12K	1	
R23001	ERJ3GEYJ220	M.RESISTOR CH 1/16W 22	1	
R23002	ERJ3GEY0R00	M.RESISTOR CH 1/16W 0	1	
R23003	ERJ3GEYJ392	M.RESISTOR CH 1/16W 3.9K	1	
R23005	ERJ3GEYJ103	M.RESISTOR CH 1/16W 10K	1	
R23007	ERJ3GEYJ473	M.RESISTOR CH 1/16W 47K	1	
R23009	ERJ3GEYJ473	M.RESISTOR CH 1/16W 47K	1	
R23021	ERJ3GEYJ473	M.RESISTOR CH 1/16W 47K	1	
R23022	ERJ3GEY6152	M.RESISTOR CH 1/16W 1.5K	1	
R23023	ERJ3GEYJ821	M.RESISTOR CH 1/16W 820	1	
R23028	ERJ3GEY6102	M.RESISTOR CH 1/16W 1K	1	
R23030	ERJ3GEY6102	M.RESISTOR CH 1/16W 1K	1	
R23033.34	ERJ3GEY6102	M.RESISTOR CH 1/16W 1K	2	
R23036.37	ERJ3GEYJ330	M.RESISTOR CH 1/16W 33	2	
R23201	ERJ3GEYF101	M.RESISTOR CH 1/16W 100	1	
R23202	ERJ3GEY6102	M.RESISTOR CH 1/16W 1K	1	
R23203	ERJ3GEYJ101	M.RESISTOR CH 1/16W 100	1	
R23211	ERJ3GEYF101	M.RESISTOR CH 1/16W 100	1	
R23212	ERJ3GEY6102	M.RESISTOR CH 1/16W 1K	1	
R23213	ERJ3GEYJ101	M.RESISTOR CH 1/16W 100	1	
R23221	ERJ3GEYF101	M.RESISTOR CH 1/16W 100	1	
R23222	ERJ3GEY6102	M.RESISTOR CH 1/16W 1K	1	
R23223-25	ERJ3GEYJ101	M.RESISTOR CH 1/16W 100	3	
R23230	ERJ3GEYJ105	M.RESISTOR CH 1/16W 1M	1	
R23231	ERJ3GEY6102	M.RESISTOR CH 1/16W 1K	1	
R23232	ERJ3GEYJ331	M.RESISTOR CH 1/16W 330	1	
R23233	ERJ3GEY6332	M.RESISTOR CH 1/16W 3.3K	1	
R23234	ERJ3GEYJ331	M.RESISTOR CH 1/16W 330	1	
R23235	ERJ3GEY6332	M.RESISTOR CH 1/16W 3.3K	1	
R23236	ERJ3GEY6102	M.RESISTOR CH 1/16W 1K	1	
R23237	ERJ3GEYJ105	M.RESISTOR CH 1/16W 1M	1	
R23238	ERJ3GEYF101	M.RESISTOR CH 1/16W 100	1	
R23239	ERJ3GEYJ220	M.RESISTOR CH 1/16W 22	1	
R23240	ERJ3GEYJ101	M.RESISTOR CH 1/16W 100	1	
R23243	ERJ3GEYJ331	M.RESISTOR CH 1/16W 330	1	
R24241	ERJ3GEYJ151	M.RESISTOR CH 1/16W 150	1	
R25201	ERJ12YJ100	M.RESISTOR CH 1/2W 10	1	
R25202	ERJ3GEYJ123	M.RESISTOR CH 1/16W 12K	1	
R25205	ERJ3GEY0R00	M.RESISTOR CH 1/16W 0	1	
R25206	ERJ3GEYJ223	M.RESISTOR CH 1/16W 22K	1	
R25207	ERJ3GEYJ433	M.RESISTOR CH 1/16W 43K	1	
R25209	ERJ3GEY0R00	M.RESISTOR CH 1/16W 0	1	
R25210	ERJ3GEYF682	M.RESISTOR CH 1/16W 6.8K	1	
R25211	ERJ3GEYJ223	M.RESISTOR CH 1/16W 22K	1	
R25212	ERJ3GEYJ752	M.RESISTOR CH 1/16W 7.5K	1	
R25213	ERJ3GEYJ103	M.RESISTOR CH 1/16W 10K	1	
R25214	ERJ3GEYJ223	M.RESISTOR CH 1/16W 22K	1	
R25215	ERJ3GEY6332	M.RESISTOR CH 1/16W 3.3K	1	
R25216	ERJ3GEYF682	M.RESISTOR CH 1/16W 6.8K	1	
R25217.18	ERJ3GEYJ474	M.RESISTOR CH 1/16W 470K	2	
R25219.20	ERJ3GEYJ223	M.RESISTOR CH 1/16W 22K	2	
R25221.22	ERJ3GEYJ333	M.RESISTOR CH 1/16W 33K	2	
R25223	ERJ3GEYJ514	M.RESISTOR CH 1/16W 510K	1	
R25224	ERJ3GEYJ2R2	M.RESISTOR CH 1/16W 2.2	1	
R26201	ERJ3GEYJ103	M.RESISTOR CH 1/16W 10K	1	
R26202	ERJ3GEYJ473	M.RESISTOR CH 1/16W 47K	1	
R26203	ERJ3GEYJ222	M.RESISTOR CH 1/16W 2.2K	1	
R26204	ERJ3GEYJ473	M.RESISTOR CH 1/16W 47K	1	
R26205	ERJ3GEYJ222	M.RESISTOR CH 1/16W 2.2K	1	
R26206.07	ERJ3GEYJ473	M.RESISTOR CH 1/16W 47K	2	
R26301	ERJ3GEYJ473	M.RESISTOR CH 1/16W 47K	1	
R26311	ERJ3GEY472	M.RESISTOR CH 1/16W 4.7K	1	
R26312	ERJ3GEYJ103	M.RESISTOR CH 1/16W 10K	1	
R26603	ERJ3GEY473	M.RESISTOR CH 1/16W 47K	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R26604	ERJ3GEY6223	M.RESISTOR CH 1/16W 22K	1	
R26605	ERJ3GEYJ333	M.RESISTOR CH 1/16W 33K	1	
R26606	ERJ3GEYJ153	M.RESISTOR CH 1/16W 15K	1	
R26607	ERJ3GEYJ105	M.RESISTOR CH 1/16W 1M	1	
R26612.13	ERJ3GEYJ223	M.RESISTOR CH 1/16W 22K	2	
R26615	ERJ3GEYJ105	M.RESISTOR CH 1/16W 1M	1	
R26616.17	ERJ3RBD101	M.RESISTOR CH 1/16W 100	2	
R26618	ERJ3GEYJ105	M.RESISTOR CH 1/16W 1M	1	
R26619	ERJ3RBD101	M.RESISTOR CH 1/16W 100	1	
R27001	ERJ3GEY6102	M.RESISTOR CH 1/16W 1K	1	
R27002	ERJ3GEYJ473	M.RESISTOR CH 1/16W 47K	1	
R27003	ERJ3GEY6471	M.RESISTOR CH 1/16W 470	1	
R27004	ERJ3GEYJ473	M.RESISTOR CH 1/16W 47K	1	
R27051-55	ERJ3GEYJ330	M.RESISTOR CH 1/16W 33	5	
RA23001	EXB8V8473J	RESISTOR-RESISTOR	1	
RA23002	EXB4V473J	RESISTOR-RESISTOR	1	
RA23241	EXB4V473J	RESISTOR-RESISTOR	1	
RA23242.43	EXB8V8471J	RESISTOR-RESISTOR	2	
RA26201.02	EXB4V473J	RESISTOR-RESISTOR	2	
RA26203	EXB4V473J	RESISTOR-RESISTOR	1	
RA26204-06	EXB4V473J	RESISTOR-RESISTOR	3	
RA27001	EXB4V471J	RESISTOR-RESISTOR	1	
RA27002.03	EXB8V8473J	RESISTOR-RESISTOR	2	
VR23231.32	VRV02938202T	VARIABLE RESISTOR	2	
VR23233	VRV02938201T	VARIABLE RESISTOR	1	
X26601	VSX0943	CRYSTAL OSCILLATOR	1	
X26602	VSX0945	CRYSTAL OSCILLATOR	1	
X26603	VSX0944	CRYSTAL OSCILLATOR	1	
	VEP96521L	OPERATION C.B.A.		(RTL)
C26001	ECEA1HKA100	E.CAPACITOR 50V 10U	1	
C26002	ECUM1H103ZFN	C.CAPACITOR CH 50V 0.01U	1	
C26003	ECUM1H104ZFN	C.CAPACITOR CH 50V 0.1U	1	
C26004	ECEA1KA221	E.CAPACITOR 6.3V 220U	1	
C26005	ECUM1H104ZFN	C.CAPACITOR CH 50V 0.1U	1	
C26006	ECEA1KA470	E.CAPACITOR 6.3V 47U	1	
C26007	ECUM1H104ZFN	C.CAPACITOR CH 50V 0.1U	1	
C26008	ECEA1KA470	E.CAPACITOR 6.3V 47U	1	
D26002-05	MA165VT	DIODE	4	
D26006	LNJ201LPQJA	LED (RED)	1	
D26043	LNJ301MPUJAD	LED (GREEN)	1	
D26191	LNJ201LPQJA	LED (RED)	1	
DL26001	VSL0508	DISPLAY TUBE	1	
FP26001	VJS3611B007W	CONNECTOR (FEMALE) 7P	1	
FP26002	VJS3537A008G	CONNECTOR (FEMALE) 8P	1	
IC26001	MN1872423CB	IC	1	
IC26002	PNA4601M03VT	IR RECEIVER UNIT	1	
IC26003	PST7023	IC	1	
L26001	VLQ0188J101	COIL 100UH	1	
L26002	VLQ0188J221	COIL 220UH	1	
QR26001	UN2212	TRANSISTOR-RESISTOR	1	
QR26002.03	DTA123JK	TRANSISTOR	2	
QR26043	DTA123JK	TRANSISTOR	1	
R26002.03	ERJ6GEYG103	M.RESISTOR CH 1/10W 10K	2	
R26004	ERJ6GEYG221	M.RESISTOR CH 1/10W 220	1	
R26005	ERJ6GEYG331	M.RESISTOR CH 1/10W 330	1	
R26006-08	ERJ6GEYG221	M.RESISTOR CH 1/10W 220	3	
R26010	ERJ6GEYG221	M.RESISTOR CH 1/10W 220	1	
R26023-29	ERJ6GEYF473	M.RESISTOR CH 1/10W 47K	7	
R26030-37	ERJ6GEYG104	M.RESISTOR CH 1/10W 100K	8	
R26038.39	ERJ6GEYG221	M.RESISTOR CH 1/10W 220	2	
R26044-47	ERJ6GEYF473	M.RESISTOR CH 1/10W 47K	4	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
S26001-05	EVQ11G07K	SWITCH	5	
S26008-10	EVQ11G07K	SWITCH	3	
S26041	VSQ0769	SWITCH	1	
X26001	EF0EC8004A4	CERAMIC OSCILLATOR	1	
	MISCELLANEOUS			
	VJF1291	FIP HOLDER	1	
	VWJ1203	FLAT CARD CABLE	1	OPERATION - MAIN
▲	VEP91231D	POWER SUPPLY C.B.A.		(RTL)
▲ C21001	ECQU2A154MV	P.CAPACITOR 250V 0.15U	1	
▲ C21002.03	VCK0286B471	CERAMIC CAPACITOR	2	
▲ C21004	ECQU2A683MV	P.CAPACITOR 250V 0.068U	1	
▲ C21005	VCK0286E102	CERAMIC CAPACITOR	1	
C21011	ECEC2G6880	E.CAPACITOR 400V 68U	1	
C21012	ECKD2H103PU	C.CAPACITOR 500V 0.01U	1	
C21013	ECC23A121KGE	C.CAPACITOR 1KV 120	1	
C21021	VCEA1VJC470	E.CAPACITOR 35V 47U	1	
C21031	EQDB1H103JF	P.CAPACITOR 50V 0.01U	1	
C21042	ECKF1H102KB	C.CAPACITOR 50V 1000P	1	
C21043	VCEA1JC331	E.CAPACITOR 6.3V 330U	1	
C21101	EQDB1H104JF	P.CAPACITOR 50V 0.1U	1	
C21114	VCEA1AJC222	E.CAPACITOR 10V 2200U	1	
C21115	EQFR1E104ZF	C.CAPACITOR 25V 0.1U	1	
C21116	ECA1APXS221	E.CAPACITOR 10V 220U	1	
C21117	ECA1APX221	E.CAPACITOR 10V 220U	1	
C21118	EEUFA1A392	E.CAPACITOR 10V 3900U	1	
C21121	ECAQJ102	E.CAPACITOR 6.3V 1000U	1	
C21131	VCEA1EJH181	E.CAPACITOR 25V 180U	1	
C21133	VCEA1EJC330	E.CAPACITOR 25V 33U	1	
C21135	ECA1APX221	E.CAPACITOR 10V 220U	1	
C21136	VCEA1CJC470	E.CAPACITOR 16V 47U	1	
C21141	VCEA1EJH181	E.CAPACITOR 25V 180U	1	
C21143	VCEA1EJC330	E.CAPACITOR 25V 33U	1	
C21145	ECA1APX221	E.CAPACITOR 10V 220U	1	
C21146	VCEA1CJC470	E.CAPACITOR 16V 47U	1	
C21147	VCEA1EJC221	E.CAPACITOR 25V 220U	1	
C21151	EEUFA1E391	E.CAPACITOR 25V 390U	1	
C21153	VCEA1EJC221	E.CAPACITOR 25V 220U	1	
C21154	ECA1CM221	E.CAPACITOR 16V 220U	1	
C21161	VCEA1HJH820	E.CAPACITOR 50V 82U	1	
C21171	VCEA1AHJ331	E.CAPACITOR 10V 330U	1	
C21191	EQDB1H223JF	P.CAPACITOR 50V 0.022U	1	
C21192	ECA1APX331	E.CAPACITOR 10V 330U	1	
C21193	EQDB1H223JF	P.CAPACITOR 50V 0.022U	1	
C21194	ECA1APX471	E.CAPACITOR 10V 470U	1	
C21195	EQDB1H223JF	P.CAPACITOR 50V 0.022U	1	
C21196	ECA1APX331	E.CAPACITOR 10V 330U	1	
C21197	EQDB1H223JF	P.CAPACITOR 50V 0.022U	1	
C21198	ECA1APX471	E.CAPACITOR 10V 470U	1	
D21001	SIWBA60S	DIODE	1	
▲ D21002	ENC471D5A	RF CONVERTER	1	
D21011	AP01C	DIODE	1	
D21021	AU01Z	DIODE	1	
D21031	MA165VT	DIODE	1	
D21041	MA700	DIODE	1	
D21042	MA4200H	DIODE	1	
D21101	MA4051MVT	DIODE	1	
D21111	MA7055	DIODE	1	
D21121	11ES1	DIODE	1	
D21131	11EQS10	DIODE	1	
D21135	AK04	IC	1	
D21141	11EQS10	DIODE	1	
D21151.52	11EQS10	DIODE	2	
D21161	AU01Z	DIODE	1	
D21162	MA4030M	DIODE	1	
D21171	AK04	IC	1	
D21191	MA165VT	DIODE	1	
D21195	MA165VT	DIODE	1	
▲ F21001	XBA2C16TH15	FUSE	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
FP21103	VJS3537A011G	CONNECTOR (FEMALE) 11P	1	
▲ IC21011	STRM6559LF	IC	1	
IC21121	PQ3RD13	IC	1	
IC21135	PQ09RD1X	IC	1	
IC21151	PQ09RD1X	IC	1	
K21191	ERDS2TY0	C.RESISTOR 1/4W 0	1	
K21195	ERDS2TY0	C.RESISTOR 1/4W 0	1	
▲ L21001.02	ELF15N005A	LINE FILTER	2	
L21111	VLQ0655K100	COIL 10UH	1	
L21112	ELELN100KA	INDUCTOR 10UH	1	
L21131	VLQEL05S330K	COIL 33UH	1	
L21141	VLQEL05S330K	COIL 33UH	1	
L21151	VLQ0655K220	COIL 22UH	1	
LB21011.12	VLP0083	COIL	2	
LB21014	VLP0056	COIL	1	
▲ P21001	VJS3166	AC INLET	1	
P21101	VJP3233A008	CONNECTOR (MALE) 8P	1	
P21102	VJP3917A016G	CONNECTOR (MALE) 16P	1	
▲ PR21121	VSF0015A10	IC PROTECTOR	1	
▲ PR21141	VSF0015A10	IC PROTECTOR	1	
▲ PR21171	VSF0015A10	IC PROTECTOR	1	
Q21031	PS2561L1V1M	TRANSISTOR-PHOTO COUPLER	1	
Q21101.02	2SD1991A-R	TRANSISTOR	2	
Q21111	2SJ525	TRANSISTOR	1	
Q21145	2SB1321AR	TRANSISTOR	1	
Q21146	2SB1320A-R	TRANSISTOR	1	
Q21191	2SK170V	TRANSISTOR	1	
Q21195	2SJ74V	TRANSISTOR	1	
QR21111	UN4213	TRANSISTOR-RESISTOR	1	
R21002	ERC12AGM334	S.RESISTOR 1/2W 330K	1	
R21011	ERG1SJ683	M.RESISTOR 1W 68K	1	
R21012	ERX1SJR82	M.RESISTOR 1W 0.82	1	
R21013.14	ERDS2FJ471	C.RESISTOR 1/4W 470	2	
R21021.22	ERDS2FJ224	C.RESISTOR 1/4W 220K	2	
R21023	ERG12SJ100	M.RESISTOR 1/2W 10	1	
R21031	ERDS2FJ182	C.RESISTOR 1/4W 1.8K	1	
R21041	ERDS2FJ152	C.RESISTOR 1/4W 1.5K	1	
R21042	ERDS2FJ101	C.RESISTOR 1/4W 100	1	
R21043	ERDS2FJ224	C.RESISTOR 1/4W 220K	1	
R21044	ERDS2FJ103	C.RESISTOR 1/4W 10K	1	
R21045	ERDS1TJ385	C.RESISTOR 1/2W 3.9M	1	
R21046	ERDS1TJ475	C.RESISTOR 1/2W 4.7M	1	
R21101	ERDS2TJ101	C.RESISTOR 1/4W 100	1	
R21103	ERDS2TJ331	C.RESISTOR 1/4W 330	1	
R21104	ERDS2TJ391	C.RESISTOR 1/4W 390	1	
R21105	ERDS2TJ151	C.RESISTOR 1/4W 150	1	
R21106	ERDS2TJ101	C.RESISTOR 1/4W 100	1	
R21107	ERDS2TJ221	C.RESISTOR 1/4W 220	1	
R21108	ERDS2TJ241	C.RESISTOR 1/4W 240	1	
R21111	ERDS2TJ103	C.RESISTOR 1/4W 10K	1	
R21112	ERDS2TJ105	C.RESISTOR 1/4W 1M	1	
R21135	EROS2CHF8201	M.RESISTOR 1/4W 8.2K	1	
R21136	EROS2CHF1501	M.RESISTOR 1/4W 1.5K	1	
R21145	EROS2CHF8201	M.RESISTOR 1/4W 8.2K	1	
R21146	ERDS2TJ331	C.RESISTOR 1/4W 330	1	
R21161	ERDS2TJ104	C.RESISTOR 1/4W 100K	1	
R21181	ERDS2TJ101	C.RESISTOR 1/4W 100	1	
R21191	ERDS2TJ561	C.RESISTOR 1/4W 560	1	
R21193	ERDS2TJ105	C.RESISTOR 1/4W 1M	1	
R21195	ERDS2TJ561	C.RESISTOR 1/4W 560	1	
R21197	ERDS2TJ105	C.RESISTOR 1/4W 1M	1	
▲ T21011	ETS29AD4H6AC	TRANSFORMER	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
Δ ZA21001.02	EYF52BC	FUSE HOLDER	2	
ZA21031	VMC1359	EARTH SPRING	1	
ZA21111-14	VJR0978	EARTH ANGLE	4	
	MISCELLANEOUS			
	VJF0304	CLAMPER	2	
■	VEP94310A	HEADPHONE JACK C.B.A.	(RTL)	
C24551.52	ECUM1H104ZF	C.CAPACITOR CH 50V 0.1U	2	
C24553.54	ECUM1H103ZF	C.CAPACITOR CH 50V 0.01U	2	
C24555.56	ECUM1H104ZF	C.CAPACITOR CH 50V 0.1U	2	
IC24551	M5218AFP	IC	1	
J24551	VJJ0583	HEADPHONE JACK	1	
L24551-53	ELESE101KA	INDUCTOR 100UH	3	
R24551.52	ERJ6GEYJ470	M.RESISTOR CH 1/8W 47	2	
R24553	ERJ6GEYG153	M.RESISTOR CH 1/10W 15K	1	
R24554	ERJ6GEYF123	M.RESISTOR CH 1/10W 12K	1	
R24555	ERJ6GEYG153	M.RESISTOR CH 1/10W 15K	1	
R24556	ERJ6GEYF123	M.RESISTOR CH 1/10W 12K	1	
R24557.58	ERJ6GEYG102	M.RESISTOR CH 1/10W 1K	2	
	MISCELLANEOUS			
	VMA9830	TERMINAL ANGLE	1	
■	VEP93304N	AV JACK C.B.A.	(RTL)	
C23501	ECEA1CKA101	E.CAPACITOR 16V 100U	1	
C23502.03	ECUM1H103ZF	C.CAPACITOR CH 50V 0.01U	2	
C23504	ECUM1H330JCN	C.CAPACITOR CH 50V 33P	1	
C23505	ECUM1H103ZF	C.CAPACITOR CH 50V 0.01U	1	
C23506	ECEA1CKA330	E.CAPACITOR 16V 33U	1	
C23507	ECEA1HKA010	E.CAPACITOR 50V 1U	1	
C23508	ECEA1CKA101	E.CAPACITOR 16V 100U	1	
C23509	ECUM1H103ZF	C.CAPACITOR CH 50V 0.01U	1	
C23510	ECEA1CKA101	E.CAPACITOR 16V 100U	1	
C23511	ECUM1H150JCN	C.CAPACITOR CH 50V 15P	1	
C23512	ECEA1HKA2R2	E.CAPACITOR 50V 2.2U	1	
C23513	ECUM1H103KBN	C.CAPACITOR CH 50V 0.01U	1	
C23530	ECQAUM471	E.CAPACITOR 6.3V 470U	1	
C23531	ECUM1H271JCN	C.CAPACITOR CH 50V 270P	1	
C23532	ECUM1H820JCN	C.CAPACITOR CH 50V 82P	1	
C23533	ECUM1H103ZF	C.CAPACITOR CH 50V 0.01U	1	
C23550	ECEA1CKA101	E.CAPACITOR 16V 100U	1	
C23551	ECUM1H103ZF	C.CAPACITOR CH 50V 0.01U	1	
C23552	ECEA1CKA470	E.CAPACITOR 16V 47U	1	
C23553	ECUM1H103ZF	C.CAPACITOR CH 50V 0.01U	1	
C23555	ECUM1H103ZF	C.CAPACITOR CH 50V 0.01U	1	
C23556	ECUM1H103KBN	C.CAPACITOR CH 50V 0.01U	1	
C23557	ECEA1KA221	E.CAPACITOR 10V 220U	1	
C23558.59	ECEA1CKA220	E.CAPACITOR 16V 22U	2	
C23560	ECUM1H103ZF	C.CAPACITOR CH 50V 0.01U	1	
C23561.62	ECQAUM102	E.CAPACITOR 6.3V 1000U	2	
C23564	ECUM1H103KBN	C.CAPACITOR CH 50V 0.01U	1	
C23601	ECUM1H103KBN	C.CAPACITOR CH 50V 0.01U	1	
C23602	ECUM1H103ZF	C.CAPACITOR CH 50V 0.01U	1	
C23651	ECUM1H103ZF	C.CAPACITOR CH 50V 0.01U	1	
C23652	ECUM1H150JCN	C.CAPACITOR CH 50V 15P	1	
C23651	ECUM1H103ZF	C.CAPACITOR CH 50V 0.01U	1	
C23662	ECUM1H150JCN	C.CAPACITOR CH 50V 15P	1	
C23671	ECUM1H103ZF	C.CAPACITOR CH 50V 0.01U	1	
C23672	ECUM1H150JCN	C.CAPACITOR CH 50V 15P	1	
C24400	ECEA1CKA101	E.CAPACITOR 16V 100U	1	
C24401-08	ECUM1H102JCN	C.CAPACITOR CH 50V 1000P	8	
C24409-14	ECUM1H104ZF	C.CAPACITOR CH 50V 0.1U	6	
C24450	ECEA1HKA4R7	E.CAPACITOR 50V 4.7U	1	
C24451	ECUM1H104ZF	C.CAPACITOR CH 50V 0.1U	1	
C24452	ECEA1HKA4R7	E.CAPACITOR 50V 4.7U	1	
C24453	ECUM1H104ZF	C.CAPACITOR CH 50V 0.1U	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C24454	ECUM1H271JCN	C.CAPACITOR CH 50V 270P	1	
C24456.57	ECUM1H104ZF	C.CAPACITOR CH 50V 0.1U	2	
C24458	ECEA1CKA101	E.CAPACITOR 16V 100U	1	
C24501	ECEA1CKA100	E.CAPACITOR 16V 10U	1	
C24502	ECEA1CKA101	E.CAPACITOR 16V 100U	1	
D23501	MA742	DIODE	1	
D24400	MA3047M	DIODE	1	
D24401	MA152A	DIODE	1	
D24402	MA152WA	DIODE	1	
D24403.04	MA152A	DIODE	2	
FL23501	ELB4H079A	FILTER	1	
FL23601	ELB4K164A	FILTER	1	
FL23650	ELB4H079A	FILTER	1	
FL23660	ELB4L181A	FILTER	1	
FP24301	VJS3623A020W	CONNECTOR (FEMALE) 20P	1	
G24301-03	VJR0978	EARTH ANGLE	3	
IC23531	AN3581S	IC	1	
IC24450	TC7W34F	IC	1	
IC24452	TOTX178	IC	1	
IC24501	M5218AFP	IC	1	
J23551	VJJ0561	Y/C CONNECTOR	1	
J24301	VJJ0594	PIN JACK (6P)	1	
J24302	VJJ0592	PIN JACK (4P)	1	
K24301	ERJ6GEYOR00	M.RESISTOR CH 1/10W 0	1	
L23501.02	VLQEL05S220J	COIL 22UH	2	
L23550.51	VLQEL05S220J	COIL 22UH	2	
L24400	VLQEL05S100J	COIL 10UH	1	
L24402.03	VLQEL05S100J	COIL 10UH	2	
L24404	EELN100KA	INDUCTOR 10UH	1	
L24405	VLQEL05S100J	COIL 10UH	1	
L24450	ELJNDR10JF	COIL 0.1UH	1	
L24451	VLQEL05S220J	COIL 22UH	1	
LB23552-55	VLP0145	COIL	4	
LB24301-08	VLP0145	COIL	8	
P24301	VJS3623A022W	CONNECTOR (FEMALE) 22P	1	
P24302	VJS3917A016W	CONNECTOR (FEMALE) 16P	1	
P24450	VJP1232T	CONNECTOR (MALE) 5P	1	
P24451	VJS2650A003Z	CONNECTOR (FEMALE) 3P	1	
Q23501	2SA1022-B	TRANSISTOR	1	
Q23503	2SC2404-D	TRANSISTOR	1	
Q23504	2SC2295-B	TRANSISTOR	1	
Q23530	2SC2295-B	TRANSISTOR	1	
Q23531	2SA1022-B	TRANSISTOR	1	
Q23534	2SA1022-B	TRANSISTOR	1	
Q23601	2SD601A	TRANSISTOR	1	
Q23650	2SD601A	TRANSISTOR	1	
Q23660	2SD601A	TRANSISTOR	1	
Q23670	2SD601A	TRANSISTOR	1	
Q24405-12	2SD1328-R	TRANSISTOR	8	
Q24501.02	2SD601A	TRANSISTOR	2	
QR23501	UN2211	TRANSISTOR-RESISTOR	1	
QR23531.32	UN2211	TRANSISTOR-RESISTOR	2	
QR24400	UN2211	TRANSISTOR-RESISTOR	1	
QR24401	UN2115	TRANSISTOR-RESISTOR	1	
QR24402	UN2211	TRANSISTOR-RESISTOR	1	
QR24403.04	UN2111	TRANSISTOR-RESISTOR	2	
R23501	ERJ6GEYF561	M.RESISTOR CH 1/10W 560	1	
R23502	ERJ6GEYF101	M.RESISTOR CH 1/10W 100	1	
R23503	ERJ6GEYF102	M.RESISTOR CH 1/10W 1K	1	
R23504	ERJ6GEYF471	M.RESISTOR CH 1/10W 470	1	
R23507	ERJ6ENF1102	M.RESISTOR CH 1/10W 11K	1	
R23508	ERJ6ENF8201	M.RESISTOR CH 1/10W 8.2K	1	

